




Basic Call Operations

21. **End All Calls:** Terminates all calls, both on line and on hold.



Multiparty

This option allows a conference call up to 7 parties. Please check with your network operator for the availability of multiparty conference calls.

! Before activating a multiparty conference call, make sure that you have established two on-line calls (1 active, 1 on hold).



1. Press  (Menu) to enter into the In-call menu.
2. Scroll to “Build Multiparty Call” with  and press  (Select) to start a multiparty conference call.

⌘ To add a new participant to multiparty conference call:




1. Press  (Menu) and scroll to “Hold Multiparty Calls”.
- Press  (Select) to hold the existing

Basic Call Operations




conference call and establish a new call connection with a new incoming call.

2. Press  (Menu) and scroll to “Build Multiparty Call”.
3. Press  (Select) to start the conference call with the online parties.


☞ To release a participant from the conference call:

1. Press  (Menu) and scroll to “End One Call In Party”.
2. Press  (Select) and scroll to the desired party.
3. Press  (OK) to release the selected participant.

☞ To have a private conversation with one of the participants:



1. Press  (Menu) and scroll to “Filter One Call In Party”.
2. Press  (Select) and scroll to the desired party.
3. Press  (OK) to start your private conversation with the selected participant.

The existing multiparty conference call will then be automatically placed on hold.

☞ To end an active conference call press :


Other operations

Adjusting the earpiece volume

You can adjust the earpiece volume when calling using  (louder) or  (lower) to increase or decrease the earpiece volume.

Input text


The 8055T model provides a number of input methods for you to organize your Phone Book or write messages.

By pressing , users may switch between the different input methods.



Predictive Text

Predictive Text input is a much easier way to input a text message in English. For each letter to be entered, you only need to press the corresponding alphanumeric key once. In Predictive Text input, the alphanumeric keys enter words with a single key press instead of multiple key presses. When the first (or second) element is entered, the display shows the most probable word in the suggestion area. The word you select from the suggestion area will move to the text area.

Using Predictive Text input








1. Switch to Predictive Text input by pressing “” repetitively until the desired input style appears.
2. For example, to input “Telephone”, key in the following:
















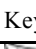

3. Press the navigation key to select the desired word and press  (OK).
4. Press  repetitively to input a punctuation mark that you need.

Basic Call Operations

The functions of keys








KEY	The functions of keys
Function key 	This function according to the prompt on the screen, for example: "menu"? select "OK". You can use menu when calling.
Function key 	This function according to the prompt on the screen, for example: " Phone book " ? " Clear" ? " Return" . You can refuse the incoming call by using this key.
Function key 	In Idle mode., press this key to use camera
Function key 	Press this key to save the text when editing. Press the key idle mode to use WAP.
Direction key 	You can scroll the listing to select the options in main menu and contents. When editing., this key can be used to move the cursor? The key also can be the hot key in idle mode.
Send key 	Press this key, you can browse missed calls and received calls. Press  again, you can making call. You also can answer incoming call by press this key.

<p>Power key</p> 	<p>Press this key for 3 minutes to open when power off, When in idle mode, press the key for 3 minutes to shut down the phone. Press the key can back to idle mode. You can also hang up the call by using it.</p>
<p>Up key</p> 	<p>Short press : take photo in camera mode; long press: get into camera mode.</p>
<p>mid key</p> 	<p>Increase volume by pressing it.</p>
<p>Down key</p> 	<p>Decrease volume by pressing it.</p>

Key	ABC	abc
	blank 1 () &? \$ ¥ _	
	ABC 2 A Ä Å Æ Ç	abc 2 ä å æ ç
	DEF 3 É Ê Ë ? ?	def 3 é ê ë ? f
	GHI 4 G I	ghi 4 g i
	JKL 5 ?	jkl 5 ?
	MNO 6 Ñ Ò Ó Ô	mno 6 ñ ò ó ô
	PQRS 7 Þ ? T S	pqrs 7 þ ? ? S
	TUV 8 Ü Û	tuv 8 ü ù
	WXYZ 9 0 ? ?	wxyz 9 0 ? ?
	0" ' ? ! , ; : ' i ù	
	* + - / % # = < > @ \$	
	Switch input styles	

Basic Call Operations

Attentions:

- ⌘ In idle mode you can use number key or “+”(long press ) when using international number.. ? pause code “w”&”p”(long press ) .you can not input letters and other character in idle mode.
- ⌘ Input letters followed by the prompt of keypad , examples : input “a” press  one time, input “B” press  two times , others are also follow this way.
- ⌘ if the next letter is on the same key please wait one second the input the letters. You can also use 
- ⌘ if you have a mistake when editing ,please press  to delete the letter left to the cursor. You can also delete all the text by long pressing .

CAMERA

Camera

With the Camera you can take picture anytime and anywhere. You also can store the picture in the Image application and send photos to your friends in MMS . The camera produces JPEG pictures.

CAMERA

Photo Album

Photo Size

☐ Large

☐ Medium

Photo Quality

☐ High

☐ Normal

☐ Low

Photo Effect

☐ Normal

☐ Brown

Self Timer

☐ Disabled

☐ 10 seconds

☐ 15 seconds

☐ 30 seconds

Night Mode

☐ Disabled

☐ Enabled

Profiles

☐ Mode (60Hz)

☐ Mode (50Hz)

Settings

☐ Photo Flash

☐ Capture Sound

☐ Auto Off

Photo Album

30 pictures at most can be stored into it, where you can review , rename or delete them etc.

Photo Size

You can choose the Photo Size by the settings . the options of Photo Size are large and medium. Large photo size is 640×480 pixel format and medium photo size is 160×120 pixel format.

Photo Quality

You can choose the Photo Quality by the settings. The better Photo Quality , the more memory the image consumes. The options of Photo Quality are High, Normal and Low.

Photo Effect

The option allows you to set the Photo Effect to Normal or Brown..

Self Timer

The option allow you to active or deactivate taking picture automatically. You can active it by setting the timer to 10s,15s,30s

Night Mode

The option allows you to deactivate or active the night mode.

Profiles

You can set the mode of flash light to 60Hz or 50Hz.