




Photos 39

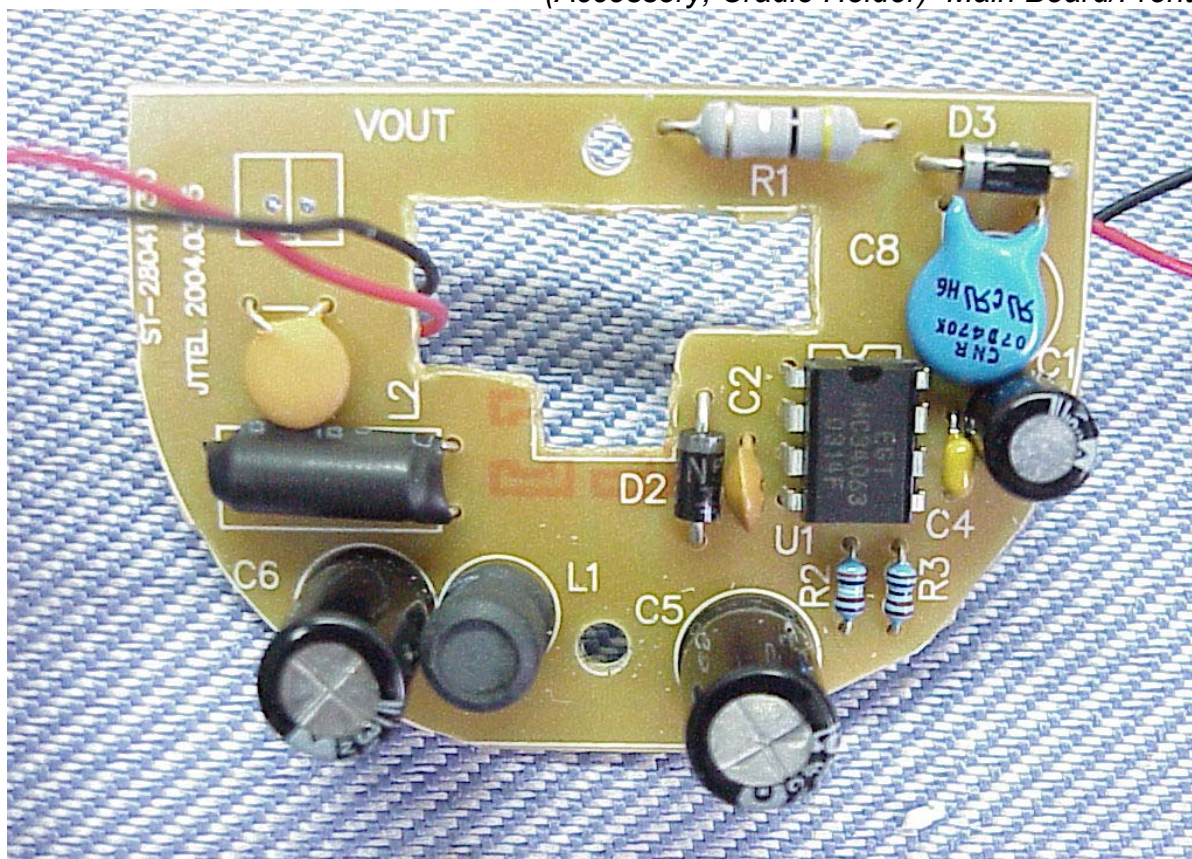


Photos 40

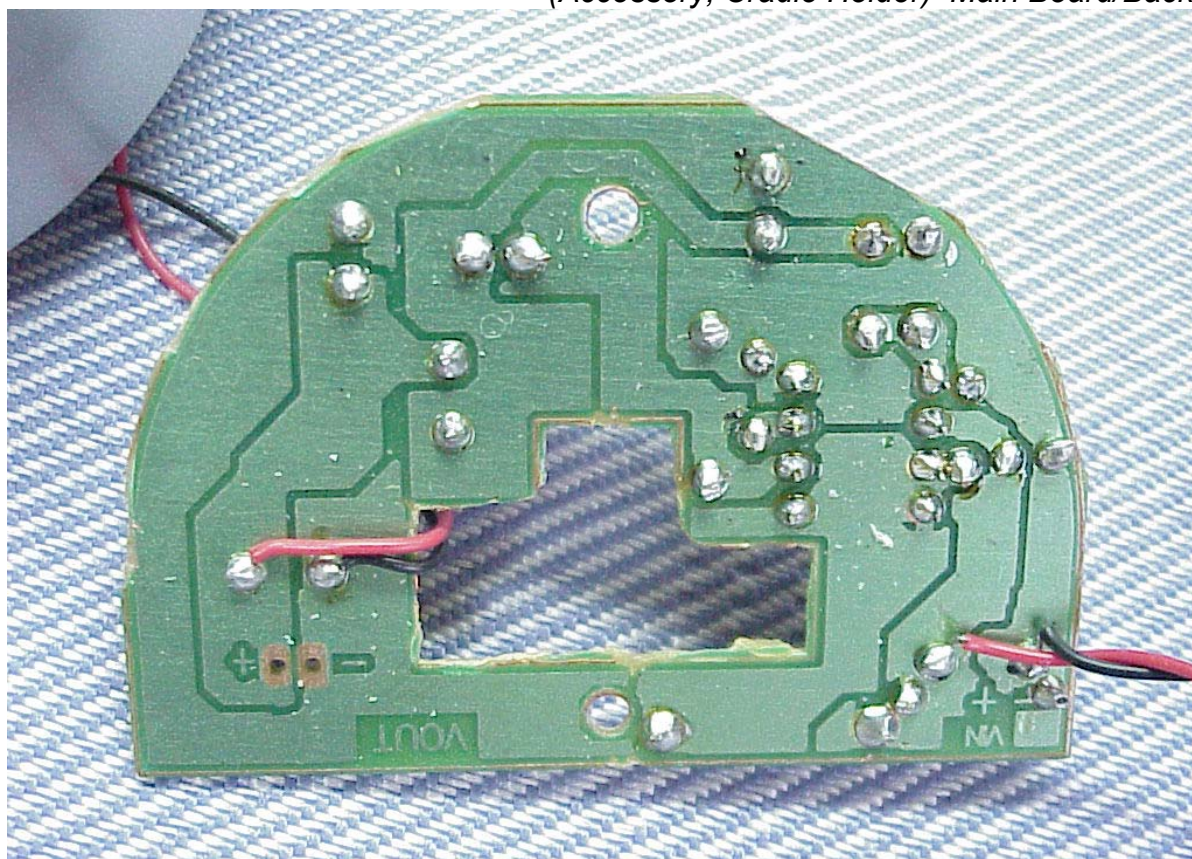


Photos 41
(Accessory, Power Bank) Remove Case Cover, Frame of Internal

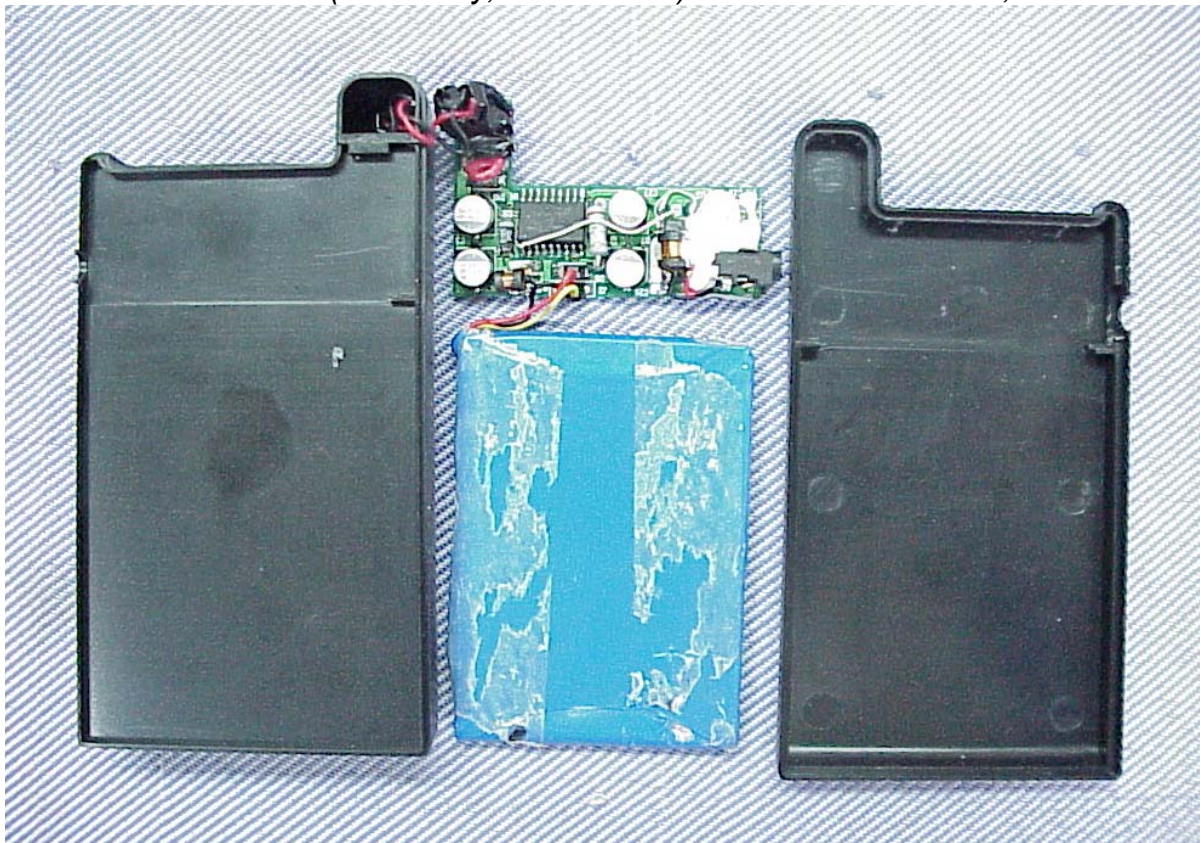


Photos 42
(Accessory, Power Bank) Main Board/Front Side

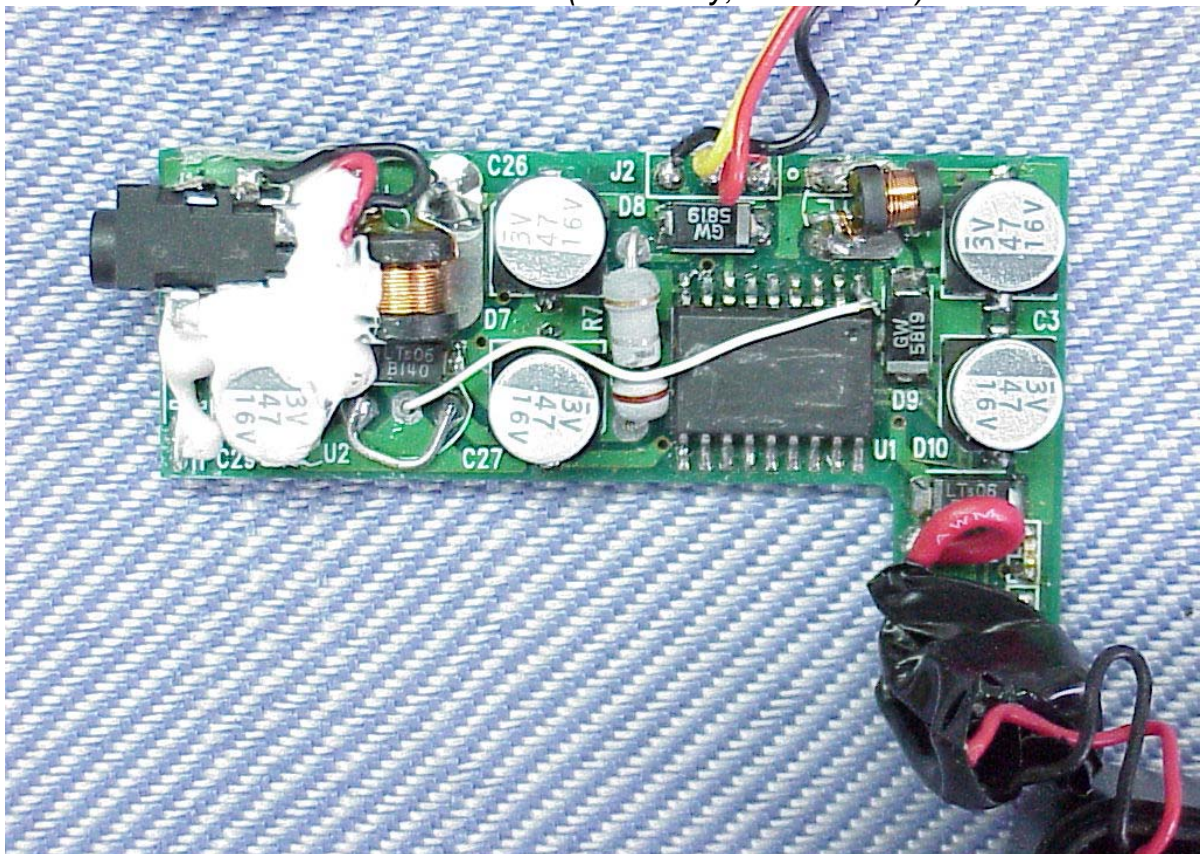


Photos 43
(Accessory, Power Bank) Main Board/Back Side

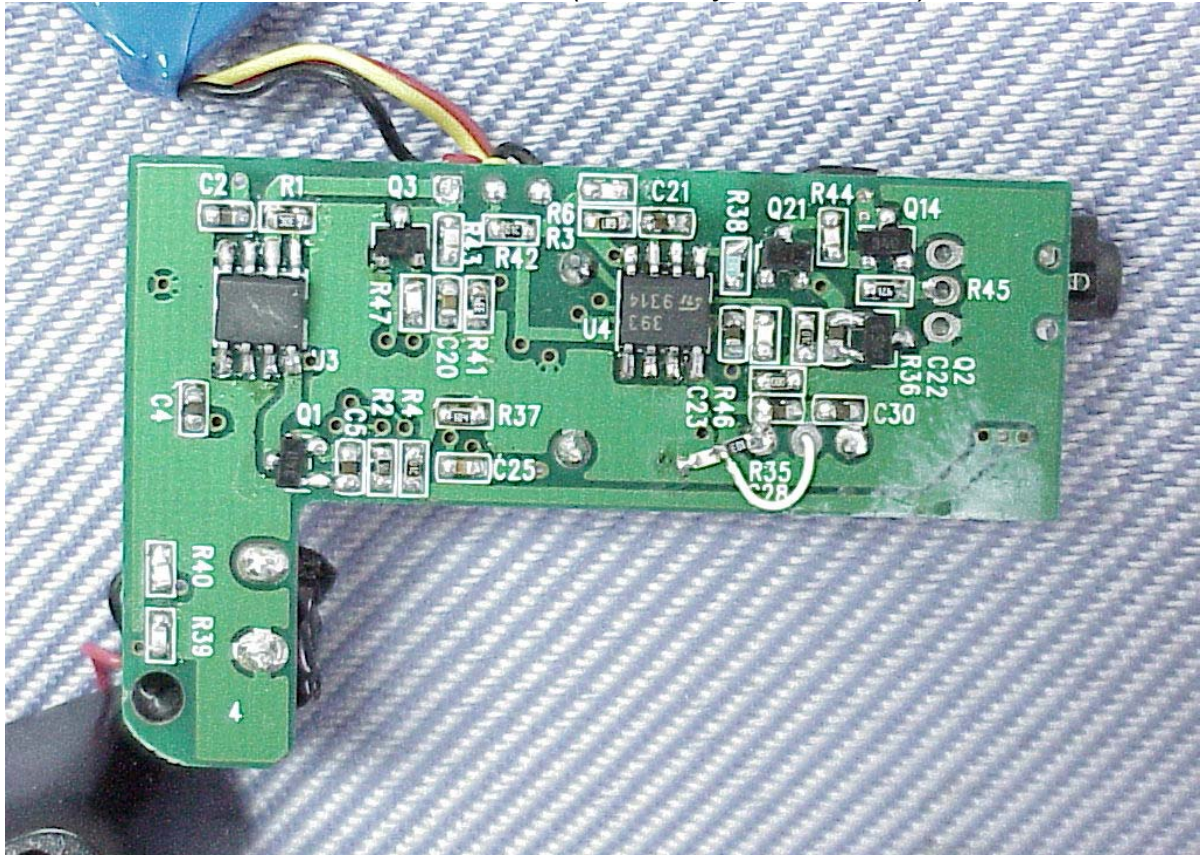


Photos 44
(Accessory, Saver Charger) Remove Case Cover, Frame of Internal

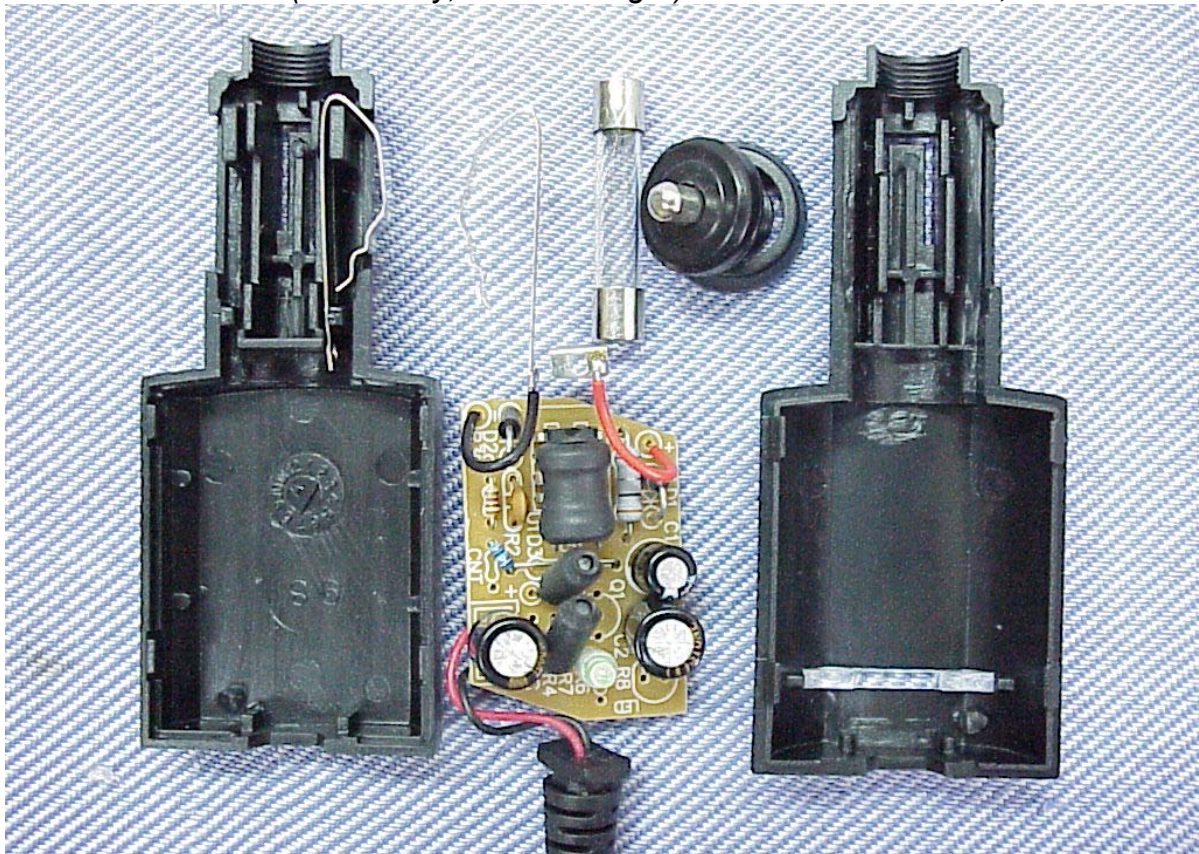


Photos 45
(Accessory, Saver Charger) Main Board/Front Side

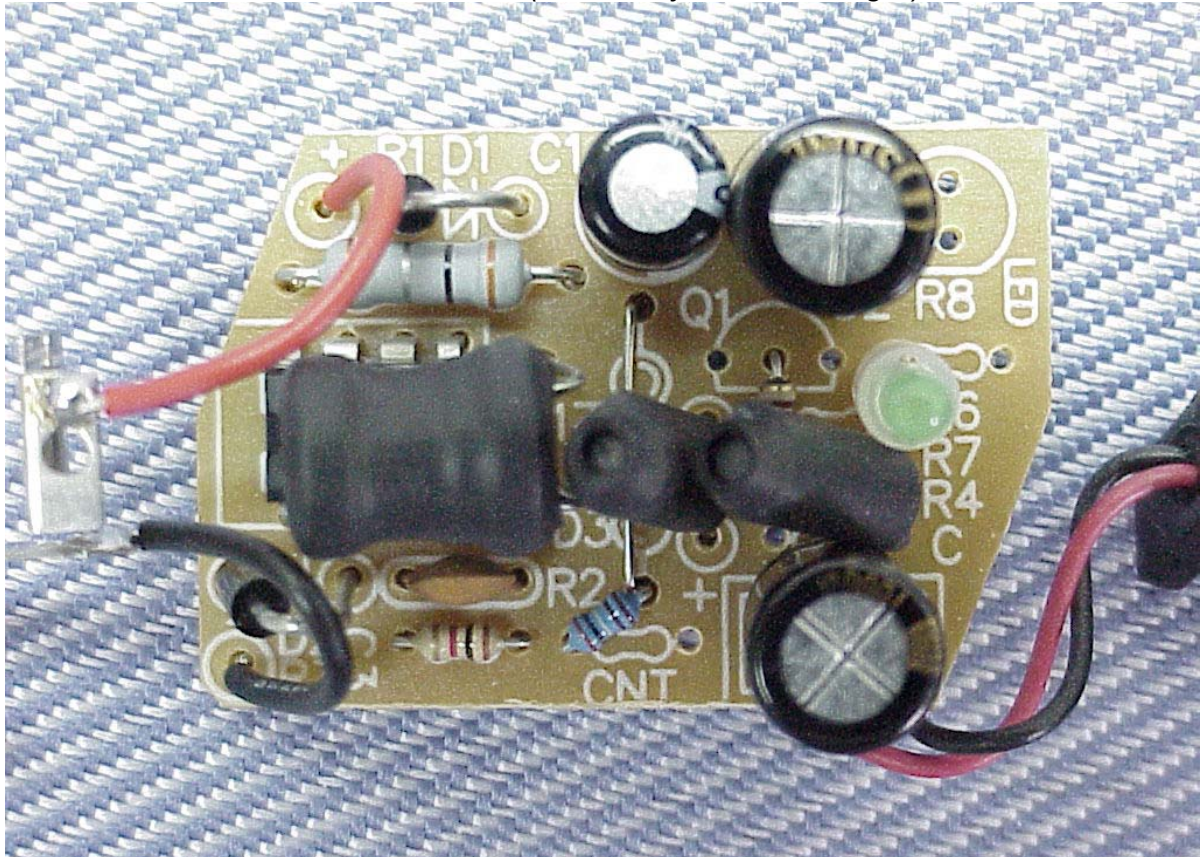


Photos 46
(Accessory, Saver Charger) Main Board/Back Side

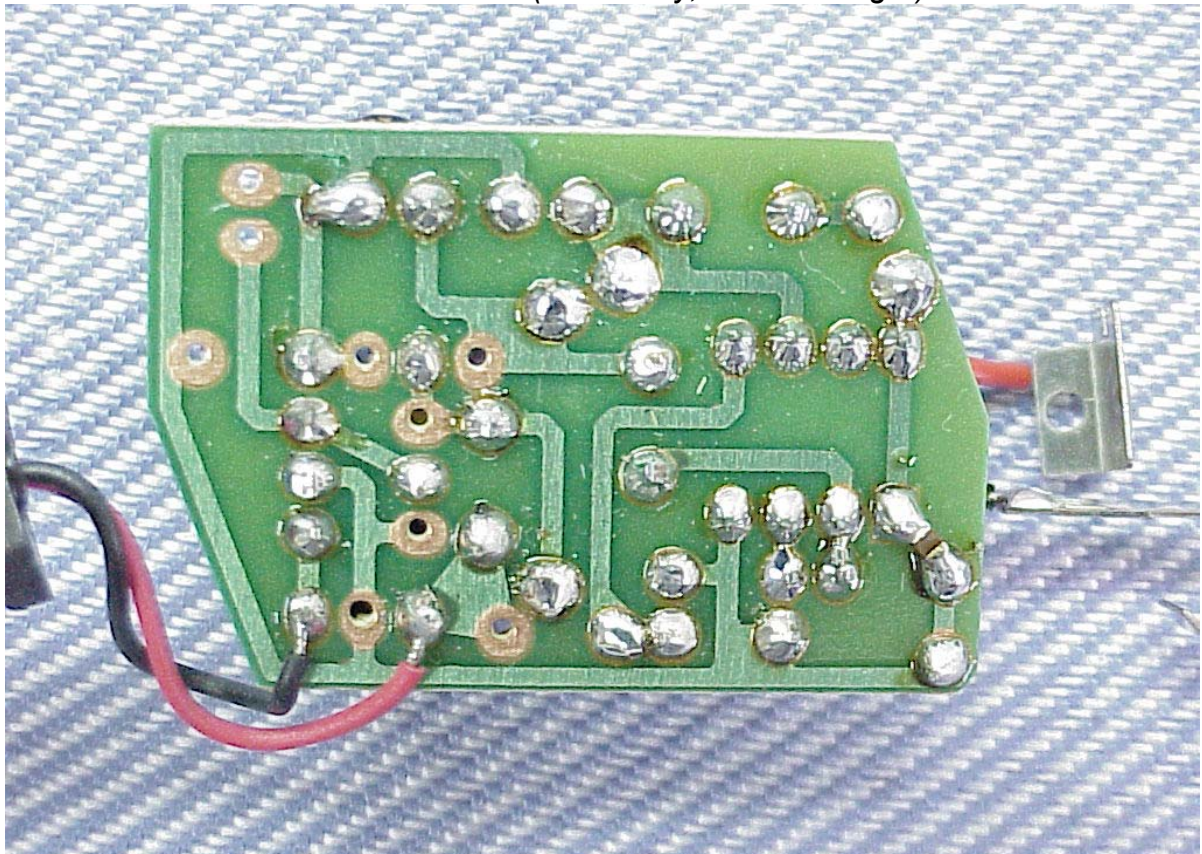


Photos 47
(Accessory, Travel Charger) Remove Case Cover, Frame of Internal

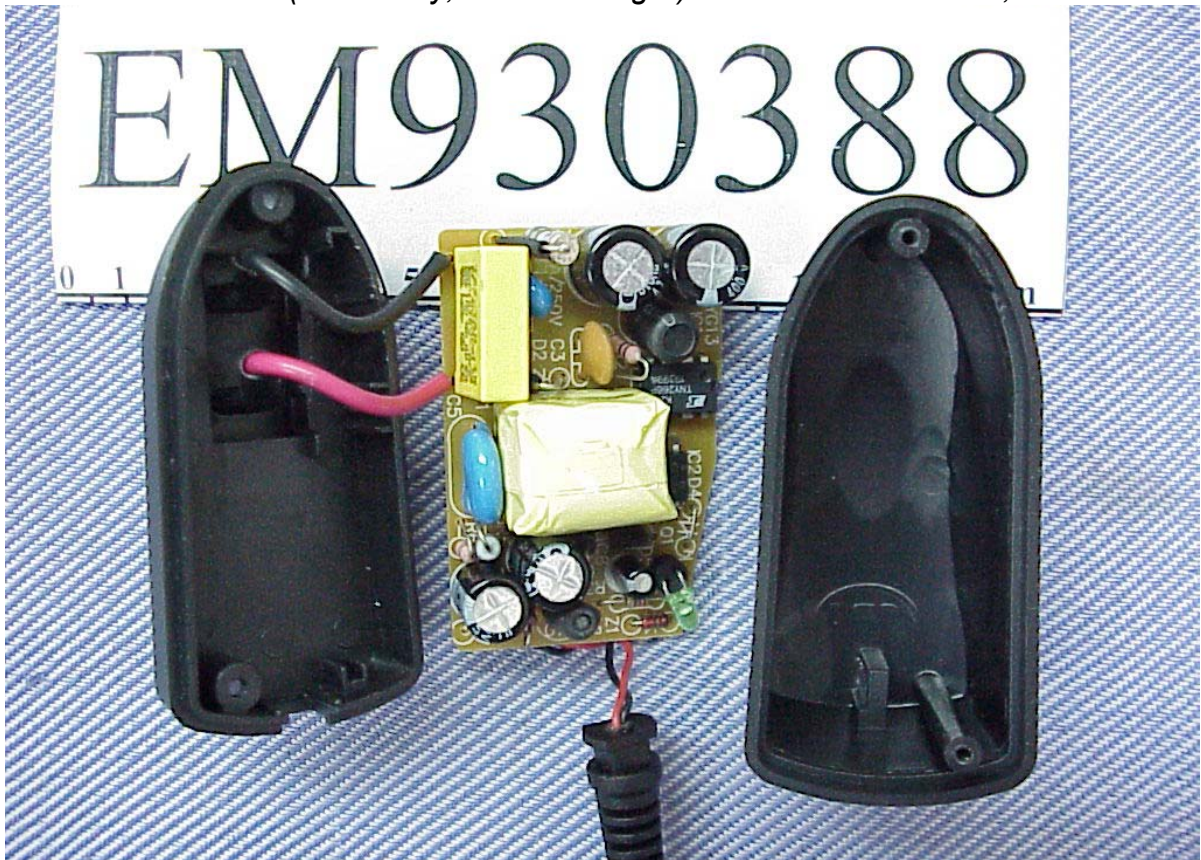

Photos 48
(Accessory, Travel Charger) Main Board/Front Side

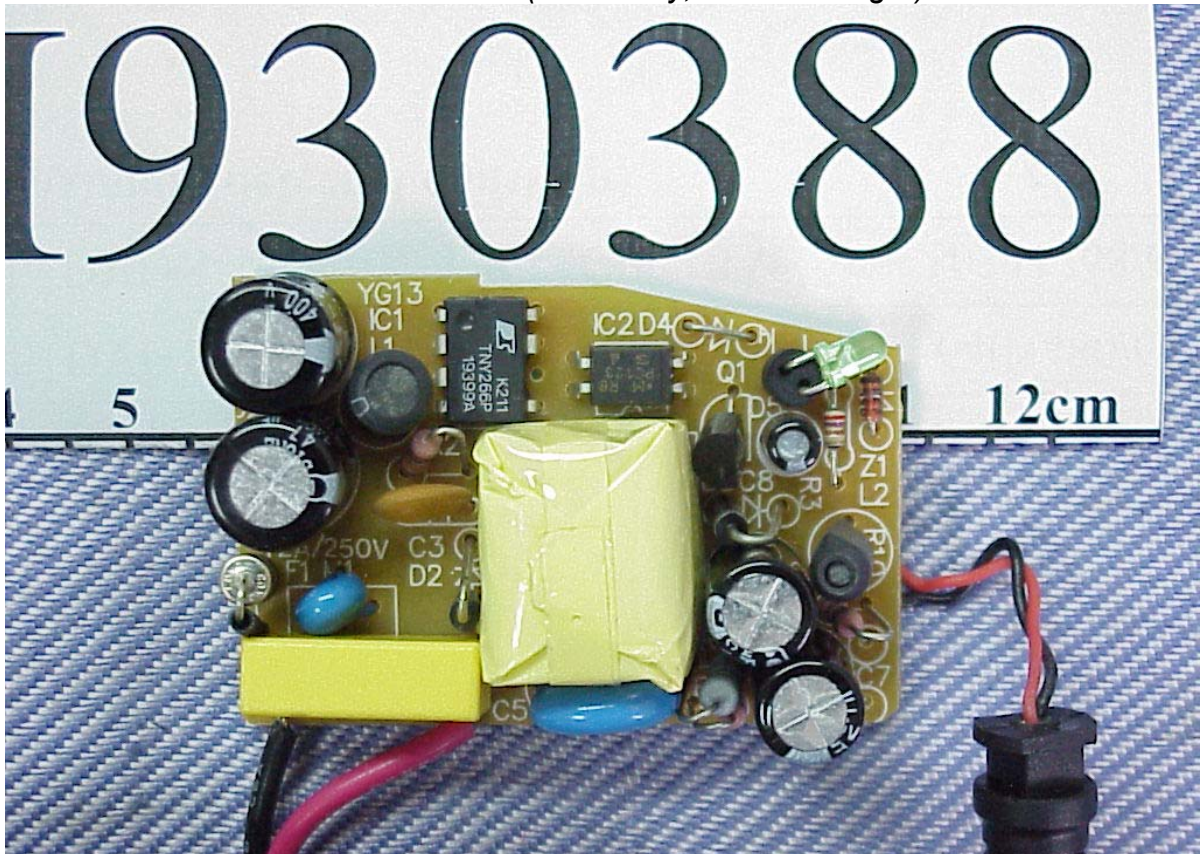


Photos 49
(Accessory, Travel Charger) Main Board/Back Side

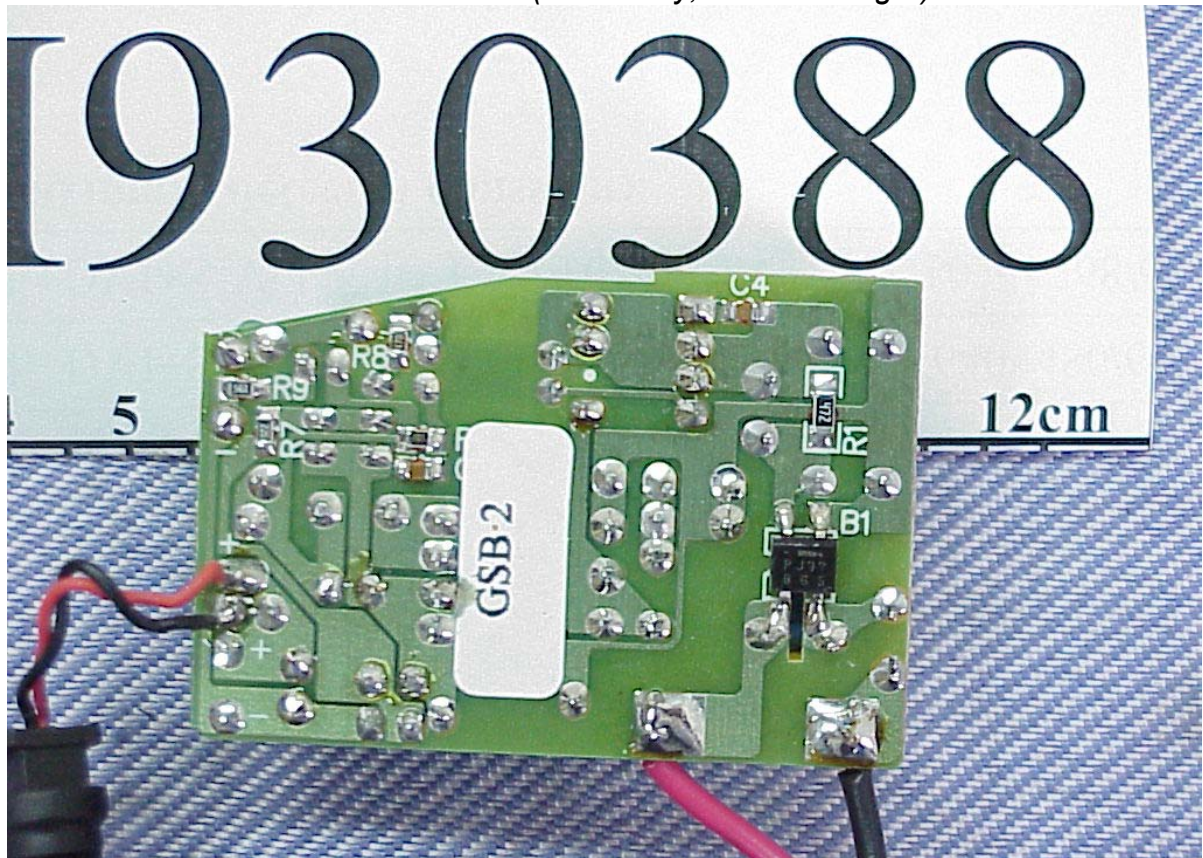


Photos 50
(Accessory, Desktop Speaker) Remove Bottom Cover, Internal View




Photos 51
(Accessory, Desktop Speaker) Remove Main Board, Frame of Internal

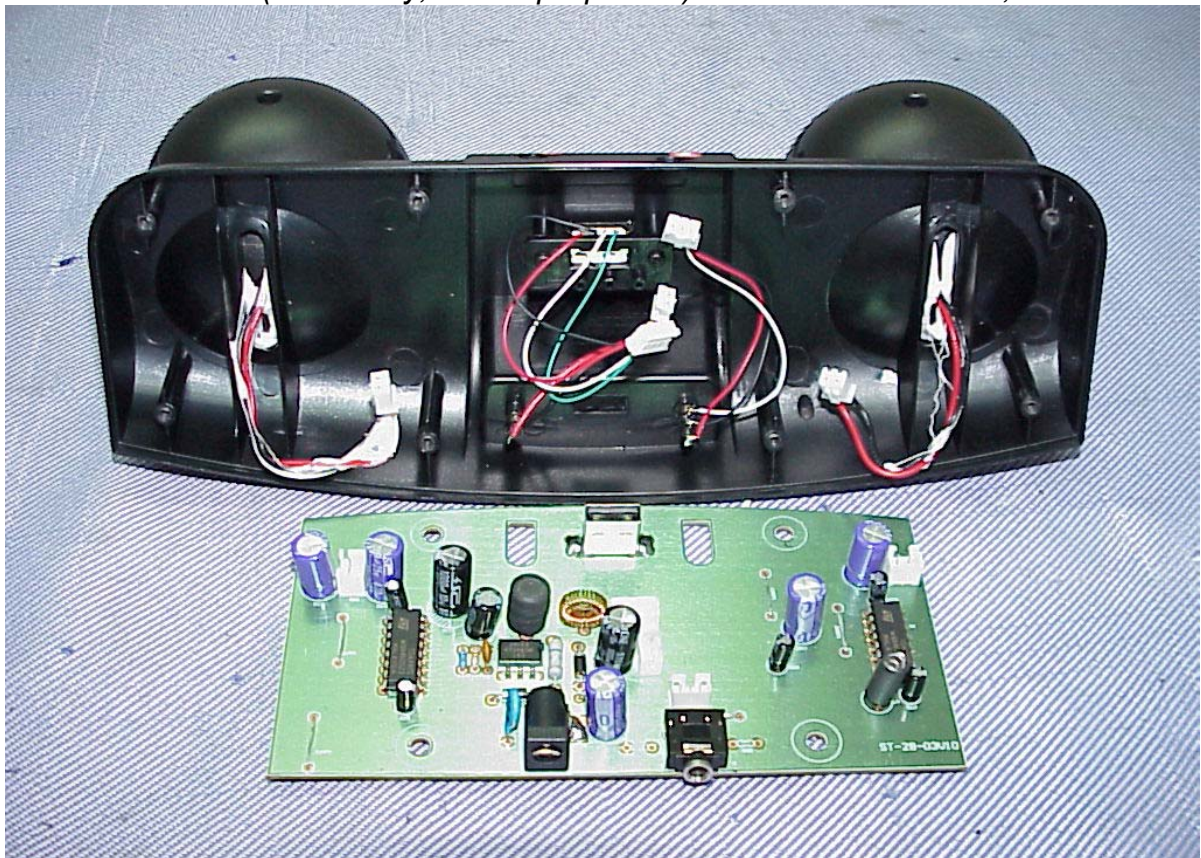

Photos 52
(Accessory, Desktop Speaker) Main Board/Front Side

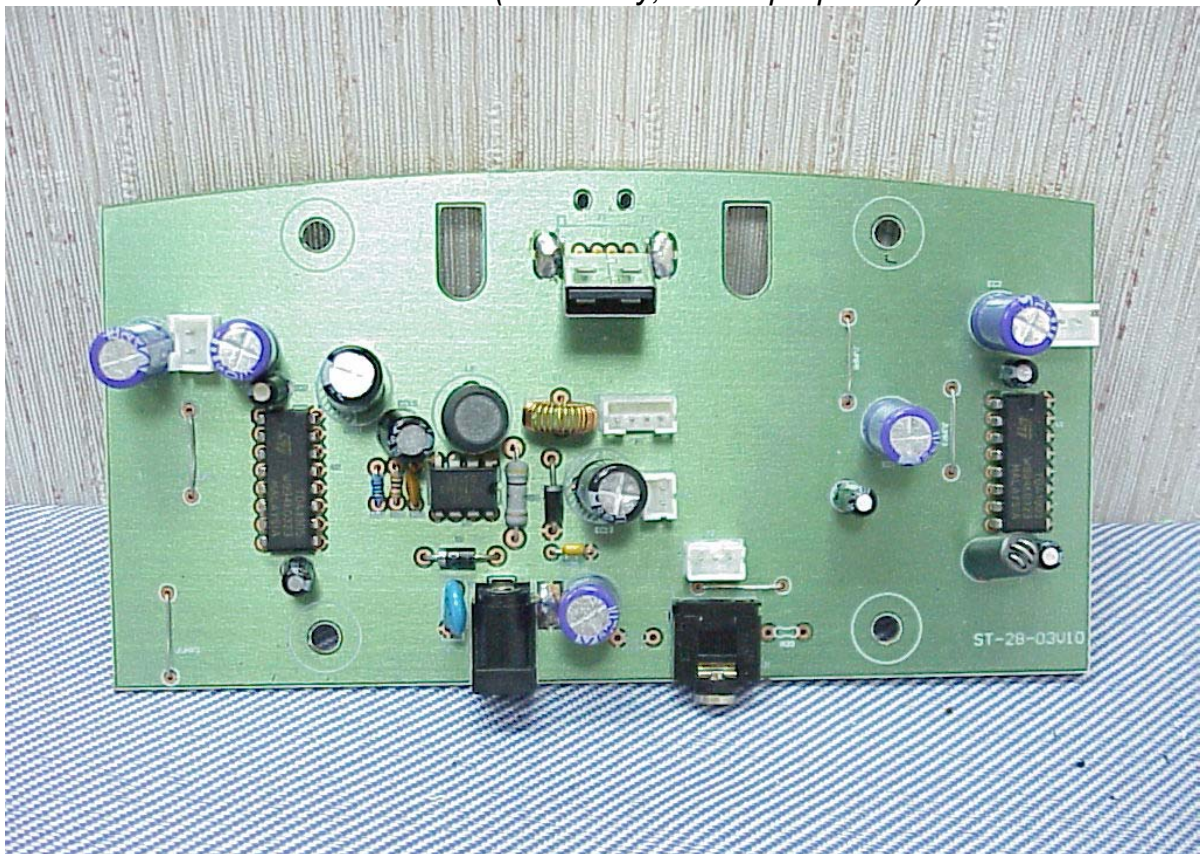

Photos 53
(Accessory, Desktop Speaker) Main Board/Front Side

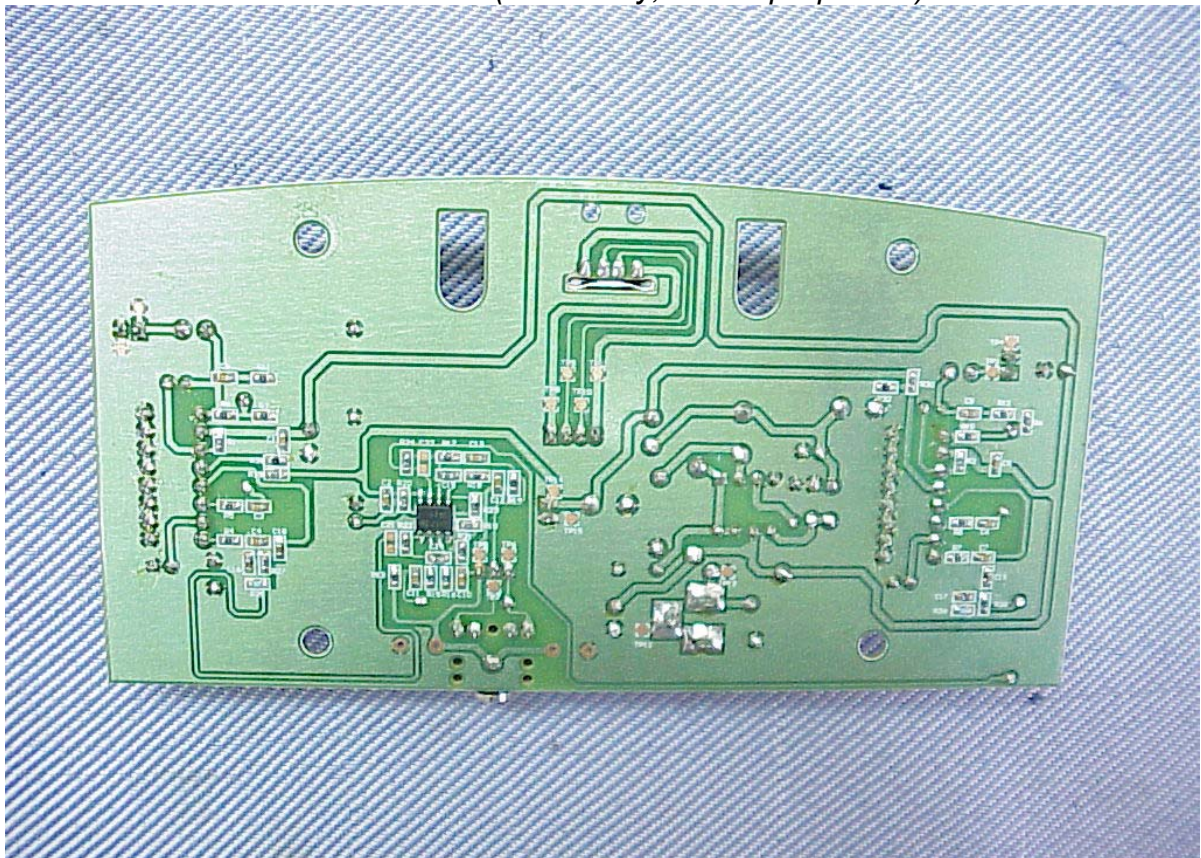

Photos 54
(Accessory, Desktop Speaker) Internal Speakers View



Photos 55
(AC Adapter for Desktop Speaker) Remove Case Covers, Transformer & PCB View/



Photos 56
(AC Adapter for Desktop Speaker) Transformer & PCB View

