

User Manual


Model: SiFi II




Introduction

Thank you for choosing BOMAKER SiFi II True Wireless Bluetooth Earbuds. Please read the manual carefully, and keep it for further reference. If you need any assistance, please contact our customer support team by **emailing at bomaker@support.com**

1. Package Content

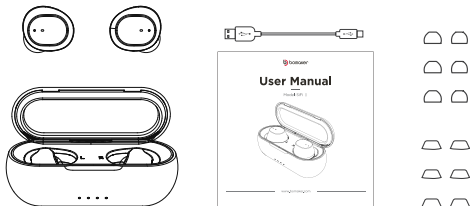

2. Product Diagram

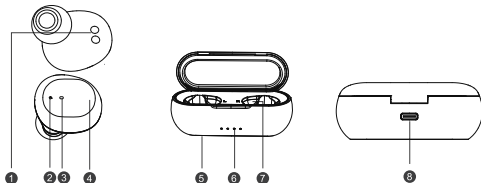

EN: 1. Charging Contact
2. Microphone
3. LED Indicator
4. Touch Control Panel

5. Charging Case
6. Charging Case Indicator
7. Charging Slot
8. Type C Charging Port

DE: 1. Ladekontakt
2. Mikrofon
3. LED-Anzeige
4. Bedientafel

5. Ladekoffer
6. Ladekofferanzeige
7. Ladeschacht
8. Typ C Ladenschluss

FR:	1. Contact De Charge 2. Microphone 3. Indicateur Led 4. Panneau De Commande Tactile	5. Boîtier De Charge 6. Indicateur De Boîtier De Charge 7. Emplacement De Charge 8. Port De Charge De Type C
ES:	1. Contacto de Carga 2. Micrófono 3. LED Indicador 4. Panel de Control Táctil	5. Estuche de Carga 6. Indicador de Estuche de Carga 7. Puerto de Carga 8. Puerto de Carga Tipo C
IT:	1. Contatto di Ricarica 2. Microfono 3. Indicatore a LED 4. Pannello di Controllo Touch	5. Custodia di Ricarica 6. Indicatore della Custodia di Ricarica 7. Slot di Ricarica 8. Porta di Ricarica di Tipo C
JP:	1. 充電接点 2. マイク 3. LEDインジケータ 4. タッチコントロールパネル	5. 充電ケース 6. 充電ケースインジケータ 7. 充電スロット 8. タイプC充電ポート

3. Power On/Off

(1) **EN:** Stereo Mode: Auto Power-On/Off

DE: Stereomodus: Automatisches Ein- und Ausschalten

 
FR: Mode stereo: Mise sous / hors tension automatique

ES: Modo estéreo: Encender / apagar automáticamente


IT: Modalità Stereo: Accendere e Spegner Automaticamente

JP: ステレオモード: 自動電源オン/オフ

ON



①

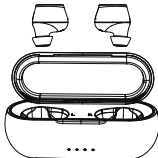


②

OFF



 ①



②



③

(2) EN: Mono Mode: Auto Power-On/Off

DE: Mono-Modus: Automatisches Ein- und Ausschalten


FR: Mode mono: Mise sous / hors tension automatique

ES: Modo mono: Encender / apagar automáticamente


IT: Modalità Mono: Accendere e Spegner Automaticamente

JP: モノラルモード: 自動電源オン/オフ

ON

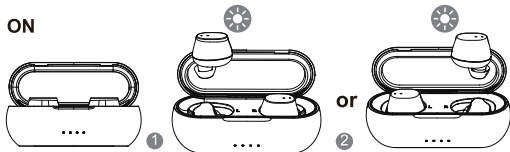

OFF

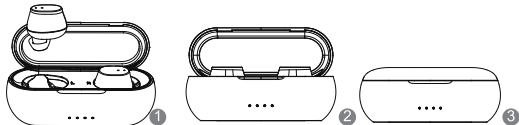

(3) EN: Stereo Mode: Turn On/Off Manually



DE: Stereomodus: Manuelles Ein- und Ausschalten

FR: Mode stereo: Activer / désactiver manuellement

ES: Modo estéreo: Encender / apagar manualmente

IT: Modalità Stereo: Accendere e Spegner Manualmente

JP: ステレオモード: 手動でオン/オフ

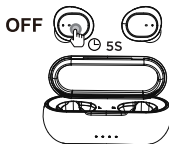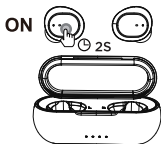

(4) EN: Mono Mode: Turn On/Off Manually



DE: Mono-Modus: Manuelles Ein- und Ausschalten

FR: Mode mono: Activer / désactiver manuellement

ES: Modo mono: Encender / apagar manualmente

IT: Modalità Mono: Accendere e Spegner Manualmente

JP: モノラルモード: 手動でオン/オフ

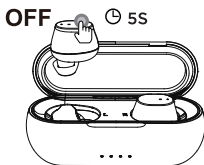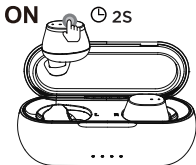

4. Pairing

(1) **EN:** Stereo Mode

DE: Stereomodus


FR: Mode stéréo

ES: Modo estéreo

IT: Modalità Stero

JP: ステレオモード

A

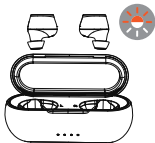


(2) EN: Mono Mode
DE: Mono-Modus
FR: Mode mono

ES: Modo mono
IT: Modalità Mono
JP: モノラルモード


B




5. Wear and Get Comfortable

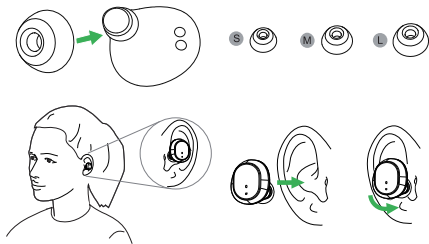

6. Controls

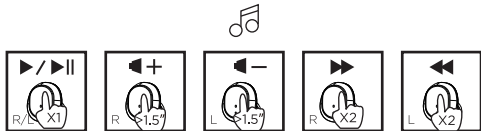

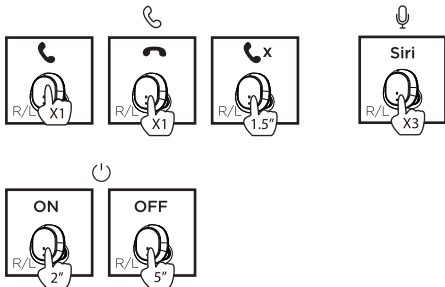

7. Charging

(1) EN: Charging The Earbuds


DE: Aufladen der Ohrhörer

FR: Charger les écouteurs

ES: Carga los auriculares

IT: Ricaricare gli Auricolari

JP: イヤフォンの充電

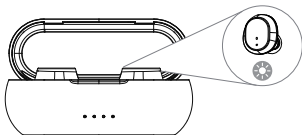

(2) EN: Charging the Case

DE: Aufladen des Aufladungskoffer

FR: Chargement de l'étui

ES: Carga el estuche

IT: Ricaricare la Custodia


JP: ケースの充電



					< 25%
					25% - 50%
					50% - 75%
					> 75%



8. Reset

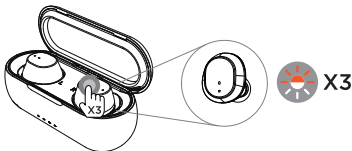

EN: Please reset the earbuds if the R and L earbuds cannot be connected to each other or connected to your Bluetooth devices correctly.

DE: Bitte setzen Sie die Ohrhörer zurück, wenn die R- und L-Ohrhörer nicht richtig miteinander oder mit Ihren Bluetooth-Geräten verbunden werden können.

FR: Veuillez réinitialiser les écouteurs si les écouteurs R et L ne peuvent pas être connectés l'un à l'autre ou connectés correctement à vos appareils Bluetooth.

ES: Si el auricular izquierdo y derecho no se puede conecta entre sí o con dispositivos de Bluetooth , reinicie al estado de fábrica del producto.

IT: Si prega di resettare gli auricolari se gli auricolari R e L non posso esser collegati a vicenda oppure collegati correttamente al tuo dispositivo Bluetooth.

JP: RイヤホンとLイヤホンを相互に接続できない場合、またはBluetoothデバイスに正しく接続できない場合は、イヤホンをリセットしてください

Specifications

Bluetooth version	BT 5.0
Bluetooth range	10 m / 33 ft
Waterproof	IPX 5
Frequency response	20 Hz - 20 kHz
Battery capacity	Earbuds: 50mAh/3.7V x 2 Charging case: 420mAh/3.7V
Playtime (varies by volume level and content)	Up to 24 H (Total)
Charging case charged the earbuds	3-4 Times (Charging case full battery)
Charging time	About 1.5 hours for earbuds About 2 hours for charging case
Earbud Dimension / Weight	1.0*0.8*0.7 inch / 4g
Charging case Dimension / Weight	3.2*1.3*1.2 inch / 32g

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2AS9DSIFI2

Correct Disposal of This Product



(Waste Electrical& Electronic Equipment)

This mark shown on the product or its packaging, indicates that this product should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Substanbo Inc.

ADD: 36 South 18th Avenue, Suite A, Brighton, CO 80601, United States

TEL: +1(719)309-2056



@bomaker



support@bomaker.com