



## NA30C

### QUICK START GUIDE

3" Water-Proof Media Center with  
AM/FM/WB Built-in Bluetooth, IPX6

 
This Quick Start Guide gives you the basics to start using your NA30C. Please visit [www.navatlas.com](http://www.navatlas.com) to download a complete owner's manual or call customer service at 1-562-946-7471 (Monday-Friday, 9AM-5PM PST).

**NavAtlas™**

Customer Service Toll Free: 1-562-946-7471

#### USB Operation

To play audio files or MP3 files from a USB device, insert the device and playback will begin automatically. To return USB playback from another mode of operation, select the corresponding icon from the Main Menu.

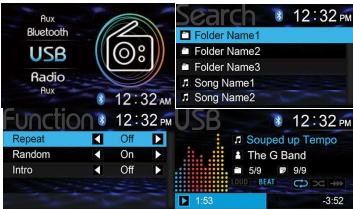

#### Radio Operation

Press Mode button to select Radio from Main Menu screen. Press Select while in Radio mode to enter the Preset Menu. \*Use the volume knob to scroll/adjust and the select button to choose



#### One-Year Limited Warranty

**One-Year Limited Warranty**  
This warranty gives you specific legal rights. You may also have other rights which vary from state to state. NavAtlas warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year from the date of the original purchase. NavAtlas agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.

**Who is covered?** This warranty is extended to the original retail purchase for products purchased from an authorized NavAtlas dealer and used in the U.S.A.

**What is covered?** This warranty covers all defects in material and workmanship in this product. The following are not covered: software, installation/removal costs. Damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product.

- Factory defects include:
- MID/Tweeter not playing or distorting
- Glue/adhesive separating or not holding correctly
- Tinsel leads not attached/soldered correctly
- LED/LCD not working out-of-box
- No Power/No Audio

**What to do?**  
1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjusting of any custom controls may save you a service call.

 
2. If you require service during the warranty period, you must carefully pack the product (Preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.

3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.

4. For more information and for the location of the nearest authorized service center please contact us by one of the following methods:

- Call us at 1-562-946-7471
- E-mail us at [navcustserv@navatlas.net](mailto:navcustserv@navatlas.net)

#### Installation

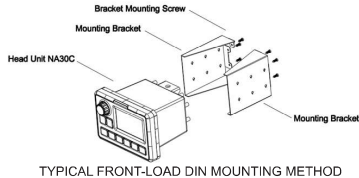


TYPICAL FRONT-LOAD DIN MOUNTING METHOD

#### Copyright and Trademark notes

SD Logo is a trademark of SD-3C, LLC. The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.
 
#### Wiring Diagram-Inputs/Outputs

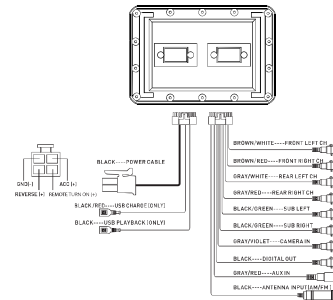

#### Aux Operation

Press Mode button to select Aux from Main Menu screen.



#### Control Locations



1. Power/Mute
2. Audio/Menu
3. Track/Tune down
4. Track/Tune up
5. Mode/Camera
6. Select/Preset Menu
7. Preset Up
8. Play/Pause/Band

#### Main Menu

Press the Mode button to select from the corresponding modes: USB, Radio, Aux, Bluetooth. \*Use the volume knob to scroll and Select button to choose



#### Bluetooth Operation

Press Mode button to select Aux from Main Menu screen. Bluetooth source is for music streaming only.



 
#### Pairing and Connecting

Before using Bluetooth functions, you must pair your mobile phone to the NA30C unit. The device name is "NA30C". To ensure the best reception for pairing and re-connection, please make sure the mobile phone battery is fully charged before you begin.

- Try to perform pairing within a few minutes of the mobile phone being turned on.
- Once the unit has been paired with the mobile phone, the unit's model number, "NA30C", will be displayed on the mobile phone.
- To achieve the best performance, always keep the mobile phone within 10 feet (3 meters) of the unit.
- Always keep a clear path between the mobile phone and the unit. Never place a metal object of any other obstacle between the mobile phone and the unit.
- Some mobile phones may have a "Power Saving Mode" option. PLEASE DO NOT use the power saving mode with the NA30C.



#### Audio Menu

Press the Audio/Menu button to enter into the system menus. \*Use the volume knob to scroll/adjust and the select button to choose.

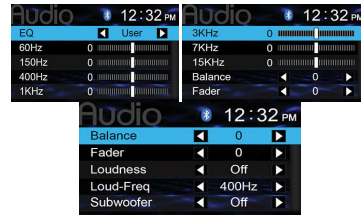

#### System Menu

  Press the Audio/Menu button to enter into the system menus. \*Use the volume knob to scroll/adjust and the select button to choose.

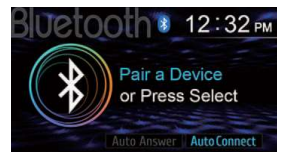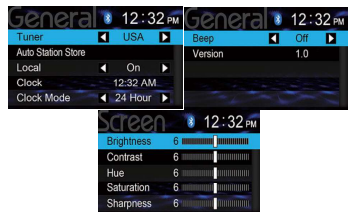

#### FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference,  
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
• Reorient or relocate the receiving antenna.  
• Increase the separation between the equipment and receiver.  
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
• Consult the dealer or an experienced radio/TV technician for help.