 
 


QS-S6 便携式K歌音响套装
使用说明书

包装清单

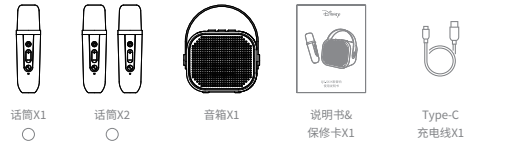

产品指示图

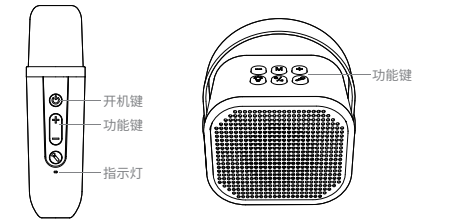

 
产品参数

产品型号：QS-S6
蓝牙版本：V5.4
传输距离：≥10M
喇叭直径：52MM 5W
喇叭阻抗：4Ω±15%
音箱电池容量：1200mAh/3.7V
话筒电池容量：300mAh/3.7V
充电时间（音箱）：≈4H
充电时间（话筒）：≈2H
音乐播放时间：≈2H
额定输入（音箱）：5V=500mA
额定输入（话筒）：5V=300mA

充电指南

Type-C USB 充电线，连接音箱/话筒的USB电源接口连接。

话筒充电中亮红灯，充电结束后红灯熄灭
音箱充电中亮红灯，充电结束后红灯熄灭



额定输入：5V=500mA（数据线） 5V=500mA（音箱） 5V=300mA（话筒）

温馨提示

- 除说明书有特殊标示的操作方式以外，请勿尝试拆卸或更换产品内的任何零件。
- 请勿将产品放入水或其他任何液体中，此产品非防水设计。
- 如果有任何液体不小心进入产品内时，请立即断开连接并移开此产品。
- 为避免触电，请在安装或卸载产品时，确保手上没有沾水。
- 请勿将此产品放置于热源附近或直接暴露在火源附近。
- 请勿将本产品放置在有强大电磁力的环境中，否则会导致产品故障。

灯光

未连接状态（话筒）	蓝灯闪烁
已连接状态（话筒）	蓝灯常亮
充电中（话筒）	亮红灯
充电完成（话筒）	红灯熄灭
未连接状态（音箱）	蓝灯闪烁
已连接状态（音箱）	蓝灯常亮
充电中（音箱）	亮红灯
充电完成（音箱）	红灯熄灭

产品操作说明

①开机

- 1.音箱长按开机键3秒，音箱开机
- 2.话筒长按开机键3秒，话筒开机

②关机

 
- 1.音箱长按开机键5秒，音箱关机
- 2.话筒长按开机键5秒，话筒关机

③蓝牙配对与连接

- 1.请将音箱及手机（或其它的蓝牙连接设备）的距离在1米的范围内，越近越好
- 2.开机后，自动进入配对状态，等待连接
- 3.开启用户手机蓝牙功能（或其它蓝牙设备）并进行搜索扫描，此时手机会搜索到附近所有的蓝牙设备，点选搜索到的音箱名称：QS-S6,成功配对连接后，此时可以进行听歌了。
- 4.开启话筒，请将话筒及音箱的距离在1米的范围内，越近越好
- 5.话筒开机后，会自动搜索配对音箱，话筒提示灯由蓝色快闪转为蓝色长亮，表示话筒与音箱成功配对连接。
- 6.蓝牙音箱与手机在无连接情况下，10分钟自动关机。

功能键操作

■ 普通模式



- ①：长按/开机
短按/话筒开关
双击/音乐播放暂停
- ②：短按/话筒音量+
双击/混响模式+
- ③：短按/话筒音量-
双击/混响模式-
- ④：短按消音
长按/魔音功能



- ⑤：短按一次减少音量，长按上一曲
- ⑥：手动切换播放模式
- ⑦：短按一次增进音量，长按下一曲
- ⑧：短按切换LED灯光效果，长按关闭
- ⑨：长按开机/关机 短按播放/暂停
- ⑩：连上麦克风后，切换原音和伴奏

产品有害物质名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○
本表格依据SJ/T11364的规定编制 O:表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定限量要求以下。 X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB26572规定的限量要求。 表单标记“X”的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。						
本表格依据SJ/T11364的规定编制 印刷电路板组件*:包括印刷电路板及其零部件,电子元器件等,根据产品型号不同,您所购买的产品可能不会含有以上所有部件						
	指不含有6种有毒有害物质或含有但小于限量值，字母“e”代表英文字母电子(electronic);电子(electrical)和环境(environment)的首字母；环绕的曲线箭头表示可回收利用。					



保修声明

免责声明
本使用手册没有任何形式的担保、立场表达或其他暗示，本使用手册所提到的产品、规格及信息仅供参考，内容亦会随时更新于网页，恕不另行通知。

保修声明：
就本文件随附的产品做如下保证：如产品在您购买日起十二(12)个月(“保修期”)内，在正常使用情况下因质量瑕疵发生损坏，能修理的，免费修理；经厂家确认无法修理的，免费更换；修理或更换后的产品，在剩余保修期（最短不少于30天）内继续享有保修。购买日以销售发票日期为准；如无法确定购买日，则保修期自产品生产日期起按十三(13)个月计算。
如申请保修，请先致电产品服务热线，并按我们指示的方式执行。申请保修时，您需要提供准确、完整和清晰填写的有效销售发票。以上保证不适用于下列情况：

 
- 1.超过三包有效期的；
- 2.涂改保修卡、产品编码与产品本体不符；
- 3.因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏；
- 4.因不可抗力（如地震、战争、火灾等）或意外导致的故障或损坏；
- 5.拉链、塔扣因受力过大而损坏；
- 6.因承载过重造成的脱线或断裂；
- 7.任何因尖锐物体造成的损坏；
- 8.有烧损或水浸迹象的产品；
- 9.因擅自拆改导致的损坏；
- 10.产品正常使用过程中发生的老化、脱色、磨损、破裂和其他损耗。
- 11.如产品原有标识标签被更改或损毁，本保证将失效。

产品及随附物料的齐备和外观完好不属于保证范围，您应在接收产品时当场检验并对任何不符提出异议。

以上保证是我们就产品做出的全部保证，且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权益。


服务监督热线:400-885-8808



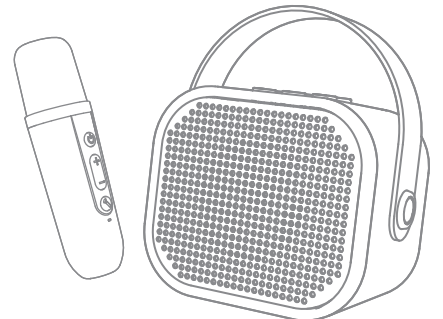


QS-S6 Portable karaoke audio set
Instructions& Warranty Card

 Packing List

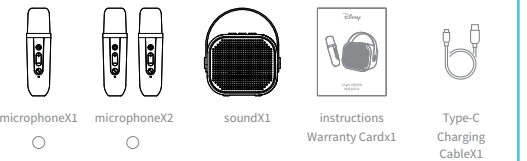

Product diagram

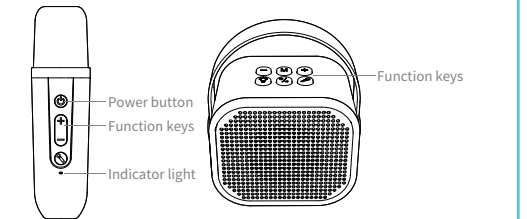 


Product Parameters

Product model : QS-S6
BT : V5.4
Transmission distance : $\geq 10M$
Speaker Diameter : 52MM 5W
Speaker Impedance : $4\Omega \pm 15\%$
Speaker battery capacity : 1200mAh/3.7V
Microphone battery capacity : 300mAh/3.7V
Charging time (audio) : $\approx 4H$
Charging time (microphone) : $\approx 2H$
Music playback time : $\approx 2H$
Rated input (speaker) : $5V=500mA$
Rated input (microphone) : $5V-300mA$

Charging Guide

Type-C USB charging cable, connected to the USB power interface of the speaker/microphone.

 The microphone lights up red during charging, and the red light goes out after charging is completed
The red light is on during audio charging, and it goes out after charging is completed



Tips

- Except for the operation methods specifically marked in the manual, please do not try to disassemble or replace any parts in the earbuds.
- Don't put the earbuds in the water or any others liquid. The earbuds are not waterproof.
- If any liquid enters the product by accidentally, please disconnect and remove the connection immediately.
- Please make sure that there is no water on your hands when Installing or uninstalling the product to avoid electricshock.
- Do not put the product near by the heat source or expose it to the fire source directly.
- Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

lighting

Unconnected state (microphone)	Blue light flashing
Connected state (microphone)	Blue light always on
Charging (microphone)	On shaky ground
Charging completed (microphone)	Red light goes out
Unconnected state (audio)	Blue light flashing
Connected status (audio)	Blue light always on
Charging (audio system)	On shaky ground
Charging completed (audio)	Red light goes out

Product operation instructions

 
- ①Power on
- Press and hold the power button for 3 seconds to turn on the speaker
 - Press and hold the power button for 3 seconds to turn on the microphone

- ②Shutdown
- Press and hold the power button for 5 seconds to turn off the speaker
 - Press and hold the power button for 5 seconds to turn off the microphone

- ③Bluetooth pairing and connection
- Please keep the distance between the speaker and mobile phone (or other Bluetooth connected devices) within a range of 1 meter, the closer the better
 - After turning on, automatically enter pairing mode and wait for connection
 - Turn on the user's mobile Bluetooth function (or other Bluetooth devices) and perform a search scan. At this time, the phone will search for All nearby Bluetooth devices, click on the speaker name found in the search: QS-S6. After successfully pairing and connecting, you can now Let's listen to the music now.
 - Turn on the microphone, please keep the distance between the microphone and the speaker within a range of 1 meter, the closer the better
 - After the microphone is turned on, it will automatically search for paired speakers, and the microphone prompt light will change from a blue flash to a long blue light, indicating that The microphone and speaker were successfully paired and connected.
 - The Bluetooth speaker automatically shuts down within 10 minutes when there is no connection between the speaker and the phone.

Function key operation

■ Normal mode

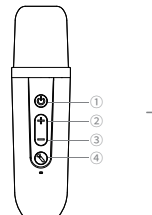

- ①: Long press/turn on/off the machine
Short press/microphone switch
Double click/music playback pause
- ②: Short press/microphone volume+
Double click/Reverb mode+
- ③: Short press/microphone volume-
Double click/Reverb mode-
- ④: Short press to cancel the original sound
Long press/magic sound function



- ⑤: Short press once to reduce volume, long press the previous song
- ⑥: Manually switch playback mode
- ⑦: Short press to increase volume, long press one song
- ⑧: Short press to switch LED lighting effects, long press to turn off
- ⑨: Long press to turn on/off, short press to play/pause
- ⑩: After connecting the microphone, switch between original sound and accompaniment

Names And Contents Of Hazardous Substances In Products

Part Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○
This form is compiled in accordance with SJ/T 11364. OIndicates that the content of the hazardous substance in all homogeneous materials of the part is in below the limit required by GB/T 26572. XIndicates that the hazardous substance at least in a certain homogeneous material of the part exceeds The limit requirements specified in GB/T 26572. The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances.						
Printed circuit board components: Including printed circuit boards and their parts,electronic components, etc.and depending on the product model,the earbuds you purchased may not contain all the above components.						
	Refers to not containing 6 toxic and harmful substances or containing but less than the limit value, with the letter "e" representing the English letter "electronic"; The first letters of electronic and environmental; The curved arrows surrounding indicate recyclability.					



Warranty Statement

Disclaimer
This user manual does not have any form of guarantee,position expression or other implication.The mentioned products,specifications and information are for reference only,and the content will also be updated on the web at any time without additional separate notice

Warranty statement:
The product attached to this document is guaranteed as follows:If the product is twelve (12) months from the date of purchase("Warranty Period"),under normal conditions of use due to quality defects damaged,can be repaired.Free repair/replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product.Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days).Purchased by sale the ticket date shall prevail;if the purchase date cannot be determined,the warranty period shall be 13 (13) months.
If you apply for a warranty,please call the product service hotline first and execute it in the manner instructed by us.When applying for warranty,you need to provide an accurate,complete and clearly filled out valid sales invoice.

- The above guarantee does not apply to the following situations:
- Exceeding the validity period of the three packs;
 - Altering the warranty card and product code does not match the product body;
 - Causes caused by misuse,abuse or improper transportation,use,maintenance or storage obstacles or damage;
 - Failure or damage caused by force majeure (such as earthquake,war,disaster,etc.) or accident bad;
 - The zipper and tower buckle are damaged due to excessive force;
 - Disconnection or tearing caused by excessive load;
 - Any damage caused by sharp objects;
 - Products with signs of burning of flooding;
 - Damage caused by unauthorized disassembly;
 - Aging,discoloration,abrasion,rupture and other losses that occur during the normal use of the product.
 - If the original identification label of the product is changed or damaged,this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee.You should check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products,and are only applicable in mainland China.Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

E-mail : service@keesion.com



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.