# Self-ballast LED lamp User Instruction

#### I . Product Features

- Compact structure and design small, light weight, stylish
- Made with high quality parts and materials high reliability
- Light-emitting elements and parts produced with new manufacturing technology – high lumen output





### II . Product drawing and dimensions

| Model         | Input          | Power<br>(W) | CCT (K) | Lamp<br>cap |
|---------------|----------------|--------------|---------|-------------|
| TSZ9A19-LD007 | 120VAC 50/60Hz | 9W           | RGBCW   | E26         |

#### **Ⅲ**、Selection and installation instruction

- 1. Open product packaging and check if product is intact, contact seller if found damaged.
- 2. Check to confirm product rated voltage is same as local power grid voltage.
- 3. Switch off light power.
- 4. Hold bulb by plastic housing and install into light socket.
- 5. Switch on/off as usual when power is connected.

## IV . Warning

- 1. Do not put in dripping-wet environment.
- 2. Do not touch bulb when switched on as high surface temperature may scorch and injure skin.
- Lumen output drops when bulb is used beyond rated lumen maintenance period. For better protection of your eyesight, do not use beyond rated period and replace bulb accordingly.
- 4. Use in Damp Locations only
- 5. This device complies with Part 15 of the FCC Rules / Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

To satisfy FCC / IC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.

Les antennes installées doivent être situées de facon à ce que la population ne puisse y être exposée à une distance de moin de 20 cm. Installer les antennes de facon à ce que le personnel ne puisse approcher à 20 cm ou moins de la position centrale de l'antenne.

La FCC des éltats-unis stipule que cet appareil doit être en tout temps éloigné d'au moins 20 cm des personnes pendant son functionnement.