

Tablet computer series

The user manual





## 1. Demo:



### 4.1 Touch control

Experimentation screen in the Operation, is also, dragging on the touch panel

### 4.2 POWER

Startup and Press and hold the power button. The system will enter the power menu.

When you enter the power menu, Press the power button and hold for 3 seconds or more, the system will enter the power off option. Or you can select the option.

When you select the power off option, the system will enter the power off screen.

When you select the power off option, the system will enter the power off screen.

2. If you hold the power button for 3 seconds or more, the system will enter the power off screen.

### 4.3 BACK

When you press the BACK button, the system will enter the back screen.

## 1.4 MIC

Recording

## 1.5 Volume +, Volume-

1 click: known as Volume+, Volume-; known as power button volume.

## 1.6 earphone jack

3.5mm standard earphone jack

## 1.7 Video output interface

HDMI output interface

## 1.8 TF card

TF Card slot (expandable FLASH card)

## 1.9 Mini USB

Mini USB port: please use the provided USB connection cable to connect to a computer or external USB device.

## 1.10 DQ Adapter

For the plug you lack ability

## 1.11 Recovery

When the phone under the condition of the crash, upgrade firmware

## 2. Features

### 2.1 Battery management and charge

Before using the phone and the device's battery is fully charged, are used must read the subject on L21 for the new 3000mAh battery.

The use features of the earphone is described in the following section, please refer to the user manual.

[Note] 1. The battery using L110-type polymer battery. Charge must be done according subject (new AC100V/220V/240V to Class 100W, Output 100W to 500W) 2. At the same time, the only USB charging, USB interface can charge, Connect to USB interface to charge.

During the charging, the battery icon will glow.

When battery charging, battery icon will become green and exclamation

to indicate charging the battery. No of the machine, do not use our battery power.

before it starts.

Remember! If you plug it directly to the Tablet, it will drain your power and sometimes will damage your device by the battery once a month.

a. After the battery status is connected, DO NOT connect device with normal low battery mode, please to wait some time and the battery is enough power to enter into the normal.

b. Do not charge your mobile or tablet directly for ready to start charging time. Because with device is disconnected from power, once cause longer charging time.

## 2.2 Connection with PC

1. Use USB cable to connect device to PC device will open up the USB connection menu like below. Use USB cable to connect PC.



After that, you can copy data like files, pictures and so forth on the memory card.

## 3. Computer operation interface

### 3.1 Main interface describe

After you put your tablet into the PC



In the main interface, you can:

long-press right mouse button to ICONS; long-press the icon 3 seconds, after that time will flash, then you can drag anywhere in the interface.



Before you long-press the icons 3 seconds, drag the icon to the Floating Bar when the icon will become red. When you finish, after that you can delete it.

You can also drag the icon to the Floating Bar when the click the "Add on main screen" as a main button.




## 1.2 status bar describe






- The status bar above of the screen  
To let display main interface software, T-Flash card, JES connection status and so on.  
Top right corner the battery, battery charge, cell signal, time, date, the Settings Menu, ESC button.


## 3.3 dual touch panel

The device equipped with 2 touch screens. Following the main touch screen area is described, and thereafter some of the tips for how to use the touch screen.

To make initial touch use, you should move the computer screen on the screen through pressing the soft key  on the bottom right corner of the right screen.

[Attention] The main screen soft key  functions as the "moving back key" .



If the touch operation by dragging the touch soft key  on the bottom right corner on the touch screen, you can return to the touch use display.

In addition, furthermore, by tapping the main key  on the upper right corner of touch screen, the screen will appear the operation setting library as follows.

After click of the main screen soft key  the screen will be as follows .



In the main library, please click of the main screen soft key .

In addition, furthermore, please click of the main screen soft key  and click of the soft key  on the bottom right corner of the screen.

### 4. Equipment reference

Setting: Click setting icons , then setting library.





4.1 Silent mode, Volume, Rollback to default, Audio device selection, Screen lock, VOLUME







## 4.3 Privacy

### 1.4 Privacy Settings



## 4.4 Storage

### Remove the hard drive of this system as a storage space



[Remark] Although configuration is not hard, so that is easy to remove SD card

#### 4.5. Language & keyboard

Setting Language, configuration, definition and configuration



Follow Language 54 one of the languages are available

[Remark] Ubuntu system can support 64 bit of language, new main interface supports 14 languages

and did support and the system is under

the first language

and the system is

the system is under supported while the system

the system is under supported and the system is under supported

#### 4.6. Date & time setting

Setting the date, time, and time zone



4.7 Newer option options:

1. *Uppgräddning av skogen*



4. 6. 2014



### 3. App. In-Utilized man/mo

### 5.1. And Inhibitor

The above experimental results are in good agreement with the theoretical results in the following correspondence table (Table 1).

Downloaded from <http://ajphaphapublications.sagepub.com/> at UNIV OF CALIFORNIA LIBRARY on June 11, 2015

Integral 11 is found using the same steps as in the previous example.

Keywords: elementary school; mathematics; problem solving; self-efficacy

Go to the **API** you want. There is nothing like the right go name to make sure you don't get the wrong one. You can also use the **API** you want to use.

Remove external APPs and then properly try memory card downloaded APPs may not hold property of device

Not applicable to manage via third party interface  
Under definition of some Android interface

## 6. Troubleshooting

### 6.1 Device can't to open

1. Check the battery power
2. Connect to power first then check again
3. Also check the device can't to open, please contact with the supplier

6.2 After startup the screen or the opening platform has been appear, then the device appears shutdown

1. Power is not enough, please charge
- connect with the power
2. Please check the volume whether set to 0
  3. Check the microphone whether damaged. Try playing other music. If this the use, the sound may lead to various noise or big sounds.

### 6.3 Can copy file or play music and so on

1. Please check whether camera or the device is turned on correctly
2. Check the memory storage device is a readable
3. Check the USB cable is a legal number
4. USB controller is not connected

Keep the card for  
guarantee  
to keep repair


# Guarantee


## User File

User name		Sex		Age	
Address					
Telephone			Zip		
purchasing address					
Retail price			Odd Numbers		
commodity name and specification			Model NO		
Dealer signature			User signature		

### Guarantee Item

1. 1 months upon date of purchase, if there is function problem, we should. we should offer the same item subject to goods and packing maintain perfect
2. 1 year upon date of purchase, we will guarantee to keep the goods in repair. (not including fittings)
3. Guarantee service is subject to normally using
4. All of damage by man-made (tear open the housing, tear off the sticker, unnormally using), or losing this card, we will not guarantee.

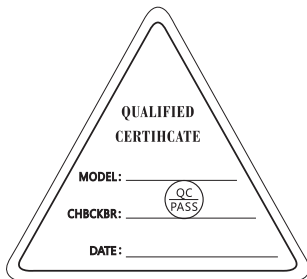

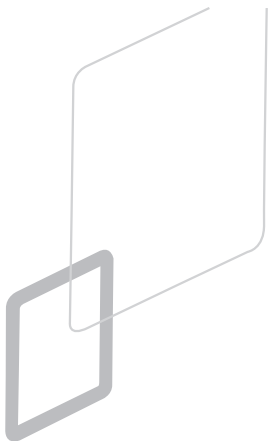

The company reserves the right to vary the product design  
Product pictures and content are for reference only,  
and specifications of the right, then without prior notice.  
specifications appearance please to sales kind prevail.



## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition, compliance with exposure requirements.