



USER MANUAL

DKM-20 Disco-Shinystar Karaoke Party Speaker



CONTENTS

English	02
Français	10
Deutsche	19
Italiano	28
Español	37
日本語	46

Welcome to Donner

We are very grateful to have you purchasing our product.

Please take a few minutes to read the instructions for operating this product, which will show you how to use it and explain the function and operation of the device, ensuring a trouble-free installation.

Please keep these operating instructions properly for future reference.

WARNING

SHOCK HAZARD. DO NOT OPEN.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE. TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND ANNOYING INTERFERENCE, PLEASE USE ONLY THE RECOMMENDED ACCESSORIES FOR UNINTERRUPTED SERVICE OF THIS DEVICE!

*DESIGN AND SPECIFICATIONS MAY CHANGE WITHOUT NOTICE

POWER SUPPLY

This product can be powered by standard indoor wall sockets. Please only use the AC adapter specified in this product. When not in use, please turn off the power supply. When not in use for a long time, pull out the AC adapter and keep it properly.

EXAMPLE OF LOGO



This triangle sign (△) indicates what users should pay attention to. (The left example is careful shocks)



A circular sign (⊘) with an oblique line indicates prohibitions. The icons in or beside the logo indicate the contents specifically prohibited. (The example on the left is no disassembly)



The round black bottom sign (⦿) indicates what must be observed. The diagrams in this sign indicate the contents of the specific matters that must be observed.
(The example on the left is that the power plug must be pulled out of the socket)

SIGN

To ensure that you use this product safely and correctly, to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs. The various signs and their meanings are as follows:



WARNING

This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.



BE CAREFUL

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly.

CONNECTION

Please turn off the power switch of all before connecting this product with other. This can prevent failure of it or damage to other products.

MAINTENANCE

When cleaning the instrument, use soft and dry damp cloth. Do not use paint thinners, solvents, cleaning fluids or rags stained with chemicals. Do not use excessive force to clean the switch or control button.

This product is best used in such an environment: Temperature: 15°C ~ 35°C, humidity: 75%

 
CAUTION

1. Do not install this apparatus near any heat sources such as radiators, heat registers, stoves or other apparatus(including amplifiers)that product heat.
2. Protect the AC adapter/power cord from being walked on or pinched,particularly at plugs,convenience receptacles and the point where they exit from the apparatus.
3. Unplug this apparatus during lightning storms or when unused for long periods of time.
4. Do not expose batteries to excessive heat such as sunshine,fire or the like.
5. This product uses a laser sytem.To prevent direct exposure to the laser beam,do not open the cabinet. enclosure or defeat any of the safety mechinisms provided foe your protection.DO NOT STARE INTO THE LASER BEAM.
6. This apparatus is intended to be used only with the AC adapter or charging cable provided by the. manufacturer.
7. To prevent possible hearing damage,do not listen at high volume levels for long periods.
8. Please read the following carefully before using. Please keep this manual so that you can refer to it at any time in the future.


OVERVIEW

Thank you for purchasing Donner Disco-shinystar karaoke party speaker. The product has high-quality sound, built-in disco party lights,LED neon lights. include two high-quality microphones. Disco-Shinystar karaoke party speaker can change 6 modes disco party mode during sing karaoke at home party. Built in 6 sound effects, to your different cheers at the song ending. Built in 6 voice effects, switch at anytime to bring different voice effects. Use USB、 Aux in or Bluetooth to play your favorite music at anytime. Shinystar karaoke party speaker will brings you a lot of fun.

PACKING



 Disco-Shinystar
karaoke party speaker x 1



Microphone x 2



 
 
Remote control x 1



AC adapter x 1

PANEL LAYOUT:

1. Power indicator LED —When the light up red, the power too low, Lights up red during charging and lights up green when fully charged.
2. Mic volume control—Turn to adjust the output volume of the plugged-in microphones
3. Power / Volume control—Trun to power on or off. When powered on, turn to adjust the output volume.
4. Echo volume control—Turn to adjust the echo of the microphones
5. Play/pause button—press to alternately pause and play the music. Press and hold button choice the AUX、 bluetooth and USB mode.
6. Skip back button—Press to select the previous track.
7. Skip forward button—Press go to the start of the next track.
8. Sound effects button—Press to random switch effect sound
9. Voice effects button—Press to convert the microphone in to the sound effects
10. Light effects button—Press to convert the light effects
11. Microphone input – Plug in the microphone supplied here
12. AUX input —Connect the external audio device here with the cable supplied
13. USB INPUT/OUTPUT—Connect a USB drive to play stored MP3 music files.
14. AC adapter input—Connect the AC adapter provided by the manufacturer.

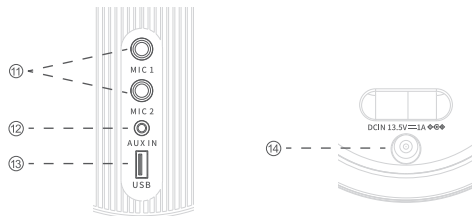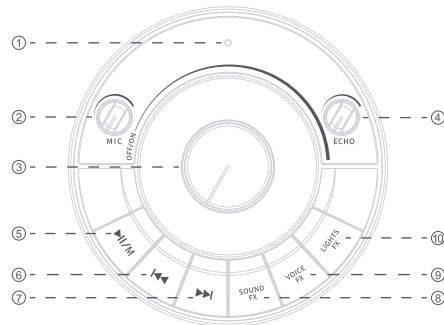

REMOTE CONTROL

- 15. Voice effects button—Press to convert the microphone in to the sound effects
- 16. Sound effects button—Press to random switch effect sound
- 17. Mode button— Press button choice the AUX、 Bluetooth、 USB mode.
- 18. Light effects button—Press to convert the light effects
- 19. Play/pause button—press to alternately pause and play the music. Press and hold button choice the AUX、 bluetooth mode.
- 20. Skip back button—Press once to go back to the start of the track. Press twice to select the previous track.
- 21. Skip forward button—Press go to the start of the next track.
- 22. 0-9 number button —Enter number choice music files in USB mode, only support USB mode.

GUIDE

 
1. Mic in

Connect microphone can to sing along with the accompaniment music, and the mic volume knob can adjust microphone volume, echo volume knob can adjust the echo volume. Press voice FX knob can change your voice tone, form different voice changes, and bring interesting singing experience.

2. AUX IN / BLUETOOTH / USB

AUX IN Operation

Aux in 3.5mm audio input interface, hold the (▶/M) switch to aux mode, the sound prompt is: aux in mode. access audio playback devices (such as MP3, cell phone, CD player), and prepare a 3.5mm audio cable connect aux in interface.

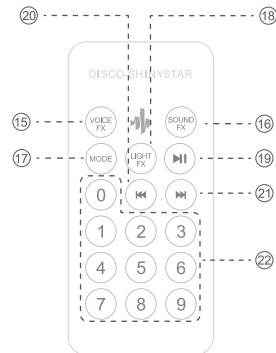

BLUETOOTH Operation

Bluetooth wireless pairing, hold the (►II/M) switch to Bluetooth mode, the sound prompt is: Bluetooth mode. open the mobile phone Bluetooth connection. Choice Disco-Shinystar and them successfully will be sound prompt: Bluetooth connected. Disconnect Bluetooth sound prompt: bluetooth disconnected. open any music apps start your favorite music playback.

USB Operation

USB mode, hole (►II/M) to switch to USB mode, sound prompt is: USB mode. plug USB stick into USB interface, automatically play music file, and use the (►II/M) (◀◀) (▶▶) button and remote control 0-9 digital buttons to select music (0-9 numbers on the remote control only can used effectively in USB mode. When there are 100 songs in the USB stick music file, quickly press twice to 9 button . order select the 99th song) (if there music file is no coding code, and the song order is calculated according to the letters A-Z)

SOUND FX

Press (^{SOUND}FX) to switch the sound effect randomly. Use sound effects increase the atmosphere of liveliness and fun of singing.

 
Randomly sounds effects :Clapping and cheering、 Lets ready to rumble、 Catcalls of the audience、 Kids cheering、 Drums sound、 Fail.

VOICE FX

Press(^{VOICE}FX) switchs the voice effects , transform your key pitch into a more interesting vocals sound. change the sound effects and sound prompt is: Female voice、 Male voice、 Kid voice、 Monster voice、 Robot voice、 Reverb

LIGHTS FX

Press (^{LIGHT}FX)switch the lighting effect. 6 lights effects built-in. Whether singing slow songs or strong rhythm songs, Disco-Shinystar bring different lights effects according to different rhythms to bring different lights atmosphere.

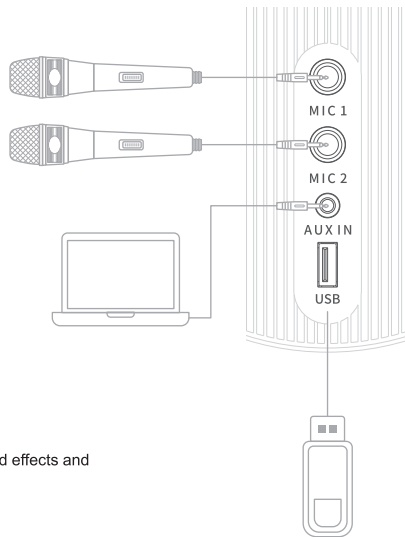

Q&A

If you encounter any issues while using the Disco-Shinystar karaoke Party Speaker the please check the following before contacting the manufacturer for further help:

No power

- The power is not on; make sure the Disco-Shinystar karaoke Party Speaker POWER/VOLUME control is not turned fully to the left.
- The Disco-Shinystar karaoke Party Speaker could be completely out of power. Recharge the Disco-Shinystar karaoke Party Speaker using a AC adapter and try again.

No lights effect

- The lights effect is probably just switched off. Press the LIGHTS FX button to turn on the lights.

No sound – Bluetooth mode

- Make sure that you are not trying to use Bluetooth mode while the AUX mode or USB mode.
- The main VOLUME could be set to minimum; raise the volume.

No sound – AUX Input mode

- Make sure the 3.5mm jack cable has been plugged in.
- Make sure the iPod/iPhone/MP3 player is connected properly and that a song is playing.
- Adjust the volume on the audio device.

No sound – USB

- Make sure the USB contains music files in MP3 format.
- The main volume could be set to minimum; raise the volume.

No sound from the microphone

- Make sure the microphone is firmly connected to the MIC socket.
- Make sure the OFF/ON switch on the microphone is set to the ON position.
- Make sure the MIC VOL control setting is not set too low.
- The main volume could be set to minimum; raise the volume.

Other Bluetooth problems

Mobile phone or Tablet etc. cannot be pairing or connected with the Disco-Shinystar karaoke Party Speaker.

- You may not have not activated the Bluetooth function of your mobile device; refer to the Bluetooth device user guide.
- The speaker is not in pairing mode; switch the Disco-Shinystar karaoke Party Speaker off and then on to restart pairing.
- Another Bluetooth device may be connected; disconnect that device before trying to connect a new Bluetooth device.

The music does not play on the Disco-Shinystar karaoke Party Speaker after successfully connecting with Bluetooth

- Ensure your Bluetooth device can support the A2DP Bluetooth profile.
- The volume on the external Bluetooth device is set to low or muted; raise the volume of the Bluetooth device as required.
- The Bluetooth audio breaks up. Move the Bluetooth device closer to the Disco-Shinystar karaoke Party Speaker or switch off the "Wi-Fi" on the Bluetooth device as that can sometimes improve the audio playback quality.

SPECIFICATIONS

Donner Disco-ShinyStar karaoke party speaker	
Input	Mic input x2 / Aux Input/ USB Input / Bluetooth
Overall Frequency Response	30-20KHZ(+/-3dB)
Power Amplifier	15W@THD+N 1%
Full Frequency Driver	3.5inch 4Ω 15watt
Bluetooth	CSR Stereo Bluetooth V5.0
Power	AC Adapter 100-240V 50/60HZ, 13.5V 1.0A
PoWeightwer	2.1KG
Dimensions	W224mmxD211.5mmxH283.25mm
Accessories	Owner's Manual ; Wired Microphone x2 ; Remote control ; AC Adapter

PRODUCT DISPOSAL INSTRUCTIONS



The symbol shown here and, on the product, means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

The waste Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to encourage the recycling of product using best available recover and recycling techniques to minimize the impact on the environment, treat any hazardous substances and avoid the increase of landfill.

When you have no further use for this product, please dispose of it using your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

FCC COMPLIANCE STATEMENT

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body





Email: service@donnerdeal.com
www.donnerdeal.com

Copyright © 2021 Donner Technology. All rights reserved.

