

I. Loshall Card Operating Instructions on Apple Find My App

To use the Apple Find My app to locate the item, the latest version iOS, iPadOS, or macOS is recommended.

How to set up Loshall Card in the Apple Find My app:

First make sure WiFi and Bluetooth are turned on.



After the Loshall Card is received, follow the steps:


1. Click the power button on the Loshall Card to activate the Loshall Card.



Turn on the Apple Find My app:




Click "Add Item", then click "Add Other Supported Item" then follow the instructions shown.

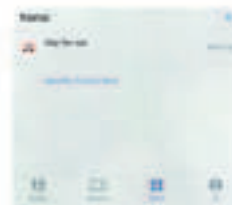

If you have added other items, you need to click on the "+" sign at the top right and enter it by clicking on "Add Other Items".

How to remove items from the Apple Find My app:

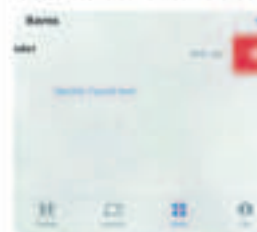

Navigate to the item page on the Apple Find My app. Click "Items", then swipe left on the item you want to remove.

After removing it on the Apple Find My app, the Card will automatically shut down after 5 minutes. Its location link can be found by following the steps shown.



Location link icon

II. Charge your card



Once the charging icon is lit, the card is ready to use.



Always turn on orange light while charging. Also, the orange light will be lit when the card is fully charged.

Safe electronic disposal

The card is a common home and LOG-ALL standard special measures to protect the privacy of the user and avoid the loss of data. When you dispose of the card, the power button on the card will be disabled to prevent the card from being used.

How to restoring the factory setting.

Click the power button for 10 seconds, and then press the power button for 5 seconds. When the orange light is lit, the card is ready to use.

III. Warning

1. The product is not a toy or a game.
2. Consider a large metal object or interference with the wireless signal.
3. If you are not a professional user, please do not open the product. The product may be damaged or malfunctioned, or even be dangerous.

IV. Disclaimer

This is neither an anti-theft nor an anti-loss device. This device provides the last detected location.

V. Limited warranty

Loshall offers a one-year limited warranty against a manufacturing defect from the date of delivery.

Product defects do not include those resulting from accidents, product malfunction, or failure to follow instructions for use.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.