


Remote Transmitter Operations

Pressing and releasing the **LOCK** button arms the security system and locks the doors. Pressing and holding this button for two seconds will, in addition to the arming and locking, also activate the optional additional output.

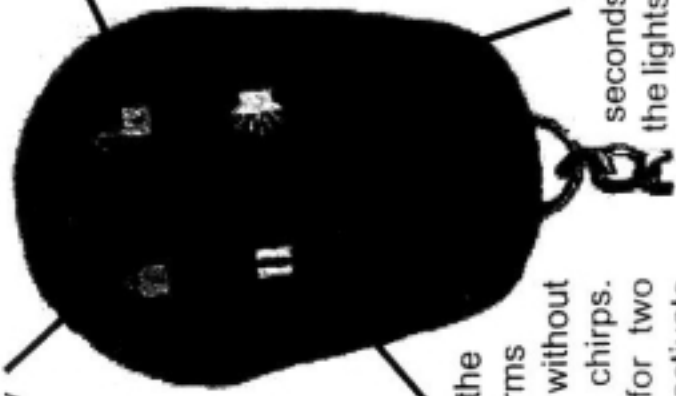

Pressing and releasing the **OPTION** button twice arms or disarms the system without the confirmation horn chirps. Pressing this button for two seconds can be used to activate an optional function such as trunk release.

Pressing and releasing the **UNLOCK** button disarms the system and unlocks the doors unless the system is activated. The unlock operation may be configured so that pressing the unlock button once disarms the system and unlocks only the driver's door, and pressing a second time will unlock all of the doors.

Pressing the **PANIC** button for 2 seconds will activate the system, flashing the lights and sounding the horn; a further press of this button will deactivate the system, into the disarmed state. If desired, this button can be programmed to operate the additional optional output instead of the panic feature.

Transmitter part number: #143-07

FCC ID :ELV143

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference that may be received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.