

RAV-1/2358

THE PARAMOUNT

DOUBLE 8 INCH WIRELESS SPEAKERS WITH LED LIGHTS



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY

AND RETAIN FOR FUTURE REFERENCE

Getting Started

- Remove the product from the packaging.
- Please retain all packaging until you have checked and counted all the parts and the contents against the Package Contents list.

Package Contents

- Double 8 Inch Wireless Speakers With LED Lights
- Type-C Charging Cable
- 3.5mm Aux Cable
- Wired Microphone
- Remote Control
- Instruction Manual

 
Key Features

- Support: Bluetooth, Micro SD, USB Slot, Aux, FM, TWS, Mic Input
- Power: 20W
- Bluetooth - 5.3
- Working distance - 15 meters
- Frequency response: 80Hz - 16KHz
- Speaker: 8" x 2

SAFETY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the speaker.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.


Description of Parts

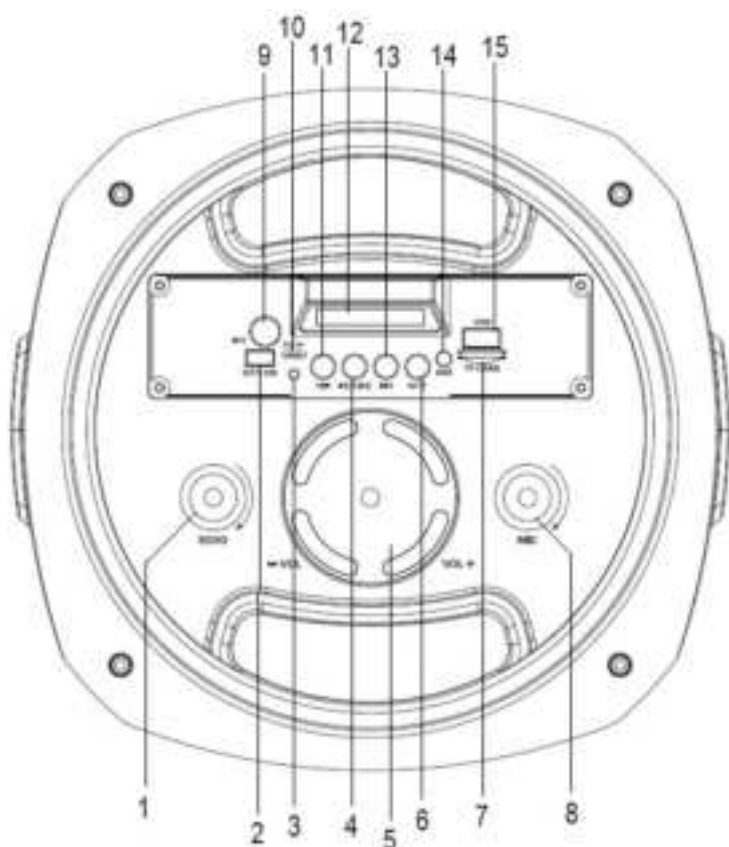

Number	Item	Function
1	ECHO KNOB	Increase/decrease echo level
2	POWER ON/OFF SWITCH	Turn On/Off Speaker
3	CHARGING INDICATOR	Indicates the charging status
4	PLAY/PAUSE/SCAN/TWS	PLAY/PAUSE/scan FM radio stations (only in FM radio mode)/TWS pairing and unpairing
5	VOLUME KNOB	Increase/decrease speaker volume
6	MODE/LIGHT BUTTON	Short press to change the mode between Bluetooth / USB / TF / AUX / FM radio, Long press to turn on/off the color changing LED light
7	MICRO SD (TF) CARD SLOT	Micro SD (TF) card input
8	MIC VOLUME	Increases/decrease the microphone volume
9	MIC INPUT	Microphone input
10	DC 5V IN	Charging port
11	PREVIOUS TRACK/STATION	Bluetooth/USB/TF card mode: Skip to previous track, FM radio mode: Skip to the previous already saved radio station

12	LED DISPLAY	Indicate the present function
13	NEXT TRACK/STATION	Skip to the next track in Bluetooth/USB/TF card mode, skip to the next radio station in FM radio
14	AUX IN	External audio input
15	USB SLOT	USB input (Flash Drive)

 Remote Control

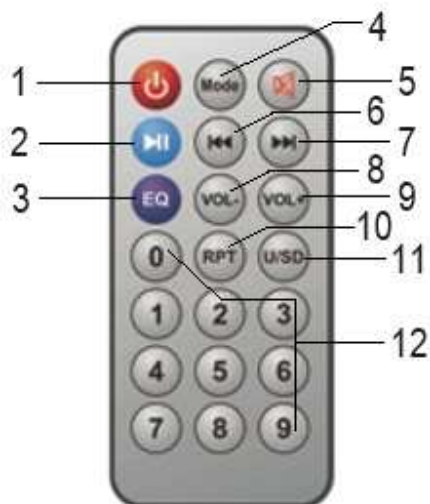


Number	Function	Operation
1	On/Off	Short press to turn on/off the speaker
2	Pause	To play/pause the music from Bluetooth/USB/TF card mode playing
3	EQ	Short press to choose your favorite EQ: Normal, Pop, Rock, Jazz, Classic or Country from USB/Micro SD (TF) function
4	Mode	Short press the button each time to change the mode between Bluetooth / USB / TF / AUX / FM radio
5	Mute	Turn output sound on/off
6	Previous track/station	Bluetooth/USB/TF card mode: press the button to the previous track, FM radio mode: skip to previous saved radio station
7	Next track/station	Bluetooth/USB/TF card mode: press the button to the next track, FM radio mode: skip to next radio station
8	Volume decrease -	Press and hold the button will decrease the volume
9	Volume increase +	Press and hold the button will increase the volume

10	Repeat	Repeat one/all songs from USB/Micro SD (TF) mode playing
11	USB/Micro SD (TF)	Switching between USB and Micro SD (TF) mod playing
12	Numeric buttons	Press numbers and it will move to track/station number from USB/Micro SD (TF)/FM radio function


Battery Installation

 While using for the first time, remove the insulation tab from the battery compartment of the Remote Control.

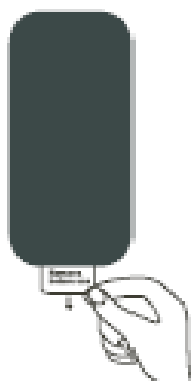

Remote Control includes the battery (1 CR2025/32 Lithium battery); when battery is drained, replace battery as below:

 1. Remove the screw at the back.
2. Pull the battery tray out of the battery compartment of Remote Control.
3. Place new CR2025/32 button cell battery in the tray slot, as per the indicated polarity.
4. Close the battery tray and secure back the screw.

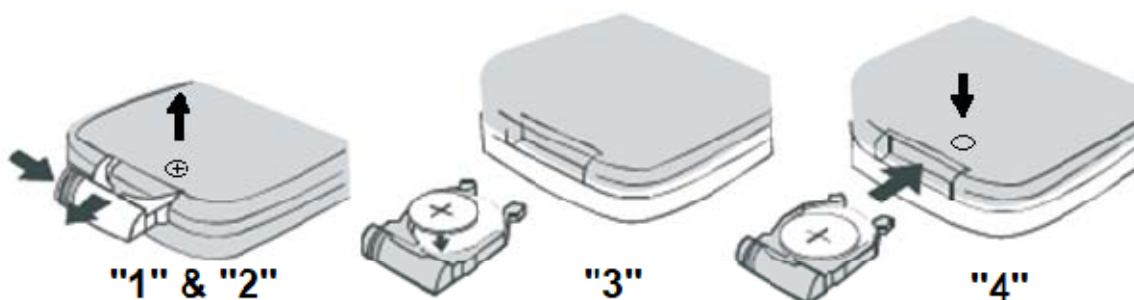

WARNING

This product contains a Button Cell Battery. A swallowed Button Cell Battery can cause internal chemical burns leading to death in as little as two hours. Dispose of used batteries immediately. Keep new and

used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Do not mix with used or other types of batteries.

INSTRUCTIONS FOR USE

Charging the Speaker

For best results, fully charge the unit before use.

1. Connect the Type-C charging cable (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It takes about 3 to 5 hours to fully charge the speaker.

Turn On/Off the Speaker

Slide the POWER ON/OFF SWITCH to ON position to turn on the unit with color changing LED lights, or OFF position to turn off the unit.

Pairing your device with the Speaker –

Your **Wireless Speaker** can stream audio from any Bluetooth enabled device within the range of up to 10 meters. Simply follow the below steps.

1. Rotate the volume knob to your favorite sound level.
2. Turn ON the speaker.
3. LED display will show 'HIFI' and then 'bLUE' and indication tone would be heard. The speaker is now entering "pairing" mode.
4. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
5. It will search for available Bluetooth devices.
6. The Bluetooth Speaker would appear as "**SL PARAMOUNT**", in the list of searched devices. Select it from the available list of devices.
7. You might be prompted with "Pair with **SL PARAMOUNT**?" message on your source device, with "Cancel" and "OK" options. Please click "OK".
8. If required, enter the password '0000' to confirm pairing.
9. Once paired successfully, another indication tone would be heard.
10. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat above steps.

Play your favorite song on the Bluetooth source device and music would now stream through the speaker.

Listening to Wireless Music

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to

stream wireless music. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Turn VOLUME KNOB to adjust the volume to your desired level, or Adjust volume from the source device (in Bluetooth mode only).
Pause	Playing music	Short press PLAY/PAUSE button once to pause music
Play	Pause	Short press PLAY/PAUSE button once to resume music
Previous track	Playing music	Short press the PREVIOUS TRACK/STATION button to the previous track
Next track	Playing music	Short press the NEXT TRACK/STATION button to the next track

TWS pairing use (if you own 2 Wireless Paramount Speakers)

- Make sure both Paramount speakers are “ON” and not paired with any Bluetooth device. An indication tone would be heard from each speaker.
- Choose either one as your master speaker.
- Long press the TWS button on master unit.
- Both units will wirelessly connect with each other, and you would hear an indication tone after they pair together successfully.
- Activate the Bluetooth function on your source device (Mobile Phone, Tablet etc.). Please refer to manufacturer’s instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find “**SL PARAMOUNT**” – Pair it with this device.
- You might be prompted with “Pair with **SL PARAMOUNT?**” message on your source device, with “Cancel” and “OK” options. Please click “OK”.
- If required, enter the password “0000” to pair with the device.
- Once paired successfully, an indication tone would be heard.
- You can now stream wireless music on your speaker through your source device.

Note: TWS stands for True Wireless. If you want to separate 2 speakers again for individual use, long press the TWS button on any one speaker.

Listening to Music using USB / Micro SD (TF) Card Slot

1. Turn on the speaker.

2. Insert USB flash drive into the USB slot or Micro SD (TF) card into the Micro SD (TF) card slot accordingly. An indication tone would be heard, LED display will show 'USB' or 'Sd' and then 'USB' or 'TF' with music would play automatically with LED display showing track number & then music time.
3. Short press the NEXT TRACK/STATION button or PREVIOUS TRACK/STATION button to move forward or backward on your playlist.
4. Short press PLAY/PAUSE/SCAN button to Play or Pause a track.

Note: USB / Micro SD (TF) Card: Supports up to 16GB; Supports music file format: MP3, WAV. USB Flash Drive or Micro SD (TF) Card not included.

Listening to Music using AUX-In

1. Turn on the speaker.
2. Plug the 3.5 mm Aux-in cable (included) into the AUX-In port of the speaker, and the other end of the cable to the audio device (such as computer / tablet / MP3 Player etc.).
3. Select your favorite song at the source device to play.
4. Short press the MODE button each time until it reaches AUX mode with LED display showing 'AUX', you would hear the playing music from the source device.

(Note: While using AUX-In function, except volume function, all functions such as playing next/previous track can be controlled only through your source device).

Listening FM radio

1. Turn on the speaker.
2. Short press the MODE button each time until it reaches FM radio mode, LED display will show a FM radio frequency with sound.
3. Short press the SCAN button for searching and recording all radio stations within frequency range 87.5-108MHz.
4. Short press the NEXT TRACK/STATION button or PREVIOUS TRACK/STATION button for listening next or previous already saved radio station.

Tips!!

1. Short press the MODE button to switch different functions of the speaker. The functions are – Bluetooth / USB-Micro SD (TF) / AUX / FM radio.
(Note: This switching function cannot work in TWS pairing use.)
2. When the speaker is not in use, turn OFF the device to save the battery power.
3. Do not overcharge the speaker.

Color Changing LED lights

1. Turn on the speaker.
2. Long press the "LIGHT" button to turn on/off the color changing LED lights.

Using the Microphone

1. Turn on the speaker.
2. Insert the plug of the Microphone (included) into the MIC INPUT of the speaker.
3. Turn on the Microphone, and speak for megaphone operation or sing for Karaoke operation.
4. Rotate the MIC volume and echo knobs to adjust your favorite volume level with echo.

Do's and Don'ts

- Do not play music at excessive levels as damage to hearing and/or equipment may result.
- Do not use outdoors in wet or in damp surroundings.

Care and maintenance

Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives.

Keep this unit away from wet or damp surroundings.

Product Specifications:

Bluetooth version : 5.3

Speaker output : 2x10W

Unit size : 10.8" (L) x 10.1" (D) x 29.0" (H)

Unit weight : ~8.9 lbs

FM frequency range : 87.5-108MHz

Power input : DC 5V

Charging time : About 3-5 hours

Play time : 2-3 hours (moderate volume)

Built-In Rechargeable Lithium Battery: 3.7V / 2400mAh

USB / Micro SD (TF) Card: Supports up to 16GB, supports music file format: MP3, WAV

(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
	Battery dead	Charge Battery.
No sound	Volume in minimum position.	Turn the VOLUME knob to increase the volume.
	The connected device is not in play mode.	Play the music in the connected device and make sure the volume level is in high level.
	Input source incorrect.	Press the MODE button to set the input source to the desired function.
Sound distortion	Volume level too high	Turn the VOLUME knob to decrease the volume.

FCC Instructions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.