FOR HEL MET WALKIE TALKIE ( YE 24)

YICK SHUN ELECTRONIC TOYS MFY. LTD. FCC ID: J7IYS215 JOB #: 88ZH1

## ¥9-981(T)

## WALKIE TALKIE FEATURES

- USES 4 PCS. UM-3, UE 1.5V, SIZE "AA" BATTERIES
- ON/OFF SWITCH
- LED POWER INDICATOR
- FLEXIBLE ANTENNA

## HOW TO OPERATE

- To put batteries into one pair of walkie talkie, open battery compartment (fig.4) with a screw driver by turning the opener 45 degrees to the right direction and snap in 2 pcs.
   UM-3, UE 1.5V size "AA" battery to each walkie talkie. Replace the cover firmly with a screw driver by turning the opener back 45 degrees to the left direction.
- 2. Put the walkie talkie headset on your head.
- 3. To operate the walkie talkie, switch the power ON/OFF (fig.3) to "ON". The LED Lamp ON indicator (Fig.6) will then light up.
- 4. Talking through the mic (fig.5) and listening through the speaker (fig. 2) can now be executed simultaneously.
- 5. To turn off the unit, switch the Power On/Off (fig. 3) to "OFF"

## **CAUTION:**

- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries
- Replacement of batteries must be done by an adult.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries
- Only batteries of the same or equivalent type as recommended are to be used

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modification could void the user's authority to operate the equipment.

Note: picture is not for Ys 215



