Safety precautions 3 Safety Information 5 Antenna care 5 Phone operation 5 Electronic devices 6 SAR (Cell Phone Designation) 9 Overview of the phone 11	Text entry Text Modules Default Book New Entry> Call (search for an entry) Change entry	34 35 36
Overview of the phone 11 Display symbols (selection) 15 Getting started 17 Insert SIM card/battery 17 Charge battery 18	Change entry Addressbook	39 40 41
Switch on, off/PIN entry 19 Switching on your phone 19 for the first time 19 Signal strength 20 Standby mode 20	Addressbook menu	42 43
General instructions 21 User guide 21 Menu controls 21 Security 23	Durat/Charges	46 47
My phone 25 Calling 26 Dialing with number keys 26 End call 26 Set volume 26 Redial previous numbers 26 When the number is busy 27 Accept call 27 Reject call 28 Speakerphone 28 Swap 28 Multi Party 30	Picture&Sound	48 49 50 51 53 56

Contents

2

Siemens AG 2001, I:\Mobil\L55\SL56\long\von_[itl]\SL55_Fugu\V2.fm

E-mail 59 Missed Alarms 100 Write/send e-mails 59 Voice Memo101 Receive e-mail 60 Time Zones102 Read new e-mail 60 P Extras103 Lists 61 Alarm Clock103 Message profiles 63 Calculator103 Stopwatch104 SMS profile 63 Countdown105 MMS profile 64 Camera (Accessories)105 Voice command107 CB Services 67 Remote synchronization 108 Surf & Fun 68 Fast access key110 Internet browser (WAP) 68 Tile Manager112 Games & More 71 Print via.../Send via 114 🔑 Setup 74 Display 74 Notes A-Z115 Tones/Alerts 76 Siemens Data Suite123 Kevs 78 Ouestions & Answers124 Phone Setup 79 Customer Care127 Clock 82 Specifications128 Connectivity 83 Exposure to radiofrequency Security 86 signals128 Network 87 Technical data128 Accessories 89 Trademarks128 ProSlide90 Care and maintenance129 🏋 Profiles91 Accessories130 U.S. FDA132 1 Organizer 94 FCC/Industry Canada Notice ...138 Calendar 94 Appointments 96 Ten Driving Safety Tips139 Intellectual Property141 Notes 99 Index142

© Siemens AG 2001, I:\Mobil\L55\SL56\long\von_[it]\SL55_Security.fm

Safety precautions

NOTE:

Review these operating instructions and safety precautions carefully before use.



Do not use mobile phone in hospitals or in the vicinity of medical devices, such as pacemakers or hearing aids. Mobile phones may interfere with the operation of these devices. Keep a minimum distance of 6–8" between pacemaker and mobile phone. When using the mobile phone hold it to the ear farthest from the pacemaker.



Always use the handsfree kit to make calls while driving (p. 131).



Turn off mobile phone while aboard any aircraft. To prevent accidental activation, see (p. 92).



Do not use mobile phone near gas stations, fuel depots, chemical plants or blasting operations. Mobile phones may cause interference with the operation of technical installations.



The ring tone and hands-free speaker are reproduced through the earpiece. Never hold the handset to your ear when the handset is ringing or when using the hands-free speaker mode. Serious and permanent damage could occur to your hearing!



Caution! SIM card may be removed. Small parts could be swallowed by children.



Do not exceed the mains voltage (V) specified on the power supply unit.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



Only use original Siemens batteries (100% mercury-free) and charging devices. Use of non-Siemens batteries and/or charging devices may cause explosion resulting in serious injury or property damage.



It is recommended that you open the phone only to replace the battery (100% mercury-free) or SIM card. Do not open the battery under any circumstances. Any other changes to this device may invalidate the FCC authorization required for operation of the unit, and are strictly prohibited.



Dispose of used batteries and phones in accordance with applicable laws and safety regulations.

Safety precautions



Mobile phones may interfere with the operation of nearby TVs, radios or PCs.

For body worn operation, this mobile phone has been tested and meets FCC RF exposure guidelines when used with a carry accessory that contains no metal and that positions the handset at least 0.001 cm from the body. Use of other carry accessories may not ensure compliance with FCC RF exposure guidelines.



Only use original Siemens accessories in order to avoid possible injury and property damage and to ensure compliance with applicable laws and regulations.

Improper use invalidates the warranty!

Safety Information

Important

Read this information before using your wireless handheld phone.

As this mobile phone is equipped with a fixed (non-retractable) antenna, some paragraphs in the below text may not be applicable.

Antenna care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone operation

Normal position

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on efficient operation

For your phone to operate most efficiently:

- · Extend your antenna fully (if applicable).
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Laws pertaining to the use of mobile phones while driving vary significantly from state-to-state and sometimes even from locality-to-locality within states. For example, some areas may allow persons to use their mobile phones only if they employ a hands-free device, and some areas may prohibit the use of mobile phones entirely. Accordingly, Siemens recommends that persons check the laws for the areas in which they drive or will be driving. For areas where the use of mobile phones while driving is permitted, Siemens encourages persons to use their phones responsibly and to employ hands-free devices. Also, if using your phone while driving, please:

- Give full attention to driving driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call, if driving conditions so require.
- Review the Ten Driving Safety Tips set forth on p. 139.

Safety Information

For vehicles equipped with Air Bags

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Electronic devices

Most modern electronic equipment is shielded from radiofrequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturer's Association recommends that a minimum separation of six inches (6") be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers

- should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- should not carry the phone in a breast pocket;
- should use the ear opposite the pacemaker to minimize the potential for interference:
- should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider or your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturers of your devices to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Airplanes

FCC and Airline Regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an airplane.

Check and comply with the policy of your airline regarding the use of your phone while the airplane is on the ground.

Blasting areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Potentially explosive atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include: fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls (SOS)

Your wireless phone can be used to make emergency calls. You can make an emergency call from the main display screen. Enter the local emergency number such as 911 and then press the key.

This phone, like any wireless phone, operates using radio signals, wireless and landline networks, and userprogrammed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should never rely solely on any wireless phone for essential commu-

nications (for example, medical emergencies). Remember - to make or receive any calls, the phone must be switched on and be used in a service area that has adequate signal strength. Emergency calls might not be possible on all wireless phone networks or when certain network services or phone features are in use. Check with local service providers regarding their network features.

phone is properly charged before attempting any emergency calls. If you allow your battery to discharge, you will be unable to receive or make calls, including emergency calls. You must then wait a few minutes after the charging begins to place any emergency calls.

Always make certain that your

When making an emergency call, remember to give all of the necessary information as accurately as possible. Remember that your wireless phone might be the only means of communication at the scene of an accident, therefore you should not terminate the call until given permission to do so.

SAR (Cell Phone Designation)

RF EXPOSURE /SPECIFIC ABSORPTION RATE (SAR) INFORMATION

THIS SIEMENS SL56 PHONE MEETS THE GOVERNMENT'S REQUIRE-MENTS FOR EXPOSURE TO ELECTRO-MAGNETIC FIELDS.

Your cell phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy established by the Federal Communications Commission (FCC) of the U.S. Government and by Health Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed and confirmed by independent scientific organizations through periodic and thorough evaluation of scientific studies*. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for cell phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit established by the FCC and by Health Canada is 1.6 W/kg**. Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified

power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output. Before a phone model is available for sale to the public, it must be tested and the manufacturer must certify to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body), reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when testest for use at the ear is

1.13 W/kg***

and when worn on the body⁺ is 1.11 W/kg***

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Internet Association (CTIA) web-site at www.phonefacts.net or the Canadian Wireless Telecommunications Association (CWTA) website www.cwta.ca.

SAR information on this Siemens SL56 phone is on file with the FCC and can be found under the Display Grant section of

http://www.fcc.gov/oet/fccid after searching on FCC ID PWX-SL56.

10 SAR (Cell Phone Designation)

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the governmental requirements for safe RF exposure.

- + For body worn operation, this mobile phone has been tested and meets FCC RF exposure guidelines when used with a carry accessory that contains no metal and that positions the handset at least 0.001 cm from the body. Use of other carry accessories may not ensure compliance with FCC RF exposure guidelines.
- * The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland), on the basis of the actual knowledge, does not see any necessity for special precautionary measures when using cell phones.
 Further information:
 www.who.int/peh-emf,
 www.mmfai.org,
 www.my-siemens.com.
 - ** averaged over 1 g of tissue.
- ***SAR values may vary depending on national requirements and network bands. SAR information for different regions can be found at www.my-siemens.com

Overview of the phone

- ① Loudspeaker
- ② Display icons

Signal strength/GPRS available/battery level.

3 Control key

See next page.

4 Input keys

Numbers, letters.

S Microphone

6 Integrated antenna

Do not interfere unnecessarily with the phone above the battery cover. This reduces the signal quality/signal strength.

⑦ Dictation key

(in standby mode):

Hold **down**: record. Press **briefly**: play back.

8 Plus/minus side key


- · During a call: volume loud-quiet.
- In menus, lists and WAP pages: scroll up and down.
- In standby mode: Press side key at top briefly: show profile selection. Hold down key at bottom: start voice control.

9 Infrared interface

(IrDA, e.g. for communication between PC/PDA and cell phone).

Device interface

Connection for charger, headset etc.

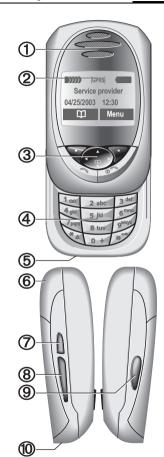

12

Overview of the phone

① Soft keys

The current functions of these keys are shown in the bottom line of the display as text or symbols (e.g. 1111).

② Control key

In the main menu:

(p) Navigation.

In lists and menus:

Scroll up/down.

Menu level back.

During a call:

(# P) Open call menu.

In standby mode:

Voice control (hold down). Open Address/Phonebook.

Select function.

Open menu.

GPRS info

3 Call key

Dial phone number/name displayed, take calls. Shows last 10 phone numbers dialed in standby mode.



Overview of the phone

① ① On/Off/End key

- · Switched off: hold down to switch on.
- During a conversation or in an application (except for Surf&Fun): press briefly to finish.
- In menus: press briefly to go back a level.
 Hold down to go back to standby mode.
- In standby mode: if the keylock is disabled, hold down to switch off the phone if the keypad is closed.
- Keylock in standby mode, keypad closed: press briefly to lock keypad.
 Press briefly and confirm with OK to unlock the keypad.

🛭 🐚 Hold down

- In standby mode: switch all audible signals on/off (except alarm).
- For incoming calls: only switch off ring tones.

3 Hold down

In standby mode: Lock or unlock keys.



Note

Your phone's display is delivered with a protective film.

 
Remove this film before getting started.

Siemens AG 2001, I:\Mobil\L55\SL56\long\von_[it]\SL55_Overview.fm

Overview of the phone

Open keypad:

- · Light on.
- Keypad unlocked.
- · Opening melody on (if set).
- · The call is accepted.
- Alarm sound off (appointment, alarm).



Close keypad:

- · Back to standby mode.
- · Light off.
- Keypad locked (if set).
- · Closing melody on (if set). · The call is ended.
- · The call is rejected.
- Alarm sound off (appointment, alarm).



Display symbols (selection)

15

Display	symbols	*	No network access.
	Signal strength.	V ,	Function activated/deactivated.
	Charging.	ß	Phonebook/Addressbook.
	Battery charging status.	ABC/	Indicates whether upper or lower-
	Standard directory (Phonebook/Addressbook).	Abc/ abc	case letters are active.
	Call lists.	■Abc	Text input with T9.
•	Surf & Fun.	D.	IrDA activated.
1	Organizer.	Dm	IrDA during transmission.
\searrow	Messages.	GPRS	Activated and available.
-XX	Profile.	GPRS	Registered.
	Extras.	GPRS▶	GPRS Download.
	File system.	3 2	WAP online.
	Settings.	GP	WAP via GPRS online.
10	All calls are forwarded.		WAP No network.
_\Z	Ringer off.	ีด	Headset mode.
ÐΠ	Short ring (beep) only.	17	Auto answer feature on.
→ ¦Ç	Ringer only if caller is stored in the Phonebook/Addressbook, or is a	Organiz	er/Extras symbols
	member of a group.		Memo.
.	Alarm set.	0	Call.
((·	Alarm clock activated.	8.8	Appointment.
- 0	Key lock activated.	- I	Dictating mach./Voice memory.
	Phone numbers/names:		Birthday.
•	On the SIM card.		Alarm clock/stopwatch.
- 0	On the SIM card (PIN 2 protected).		

In the phone memory.

© Siemens AG 2001, I:\Mobil\L55\SL56\long\von_[itl]\SL55_DisplaySymbols.fm

16 Display symbols (selection)

Soft keys	
\searrow	Message received.
00	Voice mail received.
	Data received.
	Picture received.
٥	Melody received.
(-j	Unanswered call.
→ □	Store in Phonebook/Address-book.
Ф+	Retrieve from Phone/Address-book.
	Change Phonebook/Address-book.

Getting started

Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

 Press the lock ①, then remove the battery upwards in the direction of the arrow ②.



 Insert the SIM card in the opening with the contact area facing downwards and push gently until it engages below the holder (make sure the angled corner is in the correct position



• Insert the battery in the lower edge **4**, then press downwards **5** until it engages.



Remove SIM card

Remove the battery. First push the SIM card ③ gently through the slot for the holder and at the same time lift it up slightly ② on the other side. Then remove the SIM card completely.



Additional information

Always switch off the phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provider, if you have an older card.

Functions with SIM cardp. 122

Getting started

Charge battery

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a power socket power socket and charge for at least **two hours**.



Display when charging is in progress



During charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within the temperature range 41 $^{\circ}$ F to 104 $^{\circ}$ F. At 41 $^{\circ}$ F above or below, the charge icon blinks as a warning. The mains voltage specified on the power supply unit must not be exceeded.

Charge icon not visible

If the battery is totally discharged, no charge icon is displayed when the charger is plugged in. It will appear after two hours at most. In this case the battery is fully charged after 3–4 hours.

Only use the charger provided!

Display while in service

Charge level display during operation (empty-full):







A beep sounds when the battery is nearly empty. The battery level is only shown correctly during an unbroken charging/discharging cycle. You should therefore not remove the battery unnecessarily and where possible not finish the loading process early.

Additional information

The charger heats up when used for long periods. This is normal and not dangerous. Outside your own home networkp. 118 Performance..................p. 119

Switch on, off/PIN entry

Activate/deactivate



Hold **down** On/Off/End key to switch on or off.

Enter PIN

The SIM card can be protected with a 4–8 digit PIN.



Open keypad. Enter the PIN using the number keys. The characters **** are shown, to ensure that nobody can read your PIN on the display. Correct errors with Clear.



OK

Confirm entry with right soft key. Logging on to the network will take a few seconds.

Additional information	
Change PIN	p. 23
Other network	p. 88
SIM card problems	p. 120
Clear SIM card barring	n 24

Switching on your phone for the first time

Contrast



Set display contrast.

Time/Date

The clock can be set to the right time once at start-up.



Press.



Open keypad. First enter the date (day/month/ year), then the time (12 hours, including seconds).

OK

Press. The time and date are updated.

Time Zones

Set the time zone for your area.



Select the required time zone from list ...

Set

... press to set.

Additional information

If the battery is removed for longer than seconds, the clock must be reset.

Additional clock settingsp. 82

Switch on, off/PIN entry

Phonebook or Addressbook

You can choose whether you want to use the **Phonebook** on the SIM card or the internal **Addressbook** as standard.

You can copy the SIM card Phonebook to the Addressbook on the phone. Please **do not interrupt this procedure**. During this time **do not accept incoming calls**. Follow instructions on the display.

To copy data on the SIM card at a later time, highlight entries (see p. 117) and copy these with the function "Copy Into "" (Phonebook options menu p. 37).

You can change the standard phone-book at any time (p. 35).

Signal strength.



Strong receive signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the soft key SOS, you can make an emergency call on any network without a SIM card and without entering a PIN (not available in all countries).

Standby mode



When the name of the service provider appears on the display, the phone is in **standby mode** and **ready for use**. If you now close the keypad, the phone remains in standby mode.

The left soft key may have different functions pre-assigned.



Hold **down** the On/Off/End key to return to standby mode from any situation.

Additional information By SIM services (optional).....p. 109

General instructions

© Siemens AG 2001, I:\Mobil\L55\SL56\long\von_[itl]\SL55_Startup.fm

User guide

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key.



Press the control key on the side indicated



Soft keys.



Displays a soft-key function.



Function dependent on service provider, may require special registration.

Menu controls

The steps needed to reach a function are shown in a **condensed form** in this user guide, e.g. to display call list for missed calls:



This corresponds to:







Menu

Open menu.

From standby mode: press right soft key.







Call Log Select.

Press top of control key.

General instructions









Press.

Press **right** soft key to open the **Call Log** submenu.







Press.

Press right soft key to open the Missed Calls list.







Scroll to the required entry.

Press control key at the bottom to scroll down.







Press.

Press **left** soft key to show phone number with date, time and number of calls.



View



Security

Codes

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions requiring special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.

Security Menu →

PIN Control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorized use of the phone. Some service providers do not permit deactivating the control.



Enter current PIN.

OK Press.

remember

LL OK Repeat new PIN.

Change PIN2

(display only if PIN 2 is available). Proceed as with Change PIN.

Enter new PIN.

Security



Chg.Phonecode



You define and enter the phone code (4–8 digits) when you call up a phone-code protected function for the first time. It is then valid for all phone-code protected functions.

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN), provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Additional information

Screensaver.....p. 75

Keylockp. 78

Further security settings.....p. 86

Change your phone to match your personal requirements.

Ring tones

Assign individual ring tones to caller groups or for special dates (p. 77).

Animations, screensavers, logos, applications

Adjust your phone in the following ways to give it a personal touch and make it just how you want it:

Animations

Choose a start-up and closing animation (p. 75) as well as a personal greeting (p. 75).

Screensaver

Choose an analog clock or a personal picture (p. 75).

(Provider) logo

Choose an individual picture (p. 74) to be displayed in standby mode.

Background image

Choose your own permanent background image (p. 74).

Applications

Download your own applications from the Internet (p. 71).

Color scheme

Choose a color scheme for the entire service system (p. 74).

Where do I get what?

You can order additional ring tones, logos and screensavers on the Internet and receive them by SMS/MMS:

www.my-siemens.com/ringtones

www.my-siemens.com/logos

www.my-siemens.com/screensaver

www.my-siemens.com/animations

Or you can download them direct via WAP:

wap.my-siemens.com

Siemens City Portal

Further applications, games and services for your mobile phone (e.g. a Photo Logo Composer to create personal pictures for your Addressbook) can be found at:

www.my-siemens.com/city

The Siemens City Portal also provides a list of countries in which these services are available.

Favorites

Create your own menu with frequently used functions, phone numbers or WAP pages (p. 93).

Calling

Dialing with number keys

The phone must be switched on (standby mode) and the keypad must be open.



Enter number (always with area code, if necessary with international dialing code).

Clear A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key. The displayed phone number is dialed.

End call



Press End key **briefly**. The call is ended. Press this key even if the person on the other end of the line has hung up first.

Or

Close keypad.

Set volume

Using the plus/minus side key (press top/bottom), adjust the volume (only possible during a call).

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

To redial the phone number **last** called:



Press Call key twice.

To redial other numbers that were dialed previously:



Press the Call key once.



Pick out the required phone number from the list, then press ...

... to dial.

Additional information Save phone number in Addressbook/Phonebookp. 36, p. 39 Options Call lists.....p. 44 Holdp. 28 menu Call menu.....p. 30 Forward Set forward.....p. 79 Speaker, Speakerphone.....p. 28 Microphone on/offp. 30 Voice dialing.....p. 42 Auto Key Lockp. 78 Phone number transmission off/on (Hide ID).....p. 79 International dialing codes.....p. 117 Phone number memo.....p. 119 Control codes (DTMF).....p. 115

When the number is busy

If the number called is busy or cannot be reached because of network problems, several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Fither

Automatic Redial previous numbers

Auto Dial

Press. The phone number is automatically dialed ten times at increasing time intervals. End with:

Or

Call back

Call back

Press. Your phone rings when the busy number is free. Press the Call key to dial the number.

Reminder

Prompt

Press. A beep reminds you to redial the displayed phone number after 15 minutes.

Accept call

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone.

If the keypad is closed, press the soft key Mute to disable the ringer for the current call.



Answer

Press.

Or

Press.

Or

8

Open keypad.

The phone number is displayed if transmitted by the network. If the caller's name appears in the Phonebook or Addressbook, this will appear instead of the number. If set, a picture can be displayed instead of the bell icon (p. 39).

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ring tones!

Calling

Reject call

Reject

Press. The call will be forwarded if this has been set previously (p. 79).

Or



Press briefly.

Or

Close keypad.

Additional information

(i) Missed calls	p. 44
Accept call using any key	p. 78
Switch off ringer	p. 120

Speakerphone

You can put the phone aside during a call. You can then hear the caller via the loudspeaker.



Speaker.

Activate handsfree talking.

Yes

Switch on.



Use the plus/minus side key to regulate volume.

Speaker. Deactivate.

Warning!

To avoid damage to hearing **always deactivate "handsfree talking"** before holding the phone to your ear! This will avoid damage to hearing!

You may notice a decrease in the overall talk/standby time depending on the amount of time the speakerphone is used.

menu Call menup. 30

Swap



Establish a second connection

You can call another number during a call.

/ menu

Open call menu.

The current call is put on hold.



Now dial the new number (Phonebook/Addressbook ().

When the new connection is established:

🖍 menu

Open call menu.

Swap

Swap back and forth between the calls.

· End current call



End the current call and press Yes. You are now connected to the caller.

· End both calls

Close keypad.

Incoming calls during a call

During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You may need to register for this service with your service provider and set your phone accordingly (p. 79).

You have the following options:

Accept the waiting call



Accept the waiting call and put the current call on hold. To swap between the two calls, proceed as above.

End call

Press the End key ① .
The following is displayed: "Return to call on hold?"

Accept the waiting call by pressing Yes.

Ô٢

End the second call also by pressing No.

· Reject waiting call

Reject

Reject the waiting call.

Or

Forward

The waiting call is forwarded, for example, to mailbox.

 Accept the waiting call and end the current call



End the current call.

Answer

Accept new call.

· End both calls

Close keypad.

Calling

Multi Party



Call up to 5 parties one by one and link them together in a conference call. Some of the functions described may not be supported by your service provider or may have to be enabled specially. You have established a connection:

menu

Open menu and select Hold. The current call is put on hold.



Now dial a new number. When the new connection is established ...



... Open menu and select Multi Party. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

End



All calls in the conference finish simultaneously when the End key is pressed.

Or

Close keypad.

Call menu

The following functions are only available during a call:

menu Open menu.				
Swap	(p. 28)			
Hold	(p. 28)			
Microphone	Switch microphone on/off. If switched off, the person on the other end of the line cannot hear you (muting). Also: hold down.			
Speaker- phone	(p. 28)			
Volume	Adjust handset volume.			
Multi Party	(See above)			
Send DTMF	(p. 115)			
Durat/Charges	Display call duration and (if set, p. 46) costs accuring during the connection.			
Call transfer	The original call is connected to the second one. For you, both calls are now ended.			
Main Menu	Access to main menu.			
Call Status	List all held and active calls (e.g. conference call participants).			

Text entry

Enter text without T9

Press number key repeatedly until the required letter appears. The cursor will jump forward after a brief interval. Example:



Press briefly once for **a**, twice for **b** etc. The first letter in each name is automatically written in upper case.

Hold down to write the number, in this case 2.

Ä,ä/1-9

Special letters and numbers are displayed after the relevant letters.



Press briefly to delete the letter before the cursor, hold down to erase the whole word.



Move the cursor (forwards/back).



Press briefly: Swap between abc, Abc, ^{T9}abc, ^{T9}Abc, ^{T9}ABC, 123. Status shown in top line of display.

Hold down: All input modes are displayed.



Press briefly: Select special characters.

Hold down: Open input menu.



Press once/repeatedly:

.,?!'"0-()@/:_

Hold down: Writes 0.



Writes blank. Press twice = jumps a line.

Special characters



Press **briefly**. The symbols chart is displayed:

1)	ż	i	_	;		,	?	!	+	-
"	,	:	*	1	()	n	¥	\$	£
€	@	١	&	#	[]	{	}	%	~
<	=	>		٨	§	Γ	Δ	Θ	٨	Ξ
π	Σ	Φ	Ψ	Ω						

1) Line skip



Navigate to character.

Select

Press.

Input menu

With text input:



Hold **down**. The input menu is displayed:

Text Format (SMS only)

Input language

Mark Text

Copy

Text entry

Text input with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options Open text menu.

T9 Input Select.

T9 Preferred

Select.

Change Activate T9.

Select Input language

Select the language in which you want to compose your message.

Options

Open text menu.

T9 Input Select.
Input language

select.

Select

Confirm, the new language is set. Languages with T9 support are marked by the T9 symbol.

T9 language versions

If you want to load a dictionary in another language, you will find a large selection to download from the Internet as well as installation instructions under:

www.my-siemens.com/t9

Write a word using T9

Since the display changes as you proceed

it is best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:

press briefly for ^{T9}**Abc** then type







Press. A blank ends a word.

Do not use special characters such as Ä but write the standard character, e.g. A; T9 will do the rest for you.

Additional information



Entering a period finishes a word, if it is followed by a blank. Within a word, a period represents an apostrophe or hyphen:



e.g. provider.s = provider's. Go to the right: Ends the word.

Press briefly: Swap between abc, Abc, ABC, T9abc, T9Abc, T9ABC, 123. Status shown in top line of display.

Hold down: All input modes are displayed.



Press briefly: Select special characters (p. 31).

Hold down: Open input menu (p. 31).

Text entry

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognized, the next suggestion from T9 may be correct.

The word must be highlighted. Then press



again. The displayed word is replaced with a different word. If this word is also incorrect,



press again. Repeat until the correct word is displayed.

If the word you want is not in the dictionary, it can also be written without T9.



To add a word to the dictionary:



Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press Save to add it automatically to the dictionary.

Correct a word

Words written with T9:



Move left or right, word by word, until the required word is highlighted.



Scroll through the T9 word suggestions again.

Clear

Deletes the character to the left of the cursor **and** displays a new possible word!

Words not written with T9:



Move letter by letter to the left/right.



Deletes the letter to the left of the cursor.



Letters are inserted at the cursor position.

Additional information

Within a "T9 word", individual letters may not be edited without first removing T9. In most cases it is better to rewrite the complete word.

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5, 818, 437, 5, 953, 541, 5, 187, 480, 5, 945, 928, and 6, 011, 554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro. Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Select

Text entry

Text Modules

Text modules can be stored in the phone for adding to your SMS messages.

Write text modules

Menu → 🖂 → Text Modules

Options Select New Text.

Write text module.

Options Select Save.

Accept the default name or give it a new name, then save with OK.

Use text modules

Write message.

Options Open text menu.

Select Text Modules.

Select text module from the list.

Select Confirm. The text module is displayed.

Confirm. The text module is inserted in the message to the right of the cursor.



→ Select function.

Show Entries

Entries in the standard directory (Addressbook or Phonebook) are shown for selection.



Select a name with the first letter and/or scroll.

The number is dialed

<New Entry>

Create new entry in standard directory.

Phonebook (see p. 36) Addressbook (see p. 39)

Default Book

Select either Phonebook or Addressbook as your standard directory. Your preference should be for the Addressbook, because more entries and functions (e.g. pictures, birthdays, several phone numbers per entry, etc.) are possible.



Select Phonebook or Addressbook.

Select

Set as standard.

Groups

(see p. 43)

Businesscard

Create your own business card. Send this by SMS or infrared to another GSM phone or to a suitable PC/ printer.

If no business card has been created yet, you will be asked for your input.



Move from field to field to put in your details. You will find explanations of these input fields on p. 39 and p. 40.

Last name:	E-mail 2:	
First name:	URL:	
Phone:	Company:	
Phone/office:	Street:	
Phone/mobile:	ZIP code:	
Fax:	City:	
Fax 2:	Country:	
E-mail:	Birthday:	

Save Press.

Additional information

The content of the business card corresponds to international standards (vCard).

Copy numbers from Address-

Copy numbers from Addressbook/Phonebook.

Options See Addressbook menu,

(p. 41).

Service numbers

(see p. 119)

Phonebook

 
Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook. You can however exchange data between the Phonebook and the Addressbook.

<New Entry>

If the Phonebook is set as standard (Addressbook as standard, p. 35):



Open Phonebook (in standby mode).





<New Entry> Select.



Press.



Select input fields.



Fill in the input fields described below. The maximum number of letters available is displayed at the top of the screen.

Number:

Always enter phone number with prefix.

Name:

Enter first and/or last names.

Location:

Default: SIM



Select the storage location such as SIM or Protected SIM (p. 38).

Record no.:

Each entry is automatically assigned a record number. You can also dial using the record number (p. 37).



Change the record number.

Save

Press to store the new entry.

Additional information

Assign important phone numbers to group,

<SIM Phonebook> (p. 38), <Protected SIM> (p. 38),

<Service Numb.> (p. 119).

 
Call (search for an entry)



Open Phonebook.



Select a name with the first letter and/or scroll.



Call using record no.

A record number is automatically assigned to every new entry in the Phonebook.



Enter record number.

Press.

Press.

Change entry



Select entry in Phonebook.



Press and select Edit.



Select input field.

Edit.

Save Press.

Phonebook menu

The following functions are available, depending on the current situation. Some functions may be applied to the current entry as well as multiple highlighted entries:

Options

Open menu.

	peri mena.
View	Display entry.
Edit	Open the entry to edit.
New Entry	Create new entry.
Copy Into @	Copy new entry/entries into Address book.
Copy All to	Copy all entries into Address book.
Delete	Delete entry.
Delete All	Delete all entries after confirmation.
Mark	Activate selection mode, the entry currently selected is selected (p. 117).
Mark All	Activate selection mode, all entries are selected (p. 117).
Send/Print	(p. 114)
Import	Import entries and appointments via IrDA in vCard format.
Capacity	Display maximum and available capacity.

Siemens AG 2001, I:\Mobil\L55\SL56\long\von_[it]\\SL55_Phonebook.fm

Phonebook

Location:

An entry can be moved from one storage location to another.

SIM (Standard)

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

Protected SIM

⊗!

Phone numbers can be stored in a protected location on a special SIM card. The PIN 2 is needed for editing (p. 23).

Activate with the function Only [-0] (p. 86).

 
The Addressbook can store up to 500 entries, each with a variety of telephone and fax numbers as well as additional address details. These entries are managed separately from those in the Phonebook in the phone memory. However you can exchange data between the Addressbook and the Phonebook on the SIM card

<New Entry>

If the Addressbook has been selected as standard:



Open Addressbook (in standby mode).



Select

Press.





Enter first and/or last name.

Group

Entries can be organized by groups (p. 43). Select with Change.



Make further entries field by field.

_ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~	
Phone:	Company:
Phone/office:	Street:
Phone/mobile:	ZIP code:
Fax:	City:
Fax 2:	Country:
E-mail:	Birthday:
E-mail 2:	Reminder:
URL: (Internet address)	Picture:
Group:	

Picture

Select Assign an individual picture to an Addressbook entry. It is displayed if you are called by the corresponding phone number (see p. 112).

All fields

Select Show all input fields if the display was previously reduced (see p. 41, Addressbook menu, Field Setup).

Save

Save the entry.

Additional information

<Groups> Group functions (p. 43).

Birthday After entering the date of birth,

the "reminder box" can be activated. Now you can enter the date and time of the reminder in the organizer calendar

___ enual

Copy data from another Addressbook entry.

Import The phone is ready to receive multiple vCard entries via IrDA

(p. 114).

+List Copy international dialing

code from the list (p. 117).

Temporarily switch to Phone-book.

Synchronizing with a PC

Using XTNDConnect® PC (p. 123) you can synchronize your Addressbook with Outlook® or Lotus Notes™.

Using Remote Sync. you can synchronize your mobile with an organizer stored on the Internet (p. 108).

Read/change an entry



Open Addressbook (in standby mode).



Select required entry.



Press.





Select input field.

Edit

Save

Open entry.

Make changes.

Options See p. 41.

Save setting.

Right soft key:

When you jump from line to line while reading, the right soft key changes depending on the type of data. Press this key to activate the relevant application:

VoiceDial Voice dialing menu.(p. 42).

E-mail

Create e-mail. (p. 59).

Link Show Visit URL (p. 68).
Display respective picture.



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.

The number is dialed.

If an Addressbook entry has several numbers stored:

	Doe,	Johr			
<u></u>	0555	1234	54		
0	05559	9876	54		
	05552	2223	45		
			Sel	ect	



Ontions

Select phone number.

The number is dialed.

Addressbook menu

Depending on the actual situation, different functions will be offered. These functions can be applied to the entry currently selected as well as to multiple selected entries:

Орионо	орен шена.		
View	Display entry.		
Edit	Open the entry to edit.		
New Entry	Create new entry.		
Move to	Assign entry to a group.		

Copy to SIM	Copy entry/entries with name and selected phone number to SIM card.
Delete	Delete entry.
Delete All	Delete all entries after confirmation.
Mark	Switch on highlighting mode (p. 117).
Mark All	Activate highlighting mode, all entries are highlighted (p. 117).
Filter	Display only those Addressbook entries with the following criteria: • Voice dialing • E-mail • URL • Birthday • Bitmap
Business- card	Define an entry as your own business card.
Voice dialing	Apply voice dialing to an entry (p. 42).
Send/Print	(p. 114)
Import	Import entries via $IrDA^{TM}$ in $vCard$ format.
Capacity	Display maximum and available capacity.
Field Setup	Select input fields for new entry.

Voice dialing

Dial numbers by voice command. Up to 20 recorded names for voice dialing or voice commands (p. 107) can be saved on the cell phone (not on the SIM card).

Record



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.



Open menu.

Voice dialing

Select.



Choose phone numbers, if there are more than one.

Record

Press.

Start

Start recording.

A short signal sounds. Now speak the name. After a second beep and message in the display, repeat the name. A beep now confirms the recording, which is saved automatically.

Voice dialing menu

Depending on the actual situation, different functions will be offered.

Ontions

Options	Open menu.
Play	Play back a voice command.
New	Record a new voice command.
Delete	Delete voice command from an entry.
Delete All	After confirmation delete all voice commands for this entry

Apply voice dialing

Hold down the plus/minus side key (in standby mode).

Now say the name. The number is dialed

Additional information

Noisy environments may affect voice recognition. If attempt was unsuccessful, press the side key once more and repeat the name

Groups

 
9 groups are specified in your phone, to enable you to arrange your Addressbook entries clearly. You can rename seven groups.



Open Addressbook (in standby mode).

<Groups>

Select (the number of entries is listed behind the group name).





Select group.

Options

Open menu.

Rename Group

Select and give group a name.

Additional information

No Group: Contains all Addressbook entries that do not belong to a group (name cannot be changed).

Received: Contains vCard Addressbook entries received by IrDA or SMS (name cannot be changed).

SMS to group p. 49

Group menu

Options	Open menu.
Open	Display all members of the selected group. View Addressbook p. 40. Options See p. 41
Group Symbol	Assign a symbol to a group, see below.
Rename Group	Change name of group.
Move	Transfer one or more high- lighted entries from one group to another.
Delete All	After confirmation, delete all members of the current group.

Group Symbol

Assign to a group a symbol that appears on the display when one of its members calls you.



Select group.

Options

Open menu.

Group Symbol

Select.



Choose a symbol.



Confirm.

© Siemens AG 2001, I:\Mobil\L55\SL56\long\von_[it]\\SL55_Records.fm

Call Log

Your phone stores the phone numbers of calls for convenient redialing.







Select call list.



Press.



Select phone number.



Dial phone number.

Or



Display information on the phone number.

10 phone numbers can be stored in each call list:

Missed Calls



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Icon for missed call (in standby mode). Press the control key (on the left) to display phone number.

Requirement: The network supports the "Caller Identity" feature.

Received Calls



Accepted calls are listed. Requirement:

The network supports the "Caller Identity" feature.

Dialed Calls

Access to the last numbers dialed



Fast access in standby mode

Clear Log

The contents of all call lists are deleted

Call list menu

The call list menu can be called up if an entry is highlighted.

Options

Open list menu.

View	View entry.
Correct No.	Load number to display and edit there if necessary.
Copy Into 2	Store entry in the Address-book/Phonebook.
Delete	Delete entry after confirmation.
Delete All	Delete all entries in call list after confirmation.

▼ Voice mail/Mailbox



Most service providers supply an external voice mail service. A caller may leave a voice message for you in this mailbox

- if your phone is switched off or not ready to receive,
- · if you do not want to answer,
- if you are making a phone call (and Call Waiting is not activated, p. 79).

If voice mail is not part of your service provider's package, you will need to register and settings may have to be made manually. The following description may vary slightly, depending on the service provider.

Settings:

 


The service provider supplies you with two phone numbers:

Save mailbox number

Call this phone number to listen to the voice mails left for you.





OK Confirm.

Save call forward number

Calls are forwarded to this phone number.

Enter call forward number.



Registration with network. Forward will be confirmed after a few seconds.

Further information on call forward can be found on p. 79.

Listen to



A new voice mail can be announced as follows, depending on the service provider:

<u>~</u>

Icon plus beep.

Or



A text message announces a new voice mail.

Or

You receive a call with an automatic announcement. Call your mailbox and play the message(s) back.



Hold **down** (if necessary enter mailbox number once only). Confirm with OK or Mailbox depending on your service provider.

Away from your home network you may have to dial a different mailbox number and enter a password before you can listen to any messages.

46

Durat/Charges

You can display charge details and the duration of different types of calls while you speak, as well as setting a unit limit for outgoing calls.

Menu → 🗓 → Durat/Charges

Select type of call:

Last Call

All Calls

Remain. units

Select Display the data.

Once displayed you can:

Reset Clear display.

OK End display.

Charge Setting

Menu → □ → Durat/Charges → Charge Setting

Conv.

(PIN 2 prompt)

Enter the currency in which the charge details are to be shown.

Personal Rate

(PIN 2 prompt)

Enter the charges per unit/period.

⊘1

Acct. Limit

(PIN 2 prompt)

Special SIM cards allow you or the service provider to define a credit or a period after which the phone is barred for outgoing calls.

⊗!

Change Press, enter PIN 2.

Acct. Limit Activate.

Enter number of units.

OK Confirm.

Then confirm the credit or reset the counter. The status display for prepaid cards may vary, depending on the service provider.

Auto Display

Call duration and call charges are automatically displayed for each call.

You can transmit and receive very long messages (up to 760 characters) on your phone. These are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

Depending on the service provider, e-mails and faxes can also be sent and e-mails received via SMS (change setting if necessary, p. 63).

Writing and sending text messages (SMS)



Menu → 🖂 → New SMS

Text input using "T9" (p. 31) allows you to create longer messages very quickly using just a few key strokes.

Clear Press briefly to delete letter by letter, hold down to delete an entire word.



Press.



Dial number or pick out from the Phonebook/ Addressbook.

Groups SMS to group (p. 49).

OK Confirm. Send the SMS to the service center for transmission. The sent SMS is sayed in the "Sent"

OK

Return to Edit mode.

Display in the uppermost line:

list

We start at 8

■Abc abc/Abc/ ABC/123 T9 active.

Switch between upper-case/ lower-case letters and digits.

SMS

Display title.

1

Number of SMS messages required.

747

Number of characters still available

Additional information

Insert pictures & sounds into textp. 48 SMS profile......p. 63 A Message type, Validity period, Service Center may be requested...p. 63 SMS status report..............................p. 120 Enter special characters...............................p. 31

SMS

Text menu

Options	Open text menu.			
Send	Enter recipient's phone num- ber/select from Phonebook/ Addressbook, then send.			
Save	Save composed text in draft list.			
Picture& Sound	Add pictures, animations and sounds into message (see following text).			
Text Modules	Insert text module (p. 34).			
Format	Line Feed			
	Small font, Medium font, Large font			
	Underline			
	Left, Right, Center (align)			
	Mark Text (highlight text using control key)			
Delete Text	Delete the whole text.			
Insert From	Insert entry from Phone-book/Addressbook.			
T9 Input (p. 31)	T9 Preferred: Activate/ deactivate T9.			
	Input language: Select language for text.			
Print via IrDA	Send SMS message to a suitable printer.			
Send via	Select an SMS profile for transmission (p. 63).			

Picture&Sound

Insert pictures and sounds into message.



Write message.



Open text menu at the end of a word.



Select Picture&Sound.

The menu contains:

Fix animations

Fix sounds



Select section.

Confirm.

The first entry of the selected section is displayed.



Scroll to entry required.

When Fix animations/Fix sounds:



the selection is added to the SMS.

Additional information

Playback only occurs if the destination phone supports the EMS standard (p. 116). In input mode, when sound is selected, it is shown as a bell.

SMS to group

You can send an SMS message as a "circular" to a recipient group.

Options

Open menu.

Select.

Send Groups

Press. The Addressbook is opened in highlighting mode (p. 117). There are

the following options:

- · Highlight individual entries.
- <Groups> Select, open a group and highlight individual entries/all entries there.
- <Groups>Select. Select a group.

Send

Press. The first of the highlighted recipients is displayed. If this recipient has several phone numbers, one number can be selected.

Skip Skip recipient.

Send

Transmission is started after confirmation.

Read SMS



Display indicates a new SMS.





Press the left soft key to read SMS message.





Scroll through message line by line.

Reply

See below.

Options

see p. 51.

Additional information
Pictures and sounds in SMSp. 48
Message memory fullp. 118
Use highlighted phone number/ e-mail address/WAP addressp. 119
e-mail address/WAP addressp. 119



Reply menu

Reply

Open reply menu.

Write mess.	Create a new reply text.
Edit	Edit received SMS or add new text.
Answer is YES	Add YES to the SMS.
Answer is NO	Add NO to the SMS.
Call back	Add a standard text as
Delay	a reply to the SMS.
Thank you	

When the SMS has been edited in the edit mode, it can be saved or sent with Options.

Ring tones, icons ...

You can receive ring tones, icons, screensavers, animations and information on applications (p. 72) with an SMS in which a link is displayed. Please highlight this link and, by pressing the Call key, start the download.

Please ensure that the HTTP profile (p. 73) and the connection (p. 84) are configured.

 
Lists

All SMS messages are archived in four different lists, according to their status:

Inbox

Menu $\rightarrow \bowtie \rightarrow Inbox \rightarrow SMS$

The list of received SMS messages is displayed.



Drafts

Menu → FX → Draft → SMS

The list of not vet transmitted SMS messages is displayed.

Unsent

Menu → 🖂 → Unsent → SMS

The list of concatenated SMS messages not yet completely sent is displayed. Transmission can be restarted.

Sent

Menu → Sent → SMS

The list of sent SMS messages is displayed.

Send via



Lists menu

Each list offers different functions:

Options	Open	menu.
---------	------	-------

	·
View	View entry.
Reply	Directly answer incoming SMS messages.
Delete	Delete selected SMS messages.
Delete All	Delete all SMS messages after confirmation.
Send	Dial number or select from the Phonebook, then send.
Edit	Open SMS message to edit.
Capacity	Display free capacity on SIM card/phone. In case of segments: number of concatenated SMS messages.
Set as Unread	Mark message as unread.
Save No.to @	Copy a highlighted phone number to Phone/Address-book.
Archive	Move SMS message to archive.
Print via IrDA	Send SMS message to a suitable printer.

Select an SMS profile for transmission (p. 63).

Archive

Menu → SMS Archive

The list of SMS messages stored in the phone is displayed.





Different functions are available, depending on context:

Archive menu

Options	Open menu.
View	View entry.
Send	Dial number or select from the Phonebook, then send.
Edit	Open edit mode for changes.

Save No.to Copy a highlighted phone number to Phone/Addressbook.

p. 112.



Paste	Transfer content of temporary memory to current folder.	
Delete	Delete current entry.	
Delete All	Delete all entries.	
Mark	See highlighting mode (p. 117).	
Mark All	All entries highlighted, see highlighting mode (p. 117).	
New Folder	Create a new folder and give it a name (only one folder depth available).	
Rename	Change highlighted entry.	
Print via IrDA	Send SMS message to a suitable printer.	
Sort	Set sort criteria (alphabetical, type, time).	
Attributes	Display information on file or folder selected.	
Drive Info	Display the capacity used and available.	
For further services, see File Manager,		

The Multimedia Messaging Service enables you to send texts, pictures (also photos) and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

Writing/sending MMS messages

An MMS consists of the address header and the content.

An MMS message can consist of a series of pages, each one of which may include a combination of text, sounds and pictures.

Texts can be written with the help of T9 (p. 31).

Pictures and **graphics** that have been produced with accessories such as digital cameras can be attached in JPEG, WBMP, GIF or GIF format. See also File Manager, p. 112.

Music is sent and received in a MIDI file, single tones/sounds in an AMR file. Up to 48 KB can be played back.

Navigation



Scroll line by line with the control key.

Scroll page by page with the plus/ minus side key, by pressing top/bottom.





Input fields:

To: Phone number/

e-mail address of recipi-

ent(s).

Subject: Enter MMS heading (up to

40 characters)

Picture: Insert Press. The picture list is opened for selection

(see also File Manager,

p. 112).

Text: Edit Press. Write text with

the help of T9. Text menu,

see p. 54.

Tones/Alerts:

Insert Press. The music list is opened for selection (see also File Manager, p. 112).

MMS

Slide duration

Enter length of display for individual pages (minimum 0.1 seconds).

Attach other pages

Options

Open menu.

New Slide Select.

Additional information

No more than 20 phone numbers/ addresses, (of 50 characters each) can be addressed.

Options MMS main menu.....p. 54

Attach business card

Options

Open menu.

Extras

Select.

9

Scroll to Businesscard.

ф+

Attach business card.

Attach appointment

Options

Open menu.

Extras

Select.

Scroll to Appointment.

1

Import appointment from calendar.

Check MMS

Check the MMS message before sending it:

Options

Open menu.

Preview Slide

View a single page.

Prev. Message

Play back the whole MMS in the display. Press any key to break off.

Send MMS.

Options

Open menu.

Send

Select.

Text menu

Options

Open menu.

Line Feed	Start new line.
Save	Save MMS text.
Insert text	Insert text module (p. 34).
Delete Text	Delete the whole text.
T9 Input (p. 31)	T9 Preferred: Activate/ deactivate T9.
	Input language: Select language for text.

MMS menu

Different functions are available, depending on the context:

Options Open menu.		
Insert Line	Extend address field by one line.	
Save	Store MMS in the draft list.	
Send	Send MMS.	
Insert From	Insert number from Phonebook/Address- book and appointments/ tasks.	
Delete Text	Delete the whole text.	

	list.
Send	Send MMS.
Insert From	Insert number from Phonebook/Address- book and appointments/ tasks.
Delete Text	Delete the whole text.
New Slide	Insert new page behind current one.
Delete Item	Delete element on a page.
Delete Slide	Delete page currently displayed.
Preview Slide	Playback of complete page.
Slide List	Display pages available for selection.
Prev. Message	Playback of complete MMS. Press any key to break off.

⁵ 9 Input p. 31)	T9 Preferred: Activate/ deactivate T9.
	Input language: Choose language in which the text is to be written.
Attributes	Show Date:, Size:, Priority: of MMS.
Extras	Enter other features of MMS and attach Businesscard and Appointment.

MMS

Receive MMS



Indicates reception or notification of an MMS.





Press the left soft key to read the MMS.

Depending on the setting, (p. 64) the

- · complete MMS is received.
- the notification is opened. Press Receiving to receive the complete MMS.

Press any key to break off function.

Read MMS



Automatic presentation of the MMS. Use any key to cancel.



Scroll page by page with the control key.

Scroll page by page with the plus/ minus side key, by pressing top/bottom.



Call up individual pages directly by number key.

Attachment

A single MMS can contain several attachments.

Options

Open menu.

Attachment

Select.



Select attachment.

Open

The attachment is opened with the available applica-

tion.

Save

The attachment is saved

under a name.

Pictures and sounds

Pictures and sounds received in an MMS can be saved separately. To do this, stop the MMS by pressing any key, or alternatively scroll through to the required page.

Options

Open menu.

Content

Select.

Proceed as for attachments, as described above. Show as icons at the top of every page.

Functions for editing MMS can be found under Options.

Lists

All MMS messages are saved in four different lists:

Inbox

Menu → 🖂 → Inbox → MMS

The list of MMS messages and notifications received is displayed. To receive an MMS subsequently, open notification and press Receiving.

Draft

 $Menu \rightarrow \bigcirc \longrightarrow Draft \rightarrow MMS$

The list of stored drafts is displayed.

Unsent

Menu → MMS

The list of the MMS messages not yet completely transmitted is displayed.

Sent

 $Menu \rightarrow \nearrow \longrightarrow Sent \rightarrow MMS$

The list of sent MMS messages is displayed.

Lists menu


Each list offers different functions:

Options Open menu.

Options	Open menu.
Play	Play back MMS.
Change	Open edit mode for changes.
Reply	Reply to MMS immediately.
Send	Send MMS.
Receive MMS	Start inward transmission of MMS when only notification is highlighted (p. 64).
Receiv.all MMS	Start receipt of all MMS messages.
Forward	Forward MMS to new recipients.
Delete	Delete selected MMS messages.
Delete All	Delete all entries after confirmation.
Set as Unread	Mark MMS as unread.
Save No.to	Copy phone number/e-mail address into Phonebook/ Addressbook.
Attributes	Information on MMS is displayed: Sender Arrival time Subject Size Priority



Capacity Size of current MMS as well as capacity still available are shown. Preview Slide Play back current page. Slide List Display pages available for selection. Attachment Open list of attachments received. Content Selection of page contents to be archived, such as picture or sound. Save Store MMS in outbox list.		
Slide Slide List Display pages available for selection. Attachment Open list of attachments received. Content Selection of page contents to be archived, such as picture or sound.	Capacity	as capacity still available
selection. Attachment Open list of attachments received. Content Selection of page contents to be archived, such as picture or sound.		Play back current page.
received. Content Selection of page contents to be archived, such as picture or sound.	Slide List	
to be archived, such as picture or sound.	Attachment	
Save Store MMS in outbox list.	Content	to be archived, such as pic-
	Save	Store MMS in outbox list.

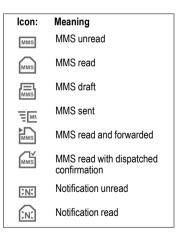

Options

Your phone has an e-mail program (client). You can use it to create and receive e-mails

The content received in an e-mail is saved in the File Manager in one of the MyData\sub folders.

The content used to create an e-mail has to come from the MyData folder in the File Manager.

Write/send e-mails

Menu → 🔀 → New E-mail

Enter e-mail address

To: E-mail address of ω→//##

recipient(s). Cc: E-mail address for the

copy recipient.

Bcc: E-mail address for blind copy recipients (the other recipients are not shown the Bcc recipient).

Attach · See helow

Press briefly to write special characters such as @ (p. 31).

T9 helps you write e-mails (p. 31).

Subject: Enter e-mail heading (up to 200 characters).

Content: Enter text. Open menu.

Send e-mail. Send

Add attachments

A file from the file system (e.g. ring tone) can be inserted in an e-mail as an attachment (p. 112).

Attach. Open file system.

Select file to be inserted

Mark Highlight file. OK Copy file as an

attachment

F-mail editor menu

Options Open menu.

Extend address field by one line.
Delete line in address field.
T9 Preferred: Activate/ deactivate T9.
Input language: Select language for text.
Insert entry from Phone-book/Addressbook.
(see above).
Save in draft list.
Establish connection with server and send e-mail. If necessary, select different access (p. 84).
Transfer to outbox list to be sent later.



Receive e-mail



Before an e-mail can be read, it must be retrieved from the server. The service provider is dialed with the default access profile (p. 84) and all e-mails are transmitted to the inbox list.

Additional information

The e-mail client always receives complete messages including header, content and, if applicable, attachments. You can restrict the size of the received messages (p. 65).

A maximum of 50 e-mails can be stored in the phone. E-mail size is limited to 99 KB.

Synchronizing with a PC

With XTNDConnect® PC (p. 123) you can synchronize your incoming/outgoing e-mails with Outlook® or Lotus Notes™.

E-mail	with attach- ment	Meaning	
<u>~</u> @	<u> </u>	Unread	
<u>~</u>	<u>69</u>	Read	
[@	<u> [59</u>	Draft	
<u>=</u> [@	<u>=[9</u>	Sent	

Read new e-mail





Select e-mail.



The e-mail is displayed. Switch between small, normal and large font sizes.



Scroll line by line with the control key.

Scroll page by page with the plus/minus side key, by pressing top/bottom.

The left soft key offers different functions depending on which text area you have selected:



E-mail addresses/phone numbers in the message are highlighted and can be stored in the Addressbook.

Dial phone number or start new e-mail.



Save attachment (e.g. bitmap).



Reply to sender.



Start WAP browser and visit URL (p. 69).

Read menu

Options Open menu.

Reply	The original e-mail is retrieved. The sender is entered as recipient and can be changed as can the header and CC.
Reply to all	As above, but all recipients are listed in the "Send to" field.
Forward	The original e-mail is retrieved. Enter the new recipient to whom it should be forwarded.
Change	To edit, open e-mail in edit mode.
Delete	Delete selected e-mail.
Delete All	Delete all e-mails in the inbox or outbox.
Font size	Select font size.
Save attach.	The attachment is stored in the file system (File Manager, p. 112).

Lists

All e-mails are stored in four different lists:

Inbox

Menu $\rightarrow \bowtie$ Inbox \rightarrow E-mail

The list of received e-mails is displayed.



Select e-mail.

View

The e-mail is displayed for reading.

Draft

Menu → 🔀 → Draft → E-mail

The list of draft e-mails is displayed.

Unsent

Menu → 🔀 → Unsent → E-mail

The list of not yet transmitted e-mails is displayed.



Send all e-mails queued for transmission to the server.



Transmit all e-mails queued for transmission to the server and receive all new e-mails from the server.

Sent

Menu → 🖂 → Sent → E-mail

The list of transmitted e-mails is displayed.

Lists menu

Each list offers different functions:

Options Open menu.

View	(p. 60)
Change	Edit e-mail.
Reply	The original e-mail is retrieved. The sender is entered as recipient and can be changed as can the header and CC.
Reply to all	As above, but all recipients are listed in the "Send to" field.
Forward	The original e-mail is retrieved. Enter the new recipient to whom it should be forwarded.
Delete	Delete selected e-mail in phone.
Delete All	Delete all e-mails in phone.

Sort	Sort • by subject • by sender • by recipient • by date/time • by status Not all sort criteria are possible in all lists.
Send E- mail	Establish connection with server and send e-mails.
Receive E-mail	Establish connection with server and receive incoming e-mails.
Snd/Rec. Mail	Establish connection with server, send e-mails and receive incoming e-mails.

⋈ Message profiles

SMS profile

Menu → 🔀 → Msg. Setup → SMS

Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these. The presetting depends on the SIM card inserted.



Select profile.

Options

Open menu.

Change Sett.

Select.

Service Center Enter or change the servicecenter phone numbers as supplied by service provider.

Recipient

Enter the standard recipient for this transmission profile or select from Phonebook.

Message type

Manual

The message type is requested for each message.

Standard text

Normal SMS message.

New

You may need to obtain the required code number from your service provider.

Validity period

Select the period in which the service center is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week, Maximum

*) Maximum period that the service provider permits.

Status Report

You will receive confirmation whether delivery of a message has been successful or unsuccessful. This service may be subject to a charge.

Direct Reply ⇔!

The reply to your SMS message is handled via your service center when Direct Answer is activated (for information please contact your service provider).

SMS via GPRS ⇔!

Send SMS automatically by GPRS (if available).

Requirement: GPRS is activated (p. 83). Ensure that your service provider offers this function.

Send & Save

Sent SMS messages are saved in the **Sent** list.

Activate profile



Select profile.

Activate

Press to activate profile.

Message profiles

MMS profile

Menu → 🔀 → Msg. Setup → MMS

A number of MMS profiles can be selected. The transmission characteristics of an MMS are defined in these.



Select profile.

Options

Evnire

Open menu.

Change Sett.

Select.

Time	the service center is to try to deliver the message:
	Manual, 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week, Maximum*, New
	*) Maximum period that the service provider permits.
Def. Priority	Send priority: Normal, High, Low
Def. Duration	Length of display for an MMS page (standard requirement).

Salact the period in which

Retrieval	Receive complete MMS or only notification of arrival. Automatic Receive complete MMS immediately. Auto.homenet Receive complete MMS immediately in home network Manual Only the notification is received.
MMS RelaySrv.	MMS relay URL, e.g. http://www.webpage.com
IP Settings	IP address: Enter IP address. Port: Enter port number. 2nd IP address: Enter IP address. 2nd Port: Enter port number. These settings can be different from those of the WAP browser.
Conn.pro- file:	Select or set access profile (p. 84).

Activate profile



Select profile.

Activate

Press to activate profile.

⊠ Message profiles

E-mail settings

Before using this service, you must set the server access and your e-mail options. The data for these may already have been entered. If not, your service provider will supply you with the relevant information. See

www.my-siemens.com/sl56

Additional information

Your service provider must support the following protocols for successful data exchange with the e-mail server:

POP3, IMAP4 and SMTP or eSMTP.

E-mails will be MIME-encoded for transmission.

Encryption of e-mail transmission (SSL, APOP) is not possible at present.

Accounts

5 accounts can be defined. If no access data have been defined for the account, the entry card is displayed.

Alternatively:

Options Press.

Change Sett.

Select, then:

User settings

riovidei	Select provider.
User name:	Your name.
E-mail addr.: *	Your e-mail address, e.g.:name@domain.abc
Reply-t.addr.:	Additional e-mail address for replies.
User ID: *	Your user ID.
Password: *	Your password.
*Your service provid	ler will supply you with this

^{*}Your service provider will supply you with this information.

Cot maximum ciza for

Mail settings

mails smaller than <10> KB	incoming e-mails.
Leave copy on server?	E-mails remain on the server after they have been retrieved.
Types	POP3 or IMAP4.
POP3 server: *	Enter Internet address if the server type is POP3 and SMTP.

⋈ Message profiles

POP3 Port: *	(Default: 110)
IMAP4*	Enter Internet address if the server type is IMAP4 and SMTP.
IMAP4 Port: *	(Default: 143)
SMTP server: *	Enter Internet address.
SMTP port: *	(Default: 25)
SMTP Authentic.:	Authentication: Yes/No
SMTP Password:	A user password will be required if "Authentication" is set to Yes.
*Your service provid	er will supply you with this

*Your service provider will supply you with th information.

OK

Save and activate settings.

Gen. Setting

Enter the preset default of an e-mail address for blind-copy recipient (Bcc).

Activate profile



Select profile.

Activate

Press to activate profile.

Some service providers offer information services (info channels, **c**ell **b**roadcast). If reception is activated, your "Topic List" will supply you with messages on the activated topics.

Broadcast

You can activate and deactivate the Cell Broadcast (CB) service. If the CB service is activated, standby time for the phone will be reduced.

Read New CB

All unread CB messages are displayed.

Topic List

Add an unrestricted number of topics to this personal list from the topic index (Topic Index). You can preset 10 entries with their channel number (ID) and, if necessary, their names.

New Topic Select.

- If no topic index (Topic Index) is available, enter a topic with its channel number and confirm with OK.
- If the topic index has already been transmitted, select a topic and confirm with OK.

Channel: Select

Options Open list menu.

If a topic is selected in the list you can view it, activate/deactivate it, edit it or delete it.

Auto Display

CB messages are displayed in standby mode, longer messages are scrolled automatically. This display can be activated/deactivated for all or only new messages.

For "full page view":

press 🗐 , then View CB.

Topic Index

⊗!

The list of topics is displayed for you to choose from. If nothing is displayed, you must enter the channel numbers (ID) manually (Topic List). Please contact your service provider for details.

CB Languages

Receive Cell Broadcast messages in only one specific language or in all languages.

Displays

Y...,.

Topic activated/deactivated.

New messages received on the topic.

Messages already read.

Internet browser (WAP)

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

The content downloaded during a WAP session is saved in the File Manager in one of the protected non-MyData folders. This content can be used by the phone, but cannot be forwarded out of the phone.

Internet access





"Internet" may be replaced by a name provided by the Service Provider. If necessary, set the way in which WAP access should be made (see Browser menu, Setup, Start with..., p. 69).

For example the start menu appears:

Start menu
1 Homepage
2 Bookmarks
3 Resume
Select



Select required function.

select required function

Confirm.

Start menu

Homepage	The connection to the pro- vider's portal is set up. This may be defined or pre-set by your service provider.
Bookmarks	Up to 50 URLs stored in the phone for fast access.
Resume	Call up recently visited pages that are still in memory.
Inbox	Inbox for messages from the WAP server (WAP push).
Profiles	The list of profiles is dis- played for activation/set-

Exit browser Close browser and clear down connection

ting (p. 70).

Additional information Operating instructionsp. 121

End connection



Hold **down** to clear down the connection and to close the browser.

Your Internet browser is licensed by:





Browser menu

If the browser is active, the menu can be activated as follows:



Press







Homepage

The connection to the provider's portal is set up. This may be defined or pre-set by your service provider.

Bookmarks Up to 50 URLs stored in the phone for fast access (p. 122).

Resume Call up most recently visited page still in memory.

Go to... Enter URL to access WAP page directly, e.g. wap.my-siemens.com

Select from list of most recently visited WAP addresses.

Reload Reload page.

Inbox

More ...

Inbox for messages from the WAP server (WAP push).

Disconnect End connection

Save picture Save a picture on the page. See below.

Exit browser Close browser and clear down connection

More ... (in menu)

Profiles The list of profiles is displayed for activation/setting (p. 70).

Setup Font size

Protocol parameters

Push

· Push can force online

 Timeout for unanswered. network requests

Security

Secure prompt

· Current certificate

CA certificates

Private Kev PINs

 Encryption Start with...

· Start menu

Browser menu

Homepage

Resume

Bookmarks

Picture&Sound

Picture

 Dithering Tones/alerts

Restart session and clear

cache. About Display browser version. Openwave

Reset

Notes Browser menu. Offline

@‡

Online

GP

GPRS Online

No network

Select special characters. such as @, ~, \, see p. 31.

or

0 +

press repeatedly for:

..?!@/&~+-=

WAP profiles

Menu → ♣ → Internet → Profiles The name "Internet" may be replaced by a name provided by the Service

Provider.

Preparation of the phone for WAP Internet access depends on the current service provider:

- · The settings have already been installed by provider. You can start immediately.
- Access profiles for a number of providers have already been set. Then select and activate profile.
- The access profile must be set manually. If necessary, check with your service provider for details.

Activate WAP profile

You can change the current profile each time you access the Internet.



Select profile.



Activate. The current profile is selected

Set WAP profile

Up to 5 WAP profiles can be set (if not barred by provider). The entries may vary depending on the service provider:



Select profile.

Edit

Open to make settings.

Profile name

Enter/change name.

WAP param.

cΩII IP address: Fnter IP address.*

Port-Enter port number.*

Homepage: Enter homepage, if not set by the service provider.

GPRS linger Time in seconds after which time a connection should be ended if no input or data exchange takes place.

CSD linger-Time in seconds after which time a connection should be ended if no input or data exchange takes place. Conn. Select or set access profile

(p. 84). *) depends on service provider, if necessary enter 2nd IP address and 2nd port

Save

Profile

Save settings.

Games & More

Download games and other applications. You are advised about relevant applications on the Internet.

Once you have selected a game or application you can start to download it immediately. Then you can use the application.

Most applications include instructions.

Additional information

To download applications, the WAP profile (p. 70), HTTP profile (p. 73) and access (p. 84) must be configured.

Java™ informationp. 118 Sounds (ringer)/silent alert on/offp. 76

Applications and games can be found at:

wap.my-siemens.com

or on the Internet at:

www.my-siemens.com/city

Games and applications

Applications and links that are already stored on the phone are found under:





Different functions are available depending on which entry is highlighted:

Carry out game/application offline

Select Loadable application can be started immediately.

★ Load game/application online

Select

Only description file (p. 118); application has still to be loaded.

Internet

The selected Internet page is loaded.

Receive information

If information required, say, by an application that has already been installed, is received via **SMS**, the symbol appears in the display. By pressing the left soft key, the relevant application is started and the information is processed.

Additional information
The following key control is used for many games (virtual joystick):
K 1 X
1 ∞ 2 abc 3 def
4 ghi 5 jkl 6 mno
7 pqrs 8 tuv 990092

Games&More menu

All functions required for editing and managing your applications and folders are found in the Options menu:

Options Open menu.

Start	Start application.
Download	An application is down- loaded from the Internet and installed.
New Folder	Create and name new folder.
Delete	Delete selected application/ folder.

Delete All	Delete all applications/folders after confirmation.
Rename	Rename highlighted applications/folders.
Move	Move applications between folders.
HTTP Profile	The list of profiles is displayed for activation/setting (p. 73).
Reinstall	Reinstall an application (update).
More Info	Download further instructions via Internet (WAP), if available.
Details	Show details of the application/folder (name, version, size, path, producer, date).
Sort	Set sort criteria (alphabetical, time).
Capacity	Display maximum and available capacity.

Surf & Fun

HTTP Profile

Options

Menu → ← → Games & More Open menu



Select HTTP Profile.

Preparation of the phone depends on current service provider:

- · The settings have already been installed by provider. You can start immediately.
- · Access profiles have already been set by your provider. Then select and activate profile.
- · The access profiles have to be set manu-

If necessary, check with your service provider for details.

WAP can be used to download applications from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled cell phone. Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications or software and for any direct damage or consequential damage of whatever nature resulting from the use of these applications or software. For technical reasons, such applications or software and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In these cases the purchaser will need to download the application again or re-enable it. Siemens does not warranty or guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge.



Display



Language

Set the language of the display text. When "automatic" is set, the language of your service provider is used. If a language that you do not understand happens to be set, the phone can be reset to the language of your service provider with the following input (in standby mode):

*#0000# ~>

T9 Input

(see also p. 32)

T9 Preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry. Languages with T9 support are marked by the T9 symbol.

Background

Set background graphic for display.

Logo

Choose picture to be displayed instead of the provider logo.

Color Scheme

Select color scheme for the whole service system.

Activate color scheme



Select color scheme.



Activate.

Load color scheme

Up to three color schemes can be included in the selection list. These can be loaded by WAP, for example.



Open menu.

Load

Select color scheme.



Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. The function is ended by an incoming call or by pressing any key.

Enable	Activate/deactivate screensaver.
Style	Analog Clock, Bitmap or Energy Saving.
Picture	Select picture in file system.
Preview	Display screensaver.
Timeout	Set period after which the screensaver starts.
Security	Phone-code protected termination of screensaver.
Auto Key Lock	The keypad is locked when the screensaver starts.

Additional information

You can also receive individual logos, screensavers and animations by SMS (p. 47), MMS (p. 53) or WAP (p. 68). See also My phone (p. 25).

Start Anim.

Select animation to be shown when phone is switched on.

Shutdn. Anim.

Select animation to be shown when phone is switched off.

Own Greeting

Enter greeting to be displayed instead of animation when phone is switched on.

Edit	Activate/deactivate.
	Delete old message and create new message.
OK	Confirm changes.

Big Letters

You can choose between two font sizes for the display.

Illumination

Set display light brighter/darker. The darker the setting the longer the standby time.



Press the control key repeatedly to adjust up or down

Contrast

Set display contrast.



Press the control key repeatedly to adjust up or down.



Tones/Alerts

Menu → Tones/Alerts
→ Select function.

You can set the tones to match your needs.

Ringer Setting

On/Off Activate/deactivate all

tones.

Beep Reduce ring tone to a

short signal (beep).

Additional information

Display: Ringer off.

Switch off ringerp. 120

Vibrating Alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The silent alert can also be activated in addition to the ringer (e.g. in noisy environments). This function is deactivated when the battery is charged.

Volume

Set different volumes for types of call/functions.



Select:

Calls

Group Calls

Other Calls Alarms

Alarm Clock

Messages

Cell Broadcast

Start Melody End Melody

Applications

ProSlide (common setting for opening and closing melody)

Select Press. The ring tone is played.

Set volume.

OK

Confirm.

Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ring tones!

If two independent phone numbers are registered on your phone, you can set different volumes for them (p. 120).





Ringtones

Set different ring tones for types of call/functions.



Select.

Calls Calls

Group Calls

Other Calls

Alarms

Alarm Clock

Messages

Cell Broadcast

Start Melody

End Melody

Open ProSlide

Close ProSlide

Select

Press. The melody is played.



Choose ring tone.

OK

Confirm.

Additional information

Individual ring tones can be sent to you via SMS (p. 47) or you can download them via WAP (p. 68). See also My phone (p. 25).

Call Screening

α<u>8</u>!

Only calls from phone numbers that are in the Phonebook/Addressbook or in a group are signaled audibly or by silent alert. Other calls are merely displayed.

If you do not accept these calls, they are forwarded to your mailbox (if set, p. 79).

+!

Display in standby mode: when call screening is activated

Key Tones

You can set the type of acoustic key tone:

Click or Tone or Still

Minute Beep

During a call, you will hear a beep after every minute as a reminder of the time elapsed. The recipient does not hear this beep.

Info Tones

Set service and alarm tones:

On/Off Activate/deactivate tones.

Extended If switched on, a wider range of service tones is available, e.g.:

- · End of menu.
- Network connection broken.



Keys



Any to Answer

Incoming calls can be accepted by pressing any key.

(except (1)).

Auto Key Lock

If activated, the keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

ProSlide Lock

Enable/disable automatic keylock when closing keypad. The keys are always unlocked automatically when opening the keypad.

Additional information

The keypad can also be directly locked and unlocked in idle state.

as follows.



Hold down.

Key Tones

You can set the type of acoustic key tone:

Click or Tone or Silent



Phone Setup



Call Waiting

⊗!

If you are registered for this service, you can check whether it is set and you can activate/deactivate it (see also p. 29).

Hide ID S!

When you make a call, your phone number can be displayed on the recipient's display (depending on the service provider).

To suppress this display, you can enable the "Hide ID" mode for all subsequent calls or just for the next call. You may need to register separately with your service provider for these functions.

Call Forward

You can set the conditions under which calls are forwarded to your mailbox or other numbers.

Set up call forward (example):

The most common condition for call forward is:

Unanswered



Select Unanswered (includes the Not reachable, No reply, Busy conditions, see below).

Select Press.

Set Select.

Enter the phone number to which the caller will be forwarded (if not already done)

Or ∭→

Select this phone number from the Addressbook/

Phonebook or via Mailbox.

OK

Confirm. After a short pause, the setting is confirmed by the network.

All calls

8!

All calls are forwarded.



Icon in top line of display in standby mode.

Not reachable

Forward occurs if phone is switched off or is out of range.



No reply

A call is only forwarded after a delay that is determined by the network. The period can be set to a maximum of 30 seconds in 5 second intervals

Busv

Forward occurs if a call is in progress. If Call Waiting is activated (p. 79), you will hear the call waiting tone during a call

Receiving Fax

Fax calls are forwarded to a number with a fax connection.

Receiving Data

cΩ1 Data calls are forwarded to a phone number with a PC connection

Status Check

You can check the current forward status for all conditions

After a short pause, the current situation is transmitted by the network and displayed.



Condition set.

Not set.



Display if status is unknown (e.g. with a new SIM card).

Clear All

α<u>8</u>!

All set diversions are cleared

Additional information

Note that the forward is stored in the network and not in the phone (for example when the SIM card is changed).

Check condition or delete it

First select the condition

Select

Check Status

Select

Press

Or

cΩ1

Delete Select

Reactivate forward

The last forward has been stored. Proceed as with "Set forward". The stored phone number is displayed. Confirm phone number.

Edit phone number

 
Proceed as with "Set forward". When the stored number is displayed:

Delete

Press. The phone number is deleted

Enter new number and confirm.





Fact. Settings

The phone is reset to the default values (factory setting) (does not apply to SIM card or network settings).

Alternative input in standby mode: ##9999#

Defrag FileSys

(Phone code protected)

Format

The file system memory is formatted and **all** data that has been saved is deleted, including Addressbook, ring tones, organizer entries, etc. Save important data in advance (p. 123).

Clean Up

The file system is defragmented.

Phone Identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Alternative input in standby mode: ***#06#**

Check software version p. 120.

Auto Off

The phone switches off each day at the set time.

Activate:

Time Press.

Enter time (24-hour clock).

OK

Confirm.

Deactivate:

Manual

Press.

OK

Confirm.



Clock



Time/Date

The clock must be set to the right time once at start-up.



Press.

First enter the date (day/ month/year), then the time (12 hours, including seconds).

Additional information

If the battery is removed for longer than approx. 30 seconds, the clock must be reset

Setting date format:

DD: Day (2-digit)
MM: Month (2-digit)
YYYY: Year (4-digit)

Time Zones

Set the time zone for your area.



Select the required time zone from list ...



... press to set.

Options O	pen menu.
Set	Set time zone.
Rename	Assign a new name to time zone.
DST	Activate/deactivate daylight saving. When daylight saving is activated a sun icon appears on the display.
Auto Time- zone ⊗ I	The time zone is switched automatically to local time by the network.
View	Display the selected time zone with name and date.

Date Format

DD.MM.YYYY or MM/DD/YYYY

Time Format

Format 24h or Format 12h.

Show Clock

Activate/deactivate time display in standby mode.

Connectivity



GPRS

8

(General Packet Radio Service)

GPRS is a new method for transmitting data faster in the cell phone network. Use GPRS and if the network has sufficient capacity, you can be connected to the Internet permanently. Only the actual transmission time is charged by the network operator.

Some service providers do not yet support this service.





Yes / No Activate or deactivate GPRS function.

Shown in display:

GPRS

Activated and available.

!GPRS!

Logged on.

GPRS

Connection briefly lost.

Data Counter

Display of information on connection status.

IrDA

Your phone has an infrared interface. You can use this to exchange data (Addressbook entries, business card, SMS, organizer entries) with other devices that are also equipped with an infrared interface.

The infrared interface is on the right side of the phone. The distance between the two devices must not exceed 30 cm. The infrared windows of the two devices should be placed as close to one another as possible.

Change

Activate/deactivate IrDA.

Shown on the display:

 
D:--

When activated.



During the transfer.





Data Services

For the MMS, WAP and Mail, Java, Rms applications at least one connection profile must be set up and activated.

(⊕) Se

Open menu.

Change Sett.

Options

Select, then:

For CSD (Circuit Switched Data)

CSD settings

Edit

Save

Select.

Press.

If it has not been pre-installed, enter the data or enter the required settings (your service provider will supply you with information on this):

Dial-up number	Enter ISP number.
Call type:	Select ISDN or analog.
Login name:	Enter login name.
Password:	Enter password (shown as a series of asterisks).
DNS1 / DNS 2:	(optional).

Save settings.

For GPRS

(General Packet Radio Service)

GPRS settings

Select.

You can activate GPRS for the profile and change the settings here. You can only start to use GPRS once you have activated GPRS on your phone (p. 83).

APN: Enter service provider address.

Login name: Enter login name.

Password: Enter password (shown as a series of asterisks).

DNS1 / DNS 2: (optional).

Save

Save settings.

HTTP Profile

Preparation of the phone depends on current service provider:

- The settings have already been installed by your provider. You can start immediately.
- Access profiles have already been set by your provider. Then select and activate profile.
- The access profiles must be set manually.
 If necessary, check with your service provider for details.





Fax/Data Mod.

Fax/data mode using a PC

With the phone and a connected PC, you can transmit and receive faxes and data. Appropriate software for fax and data communication must be available on your PC and there must be a connection to the phone.

Fax and data services must be enabled by the service provider. There are variations in fax and data reception, depending on the network. Please ask your service provider about this.

Change Set the required mode.

Rec Fax/Data

\ | |

Your service provider has given you a number for telephoning and a fax/data number.

The call is signaled by a special ring tone and the type of call (fax or data) is displayed.

Now start the communication program in your PC to receive the faxl data.

Send Voice/Fx

⊗!

Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

While the connection is being set up, the following function is available for two seconds:

Voice/fx

Switch to Send Voice/Fx mode; you may now send a fax.

Voice/Fax Rec

(**Only** if no special fax or data number is available).

Start the required communication program on your PC and select the function on the phone **during** the call (the PC will take over the connection).

End transmission

End transmission with PC software and/or press 0.

Authentication



Activate encrypted WAP dial-up (CHAP Challenge Authentication Procedure) or deactivate it (PAP Personal Authentication Procedure).



Security



The phone and SIM card are protected against misuse by several security codes.

Codes

PIN Control, Change PIN, Change PIN2, Chg.Phonecode (p. 24).



⊗!

(PIN 2 protected)

Dialing options are restricted to SIMprotected phone numbers in the Phonebook. If only area codes are entered, relevant phone numbers can be added to these manually before dialing.

If the SIM card does not support PIN 2 input, the **whole** Phonebook can be protected with the phone code.

This SIM Only

8

(Phone code protected)

By entering a phone code, the phone can be linked to a SIM card. Operation using a **different** SIM card is not possible without knowing the phone code.

If the phone is to be used with a different SIM card, enter the phone code when requested.



Barrings

⊗!

Barring restricts the use of your SIM card (this is not supported by all service providers). You need a 4-digit password which your service provider will give you. You may need to register each barring separately with your service provider.

All outgoing

All outgoing calls except emergency number 911 are barred.

Outgo internat

Only national calls can be made.

Out.int.x home

International calls are not permitted. However, you can make calls to your home country when abroad.

All incoming

The phone is barred for all incoming calls (forwarding of all calls to mailbox provides a similar effect).

When roaming

You do not receive calls when you are outside your home network. This means that no charges are incurred for incoming calls.



Status Check

The following information can be displayed after a status check:



Barring set.

Barring not set.



Status unknown (e.g. new SIM card).

Clear All

All barrings are deleted. A password which the service provider will give you is needed for this function.

Network



Line

⊗!

This function is only displayed if it is supported by the service provider. **Two separate** phone numbers must be registered on the phone.

Select

Select phone number in current use.



Display current phone number.

Additional information

Settings for phone numbersp. 120

Block line

(Phone code protected)

You may limit usage to one phone number.

Network Info

The list of GSM networks currently available is displayed.



Indicates forbidden service providers (depending on SIM card).



Choose Network

cΩ1

Network search is restarted. This is useful if you are not on your home network or want to register on a different network. The network list is rebuilt when Auto Network is set.

Auto Network

8

Activate/deactivate, see also Choose Network above. If "Automatic network" is activated, the next network on the list is dialed in ranking order of your "preferred networks". Alternatively select a different network manually from the list of the available GSM networks

Pref. Network



Enter your preferred service providers here for when you leave your home network (e.g. if there are differences in price).

Additional information

If the signal strength of the preferred network is inadequate when you switch on the phone, the phone may register in a different network. This can change when the telephone is next switched on or if another network is selected manually.

Your service provider is displayed:

List

Display list of preferred networks.

Create new entry:

 Select empty line, press Entry, then select another entry from the list of service providers and confirm.

Change/delete entry:

· Select entry, press Change, then select another entry from the list of service providers and confirm or press Clear.

Band selection

cΩII

Select either GSM 900, GSM 1800 or GSM 1900.

Fast Search

When this function is active, network reconnection is speeded up (and standby time is reduced).





User Group

⊗!

Depending on service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special tariffs apply. The details can be clarified with your service provider.

Active

Activate/deactivate function. "User group" must be deactivated for normal phone use (phone code, p. 23).

Select Group

You can select or add groups other than preferred groups (see below). Code numbers for the groups are obtained from your service provider.

Outgo. Access

In addition to network control for a user group, it is possible to set whether outgoing calls outside the group are permitted. If the function is deactivated, only calls within the group are permitted.

Preferred Grp

If activated, only calls within this standard user group can be made (depending on the network configuration).

Accessories



Car Kit

Only in combination with an original Siemens handsfree Car Kit (p. 131). The profile is activated automatically as soon as the phone is inserted into the cradle.

User-definable settings

Auto Answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!



Message in display.

Auto Off

(factory default: 2 hours)

The phone is powered by the car's power supply. You can adjust the time between switching off the ignition and the automatic switching off of the phone.

Car Loudspk.

Choose a different audio setting if desired for your Car Kit.



Automatic settings:

- · Permanent illumination: switched on.
- · Key lock: switched off.
- Charging the phone battery.
- Automatic activation of the Car Kit profile when phone is inserted in cradle.

Headset

Only in conjunction with an original Siemens headset (p. 130). The profile is automatically activated when headset is plugged in.

User-definable settings

Auto Answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Eavesdropping is possible!

Automatic setting

Accept call with Call key or PTT key (Push To Talk), even when key lock is activated.

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

ProSlide



Volume

Adjust the volume of the music when opening and closing the keypad.

Open. Melody

Set the music to be played when the keypad is opened.

Closing Melody

Set the music to be played when the keypad is opened.

ProSlide Lock

Enable/disable automatic keylock when closing keypad. The keys are always unlocked automatically when opening the keypad.

Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

 Five standard profiles are provided with default settings. They can however be changed:

Normal Env.

Quiet Env.

Noisy Env.

Car Kit

Headset

- You can set two personal profiles (<No Title>).
- The special profile Aircraft Mode is fixed and cannot be changed, (p. 92).

Activate





Select default profile or personal profile.

Activate

Activate profile.



Active profile.

Setup

Edit a default profile or create a new personal profile:



Select profile.

Options

Open menu.

Change Sett.
Select.

The list of available functions is displayed:

Ringer Setting	p. 76
Volume	p. 76
Ringtones	p. 77
Vibrating Alert	p. 76
Call Screening	p. 77
Info Tones	p. 77
Key Tones	p. 77
Illumination	p. 75
Big Letters	p. 75
	•

When you have finished setting a function, return to the profile menu where you can change a further setting.



Profile menu

Options Open menu.

Activate	Activate selected profile.
Change Sett.	Change profile settings.
Copy From	Copy settings from another profile.
Rename	Change personal profile (except default profiles).

Car Kit

If a Siemens original Car Kit is used (p. 131) the profile is activated automatically as soon as the phone is inserted into the cradle (p. 89).

Headset

If an original Siemens headset is used (p. 130), the profile is activated automatically as soon as the headset is used (p. 90).

Aircraft Mode

All alarms (appointments, alarm clock) are deactivated. This profile cannot be modified. The phone will switch off if you select this profile.

Activate



Scroll to Aircraft Mode

Activate profile.

A security prompt must be confirmed

The phone switches itself off automatically.

Normal operation

When you switch on your phone again, the previously set profile will be reactivated automatically.

Menu

Press

Favorit.

Press

Create your own menu with frequently used functions, phone numbers or WAP pages.

The list of 10 possible entries is preset. You can, however, change it as vou want.

Additional information

For fast access from standby mode you can set the function Favorites on the left soft key (p. 110).

Activate



Select the required entry.

Select

Press.

Or

Options Press.

Activate Select

Select. Press.

Or



If the entry selected is a phone number, you can also call it with the Call kev.

Change Sett.

You can replace each entry (1-10) with another entry from the selection list of Favorites.



Select the required entry.

Options

Press.

Change Sett. Select



Press.

Select the **new** entry from the selection list.

Set Press.

If you have selected a phone number or a WAP favorite as a new entry, the corresponding application is started.

Reset All

Options

Press

Reset All Select.

After confirmation and entering the phone code, the default entries are reset.

Calendar

Menu → 1 → Calendar

You can enter appointments and tasks in the Calendar. It offers a

- · monthly overview,
- · weekly overview,
- · daily overview.

Time and date must be set for the Calendar to work correctly (p. 82).

Monthly overview





Scroll between weeks.

Scroll between days.



Display weekly view.

 
List of the day's appointments and tasks.

Additional information

Calendar days in bold face indicate appointments or birthdays (p. 96) on this day.

You can use the plus/minus side key on the phone to scroll between the months or weeks depending on the current overview.

Weekly overview





Scroll by the hour from 0:00 to 24:00 hours.

 


Scroll between days.

Day

Display the daily overview.

Daily overview




Each day is divided into six blocks of four hours (morning + afternoon).



Scroll between days.

Additional information

 Appointments are displayed by vertical bars.



Agenda



Select in the current overview.



Appointments (p. 96) and where applicable any open tasks (p. 98) for the current day are displayed in chronological order in the agenda.

<New Entry>

Create new entry as appointment or as task.

Options

Ontions

Different functions are provided, depending on the Calendar item selected or the current organizer function:

Onon monu

Options	Open menu.
View	Display entry.
Done	Change task to "completed".
Edit	Open the entry to edit.
New Entry	Create new entry as Appointment (p. 96) or Task (p. 98).
Delete	Delete selected entry.
Delete All	Delete all entries after confirmation.

Delete Until	Delete all entries prior to a certain date.
Delete done	Delete all completed tasks.
Mark	Activate highlighting mode, the entry currently selected is highlighted (p. 117).
Mark All	Activate highlighting mode, all entries are highlighted (p. 117).
Send/Print	(p. 114)
Import	Import tasks and appointments via IrDA in vCal format (p. 114).
Capacity	Display available capacity.

Additional information

For additional Calendar settings, see below under Setup.

Appointment with "alarm activated".

Appointment with "alarm deactivated".

Task.

Priority task.

Task completed.

Task deadline exceeded.

Synchronizing with a PC

With XTNDConnect® PC (p. 123) you can synchronize your appointments with Outlook® or Lotus Notes™.

With Remote Sync. you can synchronize your phone with an organizer stored on the Internet (p. 108). For this a time zone must be set (p. 82).

Calendar settings

Menu → 1 → Calend. Setup

Show Birthday

Birthdays (and other events) are shown in bold face.

Begin of Week

You can set which weekday is listed first on the left in the monthly and weekly overviews.

Appointments

Menu → 1 → Appointments

All appointment entries are displayed in chronological order. If an alarm is missed it appears in the list of missed appointments (p. 100).

List according to type

Types of appointments are displayed.



Select appointment type.

Show all entries for the selected type.

Enter new appointment



Select < New Entry>.



Make the entries field by field.



Browse through displays in the selection fields.



Type:

Memo.

Description with up to 50 characters.



Speech Memo.

Record a voice memo at the end of the input procedure (see also p. 101).



Call.

Enter phone number. Shown with alarm.



Meeting.

Description with up to 50 characters.

Description:

Display in the agenda list.

Location:

Location of appointment, e.g. meeting room.

Start date:

Start time: End date:

End time:

Alarm:



Activate alarm.



Enter start time of the alarm **before** the appointment.



Select:

Minutes, Hours, Days.

Reoccurrence:

Select a timeframe for repeating the appointment:

No, Daily, Weekly, Monthly, Annual.

Enter a parameter for repeating: Forever, Until, Occurrences (number)

If Weekly is selected, certain weekdays can be highlighted.



Save the appointment. The alarm is automatically activated. If Speech Memo is selected as type, the dictating machine is started for recording (p. 101).

Alarm

When the set date and time are reached there is an audible and a visual alarm. If an alarm is missed it appears in the list of missed appointments (p. 100).

Alarm type Memo/Meeting: the text is shown in the display.

Alarm type Call: the phone number is displayed for dialing.

Alarm type **Speech Memo**: playback with dictation key.

Pause

The alarm stops for 5 minutes

Off

The alarm is stopped.

Additional information

Display indicating that alarms are set:

(r Alarm clock.

Appointment.


An alarm sounds even when the phone is switched off (the phone does not switch to standby mode). Press any key or close and open the keypad to disable it.

Set alarm tone	ა. 76
Clock	p. 82
Options	o. 95

Tasks

Menu → 1 → Tasks

 A task is displayed like an appointment in the agenda of the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed.



List according to type

<Types>

Types of appointments are displayed.



Select appointment type.



Show entries for the selected type.

Enter new task



Select < New Entry>.



Select appointment type (see appointments, p. 96).

Description:

Display in the list.

Status:

Choose between: Done or Outstanding

Priority:

Select between 1 (high) – 5 (low). Default is 3

Date in use:

When **Yes** is selected, the following option is provided.

Due date:

Enter date.

Due time:

Enter time.

Alarm:

Enter a time (0–99) and a time unit (minutes, hours, days) at which an audible/visual notification of an impending task should be made.

Save

Save task.

Notes

Menu → 1 → Notes
Use your phone as a notepad.



New entry

Select

Press.

Enter text, 150 characters

maximum.

Options Open menu.
Save Store entry.

Text entry menu

Options Open menu.

Save	Store entry.
T9 Input (p. 32)	T9 Preferred: Activate/ deactivate T9.
	Input language: Select language for text.
Line Feed	Enter line break.
Delete Text	Delete note.
Send via SMS	Send entry as SMS message.
Insert From	Insert phone number from Addressbook.

Display entry



Select entry.

View

Open note.

Notes menu

Options Open menu.

View	Display entry.
Confidential	Protect note with phone code (p. 23).
Edit	Display entry for editing.
New Entry	Create new note.
Delete	Delete entry.
Delete Until	Delete all entries prior to a certain date.
Delete All	Delete all notes after confirmation.
Mark	Switch to highlighting mode (p. 117).
Mark All	Activate highlighting mode, all entries are highlighted (p. 117).
Send via SMS	Send entry as SMS message.
Capacity	Display available capacity.

Additional information

Protect confidential data using a phone code.

We recommend that you do not store any passwords (PIN, TAN etc.) as notes.

A total of 500 entries can be stored (appointments, tasks, notes) in the organizer.

Enter special characters.....p. 31

Missed Alarms

Menu → 1 → Missed Alarms

Events with an alarm to which you have not reacted are listed for reading.



Missed Alarms menu

Options Open menu.

	View	Display entry.
	Delete	Delete entry.
	Delete All	Delete all entries after confirmation.
	Send/Print	(p. 114)

Voice Memo

Use the dictating machine to record short voice memos.

- Use your phone as a dictating machine when on the move.
- Record a memo as a reminder or as a note for others.
- Add a voice memo to an alarm in the Calendar (p. 97).
- Record a call useful for remembering numbers or addresses.

Warning!

The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential.

You may only use this feature if the other party to the conversation agrees.

Control using the side keys

The voice functions can be controlled quickly and easily in standby mode using the side keys.



New recording

Press the dictation key for the duration of the recording. The maximum possible recording period is shown. Recording starts after a short beep.

Pause

Release the dictation key for a maximum of 10 seconds to pause recording. If you press the key again, recording is resumed, otherwise it is stopped.

Save

Recording is stopped if you release the dictation key for more than 10 seconds.

Stop End recording.

Recording is automatically saved with a time stamp.

Save Name recording.

OK Save recording.

Play back

In standby mode, press the dictation key **briefly**. If the Options menu is set up that way, **Speakerphone** will be offered.

Operation with soft keys

New recording

Menu → 1 → Voice Memo

The list of recordings is opened.

<New Record>

Select.

Record Start recording

Pause Recording pause.

Stop End recording.

Recording is automatically saved with a time stamp.

Save Name recording.

OK Save recording.

Or Play

Play back recording before storing it.

Play back

Menu → 1 → Voice Memo

The list of recordings is opened.





Select recording.

Play

Press.

Voice Memo menu

Options Open menu.

Play	Play recording back.
Speaker- phone	Activate/deactivate play-back in handsfree mode.
New Record	Start new recording.
Delete	Delete selected recording.
Delete All	Delete all entries after confirmation.
Rename	It can be generic renaming of a file instead of specific renaming from time/date stamp.

Time Zones

Menu → 1 → Time Zones

Set the time zone for where you currently are (p. 82).



Alarm Clock

The alarm will ring at the time set by you, even when the phone is switched off.

Setting



Display selected time and days for alarm calls:

Set time for the alarm call (hh:mm).



Navigate to the days.

Change OK Set days for alarm calls. Confirm settings.



On / Off Activate/deactivate the alarm.

Additional information



Alarm clock switched on.
Alarm clock switched off.

((·

Screen display in standby mode: Alarm clock activated.

Calculator



Enter number (up to 8 digits).



Select calculator function.



Repeat procedure with other numbers.



Result is displayed.

Calculator functions



Press the right soft key

repeatedly.

Toggle between "+" and "-".
 Convert to percentage.
 Save the number displayed.

Retrieve the number saved.
e Exponent (max. two digits).

Special keys:



Set decimal point.
Add (hold **down**).

ि Extras

Currency Conv



Any combination of calculations can be carried out between the currencies entered



Select a combination of currencies from the list.



Confirm





Repeat Repeat conversion with other data.

Calculator menu

Options Open menu.

	•
Start	Enter value to be calculated.
New Entry	Enter two new currencies.
Change	Change the two currencies.
Delete	Delete the two currencies.
Delete All	Delete all currency pairs after confirmation



Stopwatch

⊗!

Two intermediate times can be recorded and saved.



Reset

Reset to zero.



Start/stop.

Intermediate time.

Control using side keys:



Stopwatch menu

Options Open menu.

Save Record the time(s) measured and assign a name to them.

Reset Reset stopwatch.

Stopwatch Display the stored times.

View Display the stored times and intermediate times

Rename Rename stored entry.

Delete Delete entry.

Delete All Delete list.

Countdown

⊗!

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

Set Period of time.

Start Start counter.

Stop Interrupt counter.

Change Period of time.

Reset Reset counter to starting time.

Camera (Accessories)

You can use the phone to immediately view, save and send photos you have taken with the Mobile Camera IQP-511 (p. 130).

Shots can be taken in two different formats:

- Low resolution: QQVGA 160x120 pixels, memory size up to 6 KB to send as a picture message (p. 53).
- High resolution: VGA 640x480 pixels, memory size of one shot up to 40 KB - e.g. for further editing on PC. To allow the picture to be viewed on the phone display, a QQVGA picture is created for every VGA shot.

Camera

Press when the camera has been attached (in standby mode).

Or

Menu → 🗇 → Camera

First the number of shots still available is shown (depends on resolution chosen).

OK Confirm.

The last shot taken is shown.



Scroll through photos.



Shot

A shot (especially in high resolution) requires a few seconds to be processed.

Press the plus/minus side key at the top. You will hear an advisory tone when the exposure time has expired. The photo is shown on the display and saved automatically.

Flash

The flash function can be activated/ deactivated in the option menu.

If the flash is switched on from "Options", the flash is charged before taking a picture:

Press the **plus/minus side key at the top briefly**. The flash is loaded.

Press the **plus/minus side key at the top again**. The photo is taken with the flash.

Additional information

Photograph without flash when the function Use Flash is switched on:

Hold down the plus/minus side key at the top. The charging process for the flashlight is omitted and a shot is taken immediately.

Camera menu

Options Open menu.				
Use Flash	Use flashlight (only when camera is plugged in)			
Full screen	Switch to full screen mode.			
Delete	Delete current picture after confirmation.			
Delete All	Delete all pictures after confirmation.			
Move	Move currently selected picture to another folder (if necessary, first choose resolution). See also File Manager, p. 112.			
Move all	See above.			
Send via	Send picture by: MMS (only low resolution), e-mail, IrDA.			
Info	Display number of shots still available.			
Setup	Set resolution: Low High & Low Set display: Full screen			

Additional information

If the memory is full or the camera is not attached:



Delete picture currently shown.



Toggle between reduced/full screen

Set display lighting.

Voice command

Functions can be started by a voice command. A maximum 20 voice recordings for voice dialing or voice commands can be saved in the phone (not on SIM card!).

Record

Menu → 😈 → Voice command

A list with the functions available is displayed.



Select a function.

Record Yes

Confirm selected

function.

Press.

Start

Start recording.

A short signal sounds. Now say the command corresponding to the function and **repeat** it when prompted.

Apply

Hold down the plus/minus side key at the bottom (in standby mode).

A short signal (beep) sounds and a prompt appears in the display. Now say the function.

Noisy environments may affect voice recognition.



Voice command menu



Highlight required entry.

Options

Open menu.

	o p o
Play	Play back the recording belonging to the entry.
New sample	Start new recording for an entry.
Delete	Delete entry.
Delete All	Delete all recordings.

Remote synchronization

Menu → 💬 → Remote Sync.

You can use this function remotely to access externally filed data (addresses, calendar, etc.) and synchronize these with the data on your phone. The data can, for example, be saved on a company computer or the Internet.

Synchronize



Computer is selected and synchronization started.

Sync. setting

Setup

Start synchronization.

Sync. Profile

A number of profiles can be defined.



Select profile.

Options

Open menu.

Change Sett.

Select.

Highlight database areas to be synchronized:

Calendar

Contacts

Notes

Tasks

Server Setting

Different functions are offered depending on the situation:

Save



Sync. mode	Fast: Only data that has changed will be synchro- nized in both directions. Slow: All data will be syn- chronized in both direc- tions.
Provider	Select or set access profile (p. 84).
Home	e. g. http:// www.my-siemens.com/ s56sync
Port:	Enter port number, e.g. 80.
Login name:	Enter user name (Login name).
Password:	Enter password (shown as a series of asterisks).
Calendar path Address path Notes path Task path	Folder name with path details.
HTTP authent.	Depends on server provider.

Save settings.

Activate remote sync. profile

Sync. setup Select.

Sync. Profile

Select.



Select profile.

Activate

Activate. The current profile is selected.

Additional information

On the Internet under

www.my-siemens.com/SyncMI

SIM services (optional)

Your service provider may offer special applications such as mobile banking, stock prices, etc. via the SIM card.

If you have such a SIM card, the SIM services will appear in the main menu under "Extras" or directly above the control key (on the left).



Symbol for SIM services.

Where there are several applications, these are displayed in a SIM services menu.

Menu → 💬 → SIM services

With the SIM services menu, your phone is ready to support future additions in your service provider's user package. For further information, please contact your service provider.

110 Fast access key

The left soft key and the number keys 2 to 9 (speed dialing numbers) can each be assigned an important phone number or a function. The phone number can then be dialed or the function started at the touch of a button.

Additional information

The left soft key may already have a function allocated by your service provider (e.g. access to PSIM card services). It may not be possible to modify this soft key assignment.

The left soft key may also sometimes be replaced automatically by /oo to access a new message.

Key assignments available:

Internet (WAP)	p. 68
Phone number	p. 39
Alarm Clock	p. 103
New SMS	p. 47
Illumination	p. 75
Hide ID	p. 79
Missed Calls	p. 44
Received Calls	p. 44
Inbox (SMS)	p. 50
Favorites	p. 93
Call Screening	p. 77
File Manager	p. 112
ProSlide	p. 90
Bookmarks	p. 68
Games & More	p. 71
Call Forward	p. 79
New MMS	p. 53
New E-mail	p. 59

Drafts	p. 50
T9 Input	p. 74
IrDA	p. 83
Remote Sync	p. 108
Phonebook	p. 36
Addressbook	p. 39
Businesscard	p. 41
Calendar	p. 94
Appointments	p. 96
Tasks	p. 98
Agenda	p. 95
Notes	p. 99
Calculator	p. 103
Camera (Accessories)	p. 105
<empty></empty>	

Left soft key

Assign a function/phone number to the left soft key for fast access.

Edit



Internet

Press briefly.

Change

Scroll to application in the list.

 Assign a new application (e.g. New SMS) to the soft key. Fast access key

Select Confirm setting.

Apply

The setting "Carol" is used here only as an example.

· Special case Phone Number. Pick out a

Addressbook to assign to the soft key.

name (e.g. "Carol") from the Phonebook/

Carol

Hold down.

Speed dialing keys

Number keys 2 to 9 can be used as speed dialing numbers for fast access. For available key assignments see p. 110. Number key 1 is reserved for the mailbox number (p. 45).

Edit

In standby mode:

Press a number key (2–9). If the key is not yet assigned:

Press.

Set Or

New SMS

Press **briefly** (if **New SMS** is assigned for example).

Edit

Scroll to application in the list.

Special case Phone Number. Pick out a name from the Phonebook/ Addressbook for assignment to the key. Special case Bookmarks. Scroll to a URL in the bookmark list for assignment to the key.

111

Select

Confirm setting.

Apply

Select a stored phone number or start a stored application (e.g. New SMS).

In standby mode:

Press briefly.

The assignment of the number key 3 is displayed above the right soft key e.g.:

New SMS Hold down.

Or simply



Hold **down**.

Siemens AG 2001, I:\Mobil\L55\SL56\long\von_[it]\SL55_FastDial.fm

File Manager

To organize your files, you can use the file system like a PC file manager. The file system assigns special folders to different data types.

In order to protect content from being copied, two types of folders have been created: 1) Unprotected folders titled MyData and its subfolders and 2) Protected folders.

Data stored in the MyData folders can be sent out of the phone using MMS or email

Data that is received using WAP will be automatically stored in a protected folder based on the type of content, sound, graphic, etc.



A list of the folders and files is displayed.

Navigate through this list using the control key:



Scroll up and down.



Go back from folder.



Open folder or execute file with related application

or

Mark

with unknown file types: Highlight file.

Index structure

The file system assigns special folders to different data types.

cis to un	iereni data types.	
Animat- ion	Animations (p. 75)	*.bmx (anim) *.gif
Camera	Photos (p. 105)	*.jpg
Color scheme	Color scheme (p. 74)	*.col
Data objects	Inbox	
Internet	Browser files (miscellaneous)	
Misc	Other files	*.*
Pictures	Pictures (p. 53)	*.bmp *.jpg *.gif *.png
Sms	Sub-folders:	*.smo
	Inbox: Incoming mail	*.smi
	Draft: Drafts	
	Unsent: Unsent SMS messages	
	Sent: Sent SMS messages	
Tones& Alerts	Ring tones, melodies and sounds	*.mid *.amr *.mmf
Text	Text files	*.txt
Text modules	Text modules	*.tmo

☐ File Manager

Voice memo	Voice recordings	*.vmo
Java	Applications Data. Download link.	*.jad *.jar *.db
MyData		

File system menu

Options	Open menu
Open	Open folder.
Move	Place highlighted file or folder in temporary memory.
Сору	Copy highlighted file to temporary memory.
Paste	Transfer content of temporary memory to current folder.
Delete	Delete current entry.
Delete All	Delete all entries.
Mark	See highlighting mode (p. 117).
Mark All	All entries highlighted, see highlighting mode (p. 117).
New Folder	Create a new folder and give it a name (only one folder depth available).
Rename	Change highlighted entry.
Sort	Set sort criteria (alphabetical, type, time).
Attributes	Display information on file or folder selected.
Drive Info	Display the capacity used and available.

Print via.../Send via....

The phone provides you with several methods for sending, receiving or printing texts and data via different transmission routes. Access to these functions is available in the option menu of the relevant application. These menu items can vary depending on the application. Please make sure you use the ANSI character set for transmission purposes. Your printer has to be set to the correct conversion table (code page) in order to display special characters correctly.

IrDA (Infrared)

Activate IrDA, p. 83.

Application option:

Send/Print → Via IrDA

Send The data is sent via the selected transmission

route

Print The data is sent to the connected printer.

All via IrDA

Application option:

Send/Print... → All via IrDA

All entries from the Phonebook. Addressbook and organizer are sent or printed via the infrared port.

Send See above.

Print

See above.

Set import mode on receiving phone.

To receive via IrDA

Please turn on IrDA to receive (p. 83).

Via SMS/vCard

Phonebook and Addressbook entries as well as appointments can be sent as an SMS to other suitable cell phones.

With larger items, several SMS messages may be generated and sent as a concatenated message.

Via SMS/Text

Business cards, Addressbook entries or appointments can be sent as text messages by SMS (this may result in several being generated).

Import

Fnable transmission to receive several objects in succession via IrDA.

Data objects

Files received via IrDA or SMS are stored in the file system (p. 112).

Control codes (DTMF)

Sending control codes

You can enter control codes (digits) during a call so that an answering machine can be controlled remotely. These digits are directly transmitted as DTMF tones (control codes).

menu

Open call menu.

Send DTMF

Select.

Use the Phonebook

Save phone numbers **and** control codes (DTMF tones) in the Phone/ Addressbook like a normal entry.



Enter phone number.



Press until a "+" appears on the display (pause for connection setup).



Enter DTMF signals (digits).



If necessary enter further pauses of three seconds each to ensure correct processing at destination.



Enter a name.



Press.

You can also store just the DTMF tones (digits) without a phone number and send these during a call.

Copy protection

Applications can be copy-protected. Applications protected in this way can only be executed on specially designated devices. It is possible, however, to create a backup copy of these applications on the PC at any time using the "Siemens Data Suite" (p. 123).

Dial-up access CSD

(Circuit Switched Data)

Data transfer is made via a data connection to a default IP address of your network provider or service provider. This connection can be used for the exchange of data (e.g. for access to the Internet or for downloading games and applications as well as for using WAP services).

As long as this connection is established for using services or downloading applications from the Internet, charges for the connection accrue according to the price list of your network provider or service provider.

Notes A-Z

Dial-up access GPRS

⊗!

(General Packet Radio Service)

GPRS is a new method for transmitting data faster in the cell phone network. If you use GPRS and the network has sufficient capacity, you can be connected to the Internet permanently.

Some service providers do not yet support this service.

EMS

(Enhanced Messaging Service)

Besides formatted texts, you can also send

- pictures (bitmaps) up to max.
 32 x 32 pixels (black and white),
- · sounds,
- animations (sequence of 4 pictures) 8 x 8 and 16 x 16 pixels (black and white), using the EMS.

The elements listed above can be transmitted individually or together in an SMS.

With EMS, pictures and sounds can also be sent (e.g. as screensavers and ring tones).

This can result in messages exceeding the length of a single SMS. In this case individual text messages are concatenated to form a single message.

Extending numbers in the Phonebook/Addressbook

When entering a phone number in the Phonebook/Addressbook, digits can be replaced by a question mark "?":



Hold down.

This placeholder must be filled before dialing (e.g. with the extension number in a telephone system).

Select the phone number to call from the Phonebook/Addressbook:



Press.

? to be replaced by digits.



 
Press, number is dialed.

Highlighting mode

With some applications (e.g. Addressbook) one or more entries in a list can be highlighted, to carry out a function jointly.

Options Mark Open menu.

Activate highlighting mode.



If an **unmarked** entry is selected, this can be highlighted:

Mark

The current entry is highlighted.

If a **highlighted** entry is selected, the highlighting can be deleted:

Unmark Unmark the current entry.
Highlighting function in options
menu:

Options Open menu.

Mark All Highlight all entries.

Unmark All Delete highlighting on all marked entries.

HTTP

(Hypertext Transfer Protocol)

HTTP is the name given to the protocol that governs data transmission in the Internet. Using HTTP connections you can download applications and games (Games & More, p. 71) as well as polyphonic ring tones from the Internet. Configure an HTTP link using the HTTP profile (p. 73).

International dialing codes

Many international dialing codes are stored in your phone. In standby mode (□ +) not necessary when dialing from the Phonebook):

0 +

Hold down until a "+" is displayed. This replaces the first two digits of the international dialing code.

+List

Press.

Select the required country. The international dialing code is displayed. Now add the national number (in many countries without the first digit) and press the Call key.

Notes A-Z

JAD ☆ and JAR ☆

Three file types occur when using lava™:

The JAD file (Java Descriptor)

This file contains information on the application (JAR file) and its address for downloading. By activating a JAD file, the connection to the Internet is established and the executable application is loaded.

The JAR file (Java archive)

This file contains the executable application. By activating a JAR file, the application is started.

Combined files

These files result from JAR files being loaded via JAD files. In this case the JAD file is inserted into the JAR file. The display icon is the same as for JAR files.

The following icons appear when using Java™:



JAD file

JAR file

Java™

Java™ allows you to use numerous games and applications on your cell phone. You can download these applications from the Internet and install them on your cell phone. The application can be started after installation. Please refer to the operating instructions for each application.

Siemens does not guarantee in the case of Java applications, however, that the downloaded and installed Java application will also work well with your cell phone (p. 73).

Message memory full

The SIM memory is full when the message icon flashes. **No** more SMS messages can be received. Delete or save messages (p. 51).

Outside your own home network

If you are outside your "home" network, your phone will automatically connect to a different GSM network (p. 88).

Own numbers

You can enter your "own numbers" in the Phonebook (e.g. fax) for information. These numbers can be changed or deleted and also sent as an SMS.

Notes A-Z

Performance

A full battery will deliver between 60 to 175 hours of standby time or 100 to 180 minutes of talktime.

The length of performance depends on the operating conditions:

Operation carried out	Time (min)	Decrease in the standby time by
Calling	1	30 - 60 minutes
Display back light *	1	30 minutes
Network search	1	5 -10 minutes

^{*} key input, games, organizer etc.

Extreme temperatures reduce the standby time of the phone considerably. Avoid exposing the phone to direct sunlight or placing it on a radiator.

Phone number/URL in SMS

Phone numbers highlighted in the text can be dialed or stored in the Phonebook/Addressbook. URLs (Internet addresses) can be called up directly and the HTTP download started. To do this the HTTP profile (p. 73), or the WAP profile (p. 70) must be installed and activated.



Press to dial the phone number/download.

Phone number memo

You can type in a phone number on the keypad during a phone call. The person you are talking to will hear this. The number can be stored or dialed after the current call has ended

Quick menu selection

All menu functions are numbered internally. By entering these numbers one after the other, the function may be started at once.

e.g. write a new text message:

Menu

Press.

5 jkl

for Messages

1 🕳

for New SMS

Service numbers

There may be numbers saved in the Phonebook (<Special Books>, <Service Numb.>, p. 36) that were put there by your service provider. You can call local or nationwide information services or use services of the service provider.

Set Forward

Forward

Forwards the caller to the mailbox, for example, if the Busy diversion is set and the function Call Waiting is activated (see also p. 79).

Siemens AG 2001, I:\Mobil\L55\SL56\long\von_[itl]\SL55_A-Z.fm

Notes A-Z

SIM card problems

You have inserted your SIM card. Despite this, the following message appears:

Please insert your SIM card

Please check that the card is **correctly** inserted and the contacts are clean; if necessary, clean them with a dry cloth. If the card is damaged, please contact your service provider.

See also "Questions & Answers" p. 124.

SMS Push

This function allows you to call up an Internet address (URL) straight from a text message. After selecting it, the URL is highlighted. By pressing the Call key, the WAP browser is automatically started and the highlighted Internet address is called up.

SMS status report

If the phone was unable to send the message to the service center, a retry option is available. If this attempt also fails, contact your service provider.

The confirmation Message sent! only indicates transmission to the service center, which then tries to deliver the message within a certain time-frame.

See also "validity period", p. 63.

Software version

To display the software version of your phone in standby mode enter:

*#06#, then press Info.

Switch ring tones on/off



Hold down.

In standby mode

All sounds (including the ring tone) can be switched off and then on again. The function will end when the cell phone is switched off.

During a call:

Switch off the ring tone only for the **current** call/alarm (not if Any to Answer, p. 78, is active). Accepting or refusing the call ends this function.

- · The call will still be displayed.
- The silent alert remains active if it has been switched on previously.
- The sound settings will remain unchanged.

Two phone numbers



Special settings can be given to each phone number (e.g. ring tone, call forward, etc.). Switch to the required number first.

To switch the phone number/line in standby mode:



Press.

Line 1

Press.

WAP

(Wireless Application Protocol)

WAP is a technical standard that provides the basis for connecting mobile radio networks with the Internet. WAP allows you to surf the Internet using a cell phone, download games and applications and to use WAP services such as news, stock market data and information services

Special characters for WAP usage



Press repeatedly for:

.,?!'"0-()@/:_

WAP usage

Start with...

You can set which functions are to be displayed after Internet access:



Open the browser menu.

More ... Select.

Setup Select.

Start with... Select, then select from

the list:

Start menu

Browser menu

Home

Resume

Bookmarks

Directly enter Internet address (URL)

A WAP page must be shown in the display (online or offline):



Open the browser menu.

Go to URL Select.



Enter URL and confirm. The connection is established

Changing the home page

The address of the homepage is entered in WAP profiles (p. 70).

A WAP page must be shown in the display (online or offline):



Open the browser menu.

More ... Press.

Profiles Select.

Select the profile, for example:

e-Commerce

Select.

Edit

The entry card is displayed.

WAP param., then select Home.



Enter new address. Go to end of entry card.

Save

Press.

Notes A-Z

Bookmarks (URLs)

œ.

The list of bookmarks can contain a maximum of 10 entries or files. Each file can contain further bookmarks or files.

Save:



Open the browser menu.

Bookmarks

Select.

Online (save):

Add bookmark The current WAP

address is accepted as a hookmark

Offline (save):

(Empty)

Select.



Open menu.

New Entry Select, enter name/header and URL and confirm.

Save

Press.

To use:



Open the browser menu.

Bookmarks

Select.



Select bookmark/file.

Go

The bookmark selected is dialed.

Without SIM card

If you switch on the phone without a SIM card, you can use some of the phone functions.



Press soft key. The functions are displayed.



Emergency, SOS.

The phone is supported by Xtnd Connect Synchronization SW and a modem assistant SW to use your phone as a GPRS modem. This software can also be found on the Siemens Web site.

Synctool (XTNDConnect[®] PC)

With this module you can synchronize the Organizer databases on your phone with your PC. The software synchronizes your phone automatically with Outlook® or Lotus Notes™.

A detailed list of the PIM versions supported can be found in the online help for the Siemens Data Suite.

GPRS Modem Assistant

The GPRS Modem Assistant enables GPRS links to be created from a laptop, which gives you Internet access with a laptop and cell phone while on the road.

124

Questions & Answers

If you have any questions about using your phone, visit us at www.my-siemens.com/customercare anytime. As further help we have listed below some frequently asked questions and answers.

Problem	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least two seconds.
	Flat battery.	Charge battery. Check charging indicator in display.
	Battery contacts dirty.	Clean contacts.
	See also below under "Charging error"	
Standby time too short.	Frequent use of organizer and games.	Restrict use if necessary.
	Speed search activated.	Deactivate speed search.(p. 88).
	Display illumination on.	Switch off display illumination (p. 75).
	Unintentional keystrokes (illumination!).	Activate key lock (p. 78).
Charging error (charge icon not displayed).	Battery totally discharged.	Plug in charger cable, battery is on charge. Charge icon appears after approx. 2 hours. Charge battery.
	Temp. out of range 41 F to 104 F.	Make sure the ambient temperature is right, wait for a while, then recharge.
	Contact problem.	Check power supply and connection to the phone. Check battery contacts and device interface, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket, check mains voltage.
	Wrong charger.	Use original Siemens accessories only.
	Battery faulty.	Replace battery.
SIM error	SIM card not inserted correctly.	Check that the SIM card is inserted correctly (p. 17).
	Dirty SIM card contacts.	Clean SIM card with a dry cloth.
	SIM card with wrong voltage.	Use 3V SIM cards only.
	SIM card damaged (e.g. broken).	Carry out a visual check. Change SIM card at service provider.

Questions & Answers

Problem	Possible causes	Possible solution
No network	Weak signal.	Move higher, to a window or an open space.
connection.	Outside GSM range.	Check service provider's coverage area.
	Invalid SIM card.	Complain to the service provider.
	New network not authorized.	Try manual selection or select a different network (p. 88).
	Network barred.	Check network barrings (p. 86).
	Network overloaded.	Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 88). Switching phone off and on again can speed this up.
Calls not possible.	Second line set.	Set first line (p. 87).
	New SIM card inserted.	Check for new barrings.
	Charge limit reached.	Reset limit with PIN 2 (p. 46).
	Credit used up.	Load credit.
Certain uses of phone not possible.	Call restrictions are in place	Barrings can be set by service provider. Check barrings (p. 86).
No entries in Addressbook possible.	Phonebook is full.	Delete entries in Phonebook or transfer to Address-book (p. 36).
Voice mail not functioning	Call forward to mailbox not set.	Set call forward to mailbox (p. 79).
SMS (text message)	SMS memory is full.	To free up capacity, delete (p. 51) or file (p. 51) text messages (SMS).
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Capacity problems with, for example, Games & More, ring tones, pictures, SMS archive.	Handset memory full.	Delete files in the relevant areas.
No WAP access, downloading not possible.	Profile not activated, profile settings wrong/incomplete.	Activate (p. 70), set (p. 70) WAP profile or HTTP profile (p. 73). If necessary ask your service provider.

126

Questions & Answers

Problem	Possible causes	Possible solution	
Text message cannot be sent.	Service provider does not support this service.	Contact your service provider.	
	Phone number for service center not set or incorrect.	Set service center (p. 63).	
	SIM card contract does not support this service.	Contact your service provider.	
	Service center overstrained.	Repeat message.	
	Recipient does not have a compatible phone.	Check.	
EMS pictures and sounds not displayed at destination phone.	Destination phone does not support the EMS standard.		
No Internet access possible.	Incorrect WAP profile set, or wrong or incomplete settings.	Check settings or ask contact service provider.	
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.	
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 127).	
Service provider- code error.	No authorization for this service.	Contact your service provider.	
Too few/too many menu entries.	Functions may have been added or deleted by the service provider via the SIM card.	Check with your service provider.	
No fax possible.	Wrong settings in the PC.	Check settings (p. 85).	
	No authorization for this service.	Contact your service provider.	
Charge meter does not work.	Charge pulse is not transmitted.	Contact your service provider.	
Damage			
Severe shock.	Remove battery and SIM and re-inser	rt them. Do not dismantle the phone!	
Phone became wet.	ret. Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Stand cell phone upright in an air current. Do not dismantle the phone!		

Reset all settings to factory default (see also p. 81): * # 9 9 9 9 #

Simple, straightforward support for technical and operational queries is available from our online support service on the Internet: www.my-siemens.com/customercare or in the chapter "Questions & Answers" (p. 124).

chapter addedictions a	7 thoward (p. 121).	
Abu Dhabi		Malta
Argentina	0 80 08 88 98 78	Mauri
Australia	13 00 66 53 66	Mexic
Austria		Moroo
Bahrain		Nethe
Bangladesh		New 2
Belgium	0 78 15 22 21	Nigeri
Bosnia Herzegovina	0 33 27 66 49	Norwa
Brazil		Omar
Brunei	02 43 08 01	Pakist
Bulgaria	02 73 94 88	Philip
Cambodia	12 80 05 00	Polan
Canada		Portug
China	0 21 50 31 81 49	Qatar
Croatia	0 16 10 53 81	Roma
Czech Republic	02 33 03 27 27	Russi
Denmark		Saudi
Dubai		Serbia
Egypt	0 23 33 41 11	Singa
Estonia		Slova
Finland		Slove
France		South
Germany	0 18 05 33 32 26	Spain
Greece	0.80 11 11 11 16	Swed
Hong Kong		Switze
Hungary	06 14 71 24 44	Taiwa
Iceland	5 11 30 00	Thaila
India	01 13 73 85 89 - 98	Tunis
ndonesia		Turke
Ireland	18 50 77 72 77	Ukrair
Italy		United
lvory Coast	21 35 02 35	United
Jordan		USA .
Kenya		Vietna
Kuwait		Zimba
		ZIIIIDa
Latvia		Note
Lebanon		plea
Libya		phor
Lithuania		
Luxembourg		pres
Macedonia		pres
Malaysia	03 21 63 11 18	your

						╝
Malta00	35	32	14	94	06	32
Mauritius			2	11	62	13
Mexico	01	80	07	11	00	03
Morocco			.22	66	92	09
Netherlands	0	90	03	33	31	00
New Zealand		.08	00	27	43	63
Nigeria		0	14	50	05	00
Norway			.22	70	84	00
Oman				79	10	12
Pakistan		.02	15	66	22	00
Philippines		0	27	57	11	18
Poland		.08	01	30	00	30
Portugal		8	08	20	15	21
Qatar						
Romania						
Russia						
Saudi Arabia						
Serbia						
Singapore						
Slovak Republic		.02	59	68	22	66
Slovenia						
South Africa						
Spain						
Sweden						
Switzerland						
Taiwan						06
Thailand						18
Tunisia						
Turkey	0	21	65	79	71	00
Ukraine	8	80	05	01	00	00
United Arab Emirates		0	43	31	95	78
United Kingdom	0	87	05	33	44	11
USA	1	88	87	77	02	11
Vietnam						
Zimbabwe			.04	36	94	24

Note: When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#), software version (to display press *#06#, then Info and if available, your Siemens Service customer number

^{* 0.12} euros/minute

Specifications

Exposure to radiofrequency signals

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radiofrequency (RF) signals.

In August 1996, The Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

- American National Standards Institute (ANSI) C95.1 (1992)
- National Council of Radiation Protection and Measurement (NCRP) Report 86 (1986)
- International Commission of Non-Ionizing Radiation Protection (ICNIRP) 1996
- · Ministry of Health (Canada) Safety Code 6

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards). For additional information concerning exposure to radio

frequency signal, see the statement by the FDA at the end of this user quide.

Technical data

GSM class 4 (2 Watt)

Frequency range: 824 - 894 MHz

GSM class: 1 (1 Watt)

Frequency range: 1,850 ... 1,990 MHz

Weight: 79 g/2.79 oz.

Size 81.6x44.5x21.9 mm

(63 ccm)

Li-Ion Polymer Battery: 500 mAh

Operating temper-

14 ° F to 131 °F

ature: SIM card:

3 0 V

Trademarks



CPS is a trademark of Cambridge Positioning Systems Limited.

Care and maintenance

Your phone has been designed and crafted with great care and attention and should also be treated with care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply and remove the battery!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas.
 When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone.
 Rough handling can damage internal circuit boards!
- Do not use abrasive chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

You will need the following details if you lose your phone or SIM card. Please enter here
the number of the SIM card (on the card):
the 15-digit serial number of the phone (under the battery):
the Customer Service number of the

Lost phone

Phone ID

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Accessories

Basics

Li-Ion Polymer Battery 500 mAh EBA-520

Spare battery.

Travel Charger

Travel Charger ETC-520

Travel charger with an extended input voltage range of 100–240 V.

Headset PTT HHS-510

Headset with PTT key to activate voice recognition and to accept and end calls.



Original Siemens Accessories www.siemens.com/us

Data/Applications

Data Cable DCA-500

For connecting the phone to the serial RS232 port of the PC.

Data Cable USB DCA-510

For connecting the phone to the USB port of the PC. With load function.

SyncStation DSC-500

Table cradle for your cell phone. Allows data exchange and simultaneously charges the phone via the power supply unit. Features a desktop charger, a data cable (serial) and a Y adapter.

Innovations

Mobile Camera IQP-511

Camera that plugs into the cell phone. Allows you to take photos and send them via the cell phone to other cell phones using MMS or via email to a PC. Integrated flashlight that can be switched on or off as required.

Car Solutions

Car Charger ECC-500

Charger for the cigarette lighter socket in the car.

Portable Car Kit HKP-500

Handsfree kit with integrated loudspeaker and microphone and auto answer feature. Simply plug into the cigarette lighter socket. Ideal for easy transfer between vehicles.

Mobile Holder HMH-520

Cradle without antenna port.

Basic Car Pack HKB-500

Allows in-car charging of your cell phone as well as handsfree talking. Contains a Car Charger, a Headset PTT and a Y adapter.

Car Kit Plus HKC-511

Handsfree kit with first-class digital call quality and supreme ease of use. Compatible with SL56 by using Mobile Holder HMH-520.

Products can be purchased through operators or by visiting my-siemens.com/us.



Original Siemens Accessories

www.siemens.com/us



The U.S. Food and Drug Administration's (FDA) Center for Devices and Radiological Health Consumer Update on Mobile Phones

FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is know – and what remains unknown – about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

Why the concern?

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered nonsignificant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism. lower levels of RF might cause adverse health effects as well. Although some research has

been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate adverse health effects associated with the use of mobile phones.

What kinds of phones are in question?

Ouestions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna — the primary source of the RF — and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called "cordless phones," which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

How much evidence is there that handheld mobile phones might be harmful?

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously – up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the

safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

1. In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepithelliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the

U.S. FDA

National Cancer Institute is expected to bear on the accuracy and repeatability of these results.¹

2. Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus follow-up research is necessary. 2

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Internet Association (CTIA) in particular is expected to lead to FDA providing

research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.³
- In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used. Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.⁴

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide

the necessary answers to the outstanding questions about the safety of mobile phones.

What is known about cases of human cancer that have been reported in users of hand-held mobile phones?

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S. population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people. whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

What is FDA's role concerning the safety of mobile phones?

Under the law, FDA does not review the safety of radiation emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- Support needed research into possible biological effects of RF of the type emitted by mobile phones;
- Design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

U.S. FDA

· Cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health.

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- · Federal Communications Commission
- · Occupational Health and Safety Administration
- · National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

In the absence of conclusive information about any possible risk, what can concerned individuals do?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if people are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations

on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- · a mobile phone in which the antenna is located outside the vehicle.
- · a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package, or
- · a headset with a remote antenna to a mobile phone carried at the waist.

Where can I find additional information? For additional information, see the following websites:

- Federal Communications Commission (FCC) RF Safety Program (select "Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters"):
- http://www.fcc.gov/oet/rfsafety.
- · World Health Organization (WHO) International Commission on Non-Ionizing Radiation Protection (select Qs & As): http://www.who.int/emf

- United Kingdom, National Radiological Protection Board: http://www.nrob.org.uk
- Cellular Telecommunications Internet Association (CTIA): http://www.wow-com.com
- U.S. Food and Drug Administration (FDA)
 Center for devices and Radiological
 Health:
 http://www.fda.gov/cdhr/
 consumer/

lular Telephone Üse and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
² Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, DC; and personal communica-

1 Muscat et al. Epidemiological Study of Cel-

³ Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915- MHz simulated mobile phone signal on cognitive function in man. Int. J. Radiat. Biol., April 8, 1999.

tion, unpublished results.

⁴ Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors; a case-control study. Int. J. Oncol, 15: 113-116, 1999.

Siemens AG 2001, I:\Mobil\L55\SL56\long\von_[itl]\am_FDA.FM

138 FCC/Industry Canada Notice

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, please contact your local service facility.

139

Ten Driving Safety Tips



Your Siemens wireless phone gives you the power to communicate by voice – almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

Get to know your phone and its features such as speed dial and redial.

Carefully read your instruction manual and learn to take advantage of valuable features most phones offer including, automatic redial and memory dial – most phones can store up to 99 numbers in memory dial. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.

When available, use a hands-free device.

A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your phone or a speaker phone accessory, take advantage of these devices if they are available to you.

Position your phone within easy reach.

Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voicemail answer it for you.

Suspend conversations during hazardous driving conditions or situations.

Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

Do not take notes or look up phone numbers while driving.

If you are reading an address book or business card while driving a car, or writing a "to do" list, then you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

140 Ten Driving Safety Tips

Dial sensibly and assess the traffic.

If possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip, or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip — dial only a few numbers, check the road and your mirrors, then continue.

Do not engage in stressful or emotional conversations that may be distracting.

Stressful or emotional conversations and driving do not mix – they are distracting and even dangerous when you are behind the wheel. Make people you are talking with aware you are driving and if necessary, suspend phone conversations that have the potential to forward your attention from the road.

Use your phone to call for help.

Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away. Dial 9-1-1 in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it is a free call on your wireless phone.

Use your phone to help others in emergencies.

Your wireless phone provides you a perfect opportunity to be a "good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergencies where lives are in danger, call 9-1-1, as you would want others to do for you.

Call roadside assistance or a special wireless non-emergency assistance number when necessary.

Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call to 9-1-1. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless numbers.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1 (888) 901-SAFE, or visit our Web site at: www.wow-com.com

Provided by the Cellular Telecommunications Internet Association (CTIA)

Intellectual Property

Intellectual Property Restrictions

All Intellectual Property, as defined below, which is owned by or otherwise the property of Siemens Information and Communications Mobile, LLC ("Siemens"), its affiliates, partners or suppliers, relating to the Phone, including but not limited to accessories, parts or software relating thereto (the "Phone System"), is proprietary under federal laws, state laws and International treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) disassemble, decompile, reverse engineer, prepare derivative works from, modify or make any other effort to create source code from the software. No title to ownership in the Intellectual Property is transferred to you through purchase or possession of the Phone or its components. All applicable rights of the Intellectual Property shall remain with Siemens, its affiliates, partners or suppliers.

Siemens will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or

parts furnished hereunder with software, apparatus or devices not furnished by Siemens, nor will Siemens have any liability for the use of ancilary equipment or software not furnished by Siemens which is attached to or used in connection with the Product, The foregoing states the entire liability of Siemens with respect to infringement of patents by the Product or any parts thereof.

141

Laws in the United States and other countries preserve for Siemens certain exclusive rights for copyrighted Siemens software, such as the exclusive rights to reproduce and distribute copies of such Siemens software. Siemens software may be used only in the Product in which the software was originally embodied when purchased, and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution. or reverse engineering of such Siemens software or exercise of rights in such Siemens software is permitted. No license is granted by implication, estoppel or otherwise under Siemens patent rights or copyrights.

Birthday Addressbook40 Addressbook calendar 96 dial entry 41 Bookmarks (WAP)......68 new entry 39 Browser, WAP......69 read entry 40 Business card 35 Agenda......95 Aircraft mode 92 Calculator103 Alarm 103 Calculator functions103 appointment......97 Calendar 94 Call type......98 accept/finish......27 barring......86 All calls (call time/charge) 46 charges46 All calls (diversion)......79 conference......30 All incoming (barrings) 86 end26 Animation, at startup...... 75 forward......79 Animation, at switch off...... 75 hold28 Answering service (external)...... 45 menu30 Any key answer (answer call) 78 reiect28 Application, download 71 Call back27 Appointments......96 Call forward79 Archive (SMS)......51 Call lists44 Audio 76 Call waiting......29, 79 Authentication 85 Calls dialed (call list)......44 Auto display Calls received (call list)44 call time/charge 46 Camera105 CB...... 67 Car accessories......131 clock...... 82 Car kit Auto redial previous numbers 27 accessories......131 Auto time zone 82 settings......89 Care of phone129 R Band...... 88 CB services......67 Band selection 88 Cell Broadcast (CB)67 Change PIN23 Battery charge 18 Charge rate46 insert 17 Charging battery18 performance......119 Clock82 Big letters (message on display)... 75 Color schemes......74

Command (voice command) 107	F
Conference	Factory settings87
Connection profile 84	Fast access key110
Contrast 75	Fast network search88
Control codes (DTMF) 115	Fax/data mode85
Copy protection115	File system112
Countdown 105	Filter
CSD 115, 116	addressbook entries4
data 84	incoming calls77
Customer care 127	Flash106
D	Folder (file system)52, 113
Data objects 114	Forwarding (call)30
Dialing code26	G
Dialing with number keys 26	Games & More7
Dial-up access (connection) 84	Games (download)7
Dictating machine101	Getting started17
Directory (file system)112	GPRS
Display	Modem Assistant123
big letters 75	switch on/off83
color schemes74	Greeting75
contrast 75	Group43
icons 15	SMS to group49
illumination 75	H
Display (settings)74	Handset volume26
Driving safety 139	Handsfree talking28
DTMF tones (control codes) 115	Headset
Durat/Charges46	accessories130
F	settings90
E-mail	Hide ID79
lists61	Highlighting mode117
profile65	Hold call28
receive60	Home network88
write59	HTTP117
Emergency number 20, 122	HTTP profile73
EMS116	1
Enter PIN 19	lcons15
Enter text without T931	Identity number (IMEI)8
Entry no. (phonebook)36	Illumination (display)75
Extras 103	mammation (display)

IMEI number	MMS MMS
Import via IrDA114 Inbox	lists57
e-mail 61	profile64
MMS 57	receive56
Inbox (SMS)50	write53
Information services (CB) 67	Muting (microphone)30
Infrared (IrDA)	My menu93
Input language (T9) 32	My phone25
International dialing code 117	N
Internet 68	Network
J	barring86
JAD/JAR file118	connection87
Java118	settings87
K	New folder (file system) 52, 113
Key lock78	Notes99
Key tones	Notes A-Z115
Keypad (settings)78	Number busy27
Reypau (Settings)	0
L	Only 🔁86
Limit Durat/charges 46	Only this SIM86
Logo, provider logo74	Operating time of battery119
Loss of phone, SIM card 129	Organizar
M	Organizer94 Own (phone) numbers118
Mailbox 45	·
Maintenance of phone 129	Р
Menu	Phone (settings)79
my menu 93	Phone barring86
quick selection 119	Phone code23
voice control21	Phone ID81
Message	Phone identity number (IMEI)81
CB 67	Phone number extension116
e-mail 59	Phone number transmission
MMS53	on/off79
SMS47, 49	Phonebook
Message memory 118	call37
Messages on the display 15	location38
Microphone on/off30	new entry36
Minute beep	Pictures & sounds (SMS)48
7 /	

DIM	Catting
PIN error 126	Settings accessories89
usage 23 PIN 2 23	audio76 call forward79
POP3	clock82
Preferred directory35	display74
Print via	keypad78
profile	network87
e-mail 65	phone
HTTP73	security86
MMS64	Short message (SMS)47
SMS 63	Siemens City Portal25
WAP70	Siemens hotline127
Prompt	Signal strength20
Provider logo	Silent alert76
PUK, PUK2 23	SIM card
Q	insert
Questions & Answers 124	problems120, 124
R	remove barring24
Redial previous numbers26	SIM services (optional)109
Reminder	SMS
Remote synchronization 108	archive51
Ring tones77	lists50
•	pictures & sounds48
S	profile63
Safety precautions 3	push120
Screensaver	read49
Second call	send information120
Second phone number	T9 input32
Security23, 86	to group49
Security numbers23	write47
Send via	SMTP66
Service center (SMS)	Software version120
Service numbers (Siemens) 127	SOS7, 20, 122
Service tones	Special characters31
Set date/time82	Speed dialing keys111
Set ringer 76	Standard values81
Set time/date82	Standby mode20

Siemens AG 2001, I:\Mobil\L55\SL56\long\von_[it]\\SL55_FuguS\X.fm

146

Standby time 119 Start menu (WAP) 68 Surf & Fun 68 Swap...... 28 Switch off phone automatic 81 manually 19 Switch on 19 Synctool 123 т Т9 word suggestions...... 33 Talktime (battery)......119 Tasks.......98 Technical data 128 Text entry with T9...... 32 Text module 34 Time zones 82 Unanswered calls......79 Upper case, lower case letters 31 User groups 89 Validity period MMS...... 64 SMS 63 Voice dialing......42 Voice mail (mailbox)......45 Volume handset 26 profile......91 ringer 76

W	
WAP	
browser	69
parameters	70
tips on usage	121
Warning tones	77
X	
XTNDConnect® PC	123