
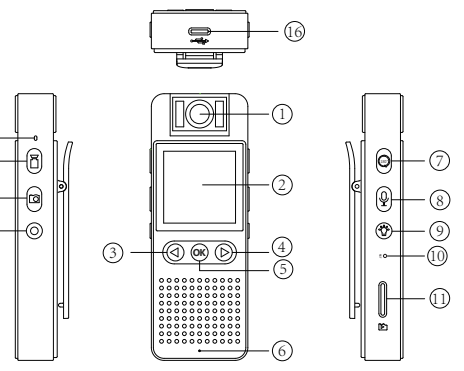 


使用说明书
INSTRUCTION MANUAL



使用产品前请仔细阅读用户手册，并妥善保管
Please read the user manual carefully before using the product and keep it properly

Product diagram



① HD lens

② Display screen

③ Left scroll key

④ Right scroll key

⑤ Confirm key

⑥ Indicator light

⑦ Flip key/WiFi on key

⑧ Recording key

⑨ Fill light key/screen saver key

⑩ Reset hole

⑪ TF card slot

⑫ Microphone hole


⑬ Video key

⑭ Photo button

⑮ Start key/Exit key

⑯ Data interface

Icon Introduction



① Video mode

② The fill light is on

③ Loop video segmentation time

④ Motion detection is enabled

⑤ Battery level indication

⑥ Number of photos prestored

⑦ Recording started

⑧ Video prestorage time

 
⑨ Video Resolution

⑩ Date/Time

⑪ Photo Mode

⑫ Photo resolution

Installing a TF card

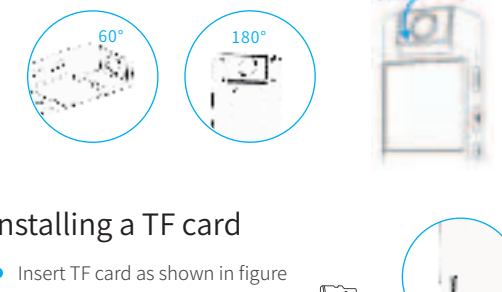

- Insert TF card as shown in figure
- Please use the original TF card
- Support 4-256G, C10 high-speed card

Use tutorial

1. Key function introduction

Power key		Long press Long press to turn on, and long press again to turn off.
Photo button		Short press In Photo, Record tap to return to Video mode, in Settings, Album tap to return to previous step or exit. Tap to enter photo mode. Tap photo mode one photo at a time.

2. Basic operating instruction

(1) Turn on the machine

Long press the " " key to power on the device when the device is powered off. The LCD is on and an announcement is heard.

(2) Turn off the machine

Long press the " " key to turn off the machine in any mode and the display is off.

(3) Video recording

In recording mode, press " " to start recording. In recording mode, press " " to stop recording.

(4) Motion detection

Long press " " in the recording mode to enter the motion detection mode. If motions are detected, the recording will start. If no motion is detected, the recording will stop automatically. Press " " to exit motion detection recording. Video recording for 1 minute once object movement is detected, and continuous object movement video recording for 3 minutes is saved in segments.)

(5) Take a photo

In the photo mode, press " " button to take a photo.

(6) Voice ecoriding

In recording mode, press " " to start recording. In recording mode, press " " to stop recording.

(7) Image flip

The default orientation of the image is back clip. If you need to rotate the lens for shooting, press " " to adjust the image.

(8) Screensavers

In any mode when the machine is turned on, short press " " to turn off the screen, Short press any button and the display lights up.

(9) Fill-in light

In any mode when the machine is turned on, Long press " " to turn on LED, and long press " " again to turn off LED.

(10) Phase album

Tap " " to enter the album. In the album, tap " " to browse up and down the pictures and videos And recording file, tap " " to play the video and recording. Press and hold the " " key in the album to delete (delete the current or all) or protect the file.

(11) Setting

In recording mode, press " " to enter setting. In the setting menu, press " " Key up or down, press " " to modify the parameters. Tap in photo mode " " key can enter the picture settings, for the photo parameters and exposure settings.

(12) Time setting

In the mode of video standby, long press " " to enter time setting. In the setting menu, select "date/time" to set the time.

(13) Reset hole

The machine crashes and the buttons are invalid, making it unable to use properly. Press and hold the power button for 10 seconds or use a pointed object to insert the " RST " reset hole to reset the machine. After resetting, it can be used normally.

APP download and installation

Scan the QR code below to download and install "Sports Camera", or search "Sports Camera" in Google play or App store to download and install.

Hot spot WiFi

1. WiFi switch

In the startup state, long press the " " button to turn on WiFi, and long press the " " button again to turn off WiFi.

2. WiFi connection


Search for the connection name "network beginning with CS_ such as CS06_CE88" in WiFi settings of mobile phone or tablet computer. After the connection is successful, open the Sports Camera App to enter the main interface and click " " to enter the real-time preview interface. Select video/photo in the preview interface. If you encounter other problems during operation, please click help on the main screen.

Connect to a computer

In any mode, can be directly connected to the computer, connected to the computer can be used as a U disk, you can freely copy, cut and paste files, delete, format.

Charging instructions

For battery indicator, please refer to the following figure:



Correlation parameter

Correlation parameter		
Video	Video resolution	1920*1080P
	Video format	MOV
	Video frame rate	25fps
	Image ratio	16:9
Audio	Recording format	WAV
Picture	Photo resolution	4608*3456P
	Photo format	JPG
Battery	Battery type	Built-in high capacity polymerized lithium battery
	Battery capacity	1400mAh
Other	Working time	Sustainable video about 290 minutes
	Charging voltage	DC-5V
	Storage support	Supports up to 256G Micro SD card
	Interface type	Type-C
	Support system	Windows;Mac Os;Linux
	Playback software	System or mainstream audio and video player software

Note:

Usage

Please strictly abide by the relevant laws of the country where the product is used, and do not use this product for any illegal purposes or use or suffer the consequences.

Operating temperature

Please use in natural temperature, do not use in the human body can not adapt to the temperature.

Working humidity

Please use the product in the suitable environment humidity. Do not place the product in the humid working environment. This product does not have waterproof function, avoid drenching or exposure to rain.

Shooting requirements

Use the camera in an environment with sufficient light sources. Do not point the camera directly at strong light sources such as the sun to avoid device damage.

 
Cleaning requirements

Do not use in an environment with too high dust density to avoid contamination of lens and other components dust, affect the camera effect.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equip generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio comm. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum 20cm distance between the radiator and your body. Use only the supplied antenna.

产品图示

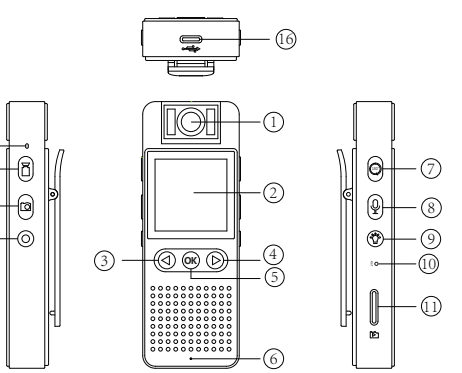

① 高清镜头

② 显示屏

③ 左翻键

④ 右翻键

⑤ 确认键

⑥ 指示灯

⑦ 翻转键/WiFi开关

⑧ 录音键

⑨ 补光灯/屏保键

⑩ 复位孔

⑪ TF卡槽


⑫ 麦克风孔

⑬ 录像键

⑭ 开机键/退出键

⑮ 数据接口

图标介绍



① 视频模式

② 已开启录像

③ 已开启补光灯

④ 视频预存时间

⑤ 循环录像分段时间

⑥ 视频分辨率

⑦ 已开启移动侦测

⑧ 日期/时间

 
⑨ 电池电量指示

⑩ 拍照模式

⑪ 照片预存数量

⑫ 照片分辨率

安装TF卡

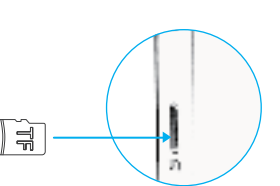

- 如图方式插入TF卡
- 请使用正版TF卡
- 支持 4—256G, C10高速卡

使用教程

1. 按键功能介绍

电源键		长按 长按开机, 再次长按关机。
拍照键		短按 在拍照、录音短按返回录像模式, 在设置、相册短按返回上一步或退出。短按拍照一张。
录像键		短按 短按进入录像模式。录像模式短按开始录像; 录像状态下短按停止录像。
移动侦测		长按 在录像模式长按开启移动侦测。在开机任何模式下短按息屏。
补光键		长按 长按开启LED灯, LED灯开启状态下长按关闭并开启LED灯。
录音键		短按 短按进入录音模式。录音模式短按开始录音, 录音状态下短按停止录音。

(4)移动侦测

在录像模式长按 " "键进入移动侦测模式, 有侦测到物体移动开始录像, 无物体移动会自动停止录像, 按 " "键退出移动侦测录像。(侦测到物体移动一次录像1分钟, 有连续物体移动录像3分钟一段分段保存)

(5)拍照

在拍照模式短按 " "键拍照一张。

(6)录音

在录音模式短按 " "键开始录音, 录音状态下短按 " "键停止录音。

(7)图像翻转

图像默认背方方向, 需要旋转镜头拍摄请短按 " "键调整图像。

(8)屏保模式

开机任何模式下, 短按 " "关闭屏幕, 短按任何按键显示屏幕亮起。

(9)补光开关

开机任何模式下, 长按 " "键开启LED灯, 再次长按 " "键关闭LED灯。

(10)相册

短按 " "进入相册, 在相册短按 " "键上浏览图片以及视频和录音文件, 短按 " "播放视频以及录音, 在相册长按 " "键进入删除 (删除当前或全部删除) 或保护文件。

(11)设置

在录像待机模式短按 " "键进入设置, 在设置菜单可通过短按 " "键上下选择, 短按 " "可进行各项参数设置修改, 在拍照模式短按 " "键可进入图片设置, 针对照片参数及曝光等设置。

(12)时间设置

在录像待机模式短按 " "键进入设置, 在设置菜单里选择一项 (日期/时间) 进入后时间设置。

(13)复位

机器出现死机, 按键无效, 无法正常使用, 长按开机键10秒或用尖利物对 " RST " 复位孔插入点按使机器进行复位; 复位后可以正常使用。

APP下载安装

扫描下方二维码下载安装 "Sports Camera", 或在 Google play、App Store 搜索 "Sports Camera" 下载安装。

热点WiFi

1. WiFi开关

开机状态下, 长按 " "键开启WiFi, 再次长按 " "键WiFi关闭。

2. WiFi连接


手机或者平板电脑的WiFi设置搜索连接名称为 "CS开头的网络例如CS06_CE88", 连接成功后打开 Sports Camera App进入主界面点 " "进入实时预览界面, 在预览界面选择录像/拍照, 操作时如有遇到其他问题, 请点击主界面帮助查看。

连接电脑

在任何模式下, 均可直接连接电脑, 连接电脑后可以作为U盘使用, 可以自由进行文件的复制、剪贴、删除、格式化。

充电说明

电池电量指示, 请参考下图指示:



相关参数

相 关 参 数		
视频	视频分辨率	1920*1080P
	视频格式	MOV
	视频帧率	25fps
	影像比例	16:9
音频	录音格式	WAV
图片	照片分辨率	4608*3456P
	图片格式	JPG
电池	电池类型	内置型高容量聚合物电池
	电池容量	1400mAh

其他

工作时间	可持续录像20分钟左右
充电电压	DC-5V
存储支持	最高可支持256G Micro SD卡
接口类型	Type-C
支持系统	Windows;Mac Os;Linux
播放软件	系统自带或主流影音播放软件

注意事项

使用场合
请严格遵守所在国家相关法律法规, 不得将本产品用于任何非法用途, 否则后果自负。
工作温度
请在自然温度下使用, 请勿在人体不能适应的温度下使用。
工作湿度
请在人类适宜环境温度下使用, 勿将产品置于潮湿的工作环境, 本产品不具备防水功能, 避免雨水或潮湿在雨中。
拍摄要求
请在充足光源的环境下使用, 勿将摄像头直接对准太阳等强光源, 以免硬件受损。
保洁要求
请勿用粗糙密度过大的环境下使用, 以免镜头心及其他部件沾染粉尘, 影响拍摄效果。

1