 
 


802.11ax-HE80 - Ant 1 (Nss = 1)

 
Channel 39 (6145MHz)

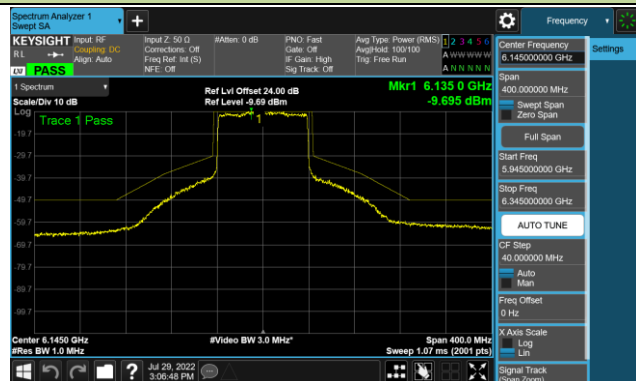


Channel 55 (6225MHz)

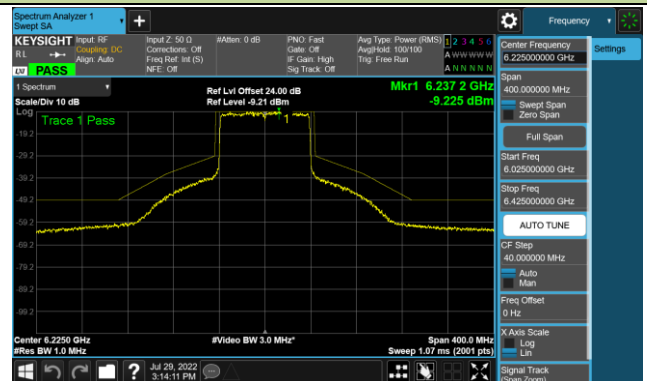


Channel 87 (6385MHz)

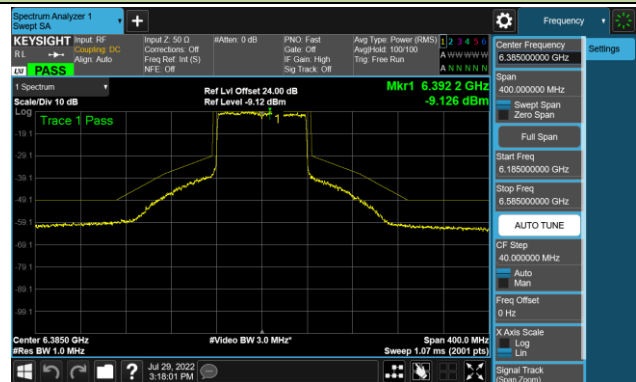


Channel 103 (6465MHz)

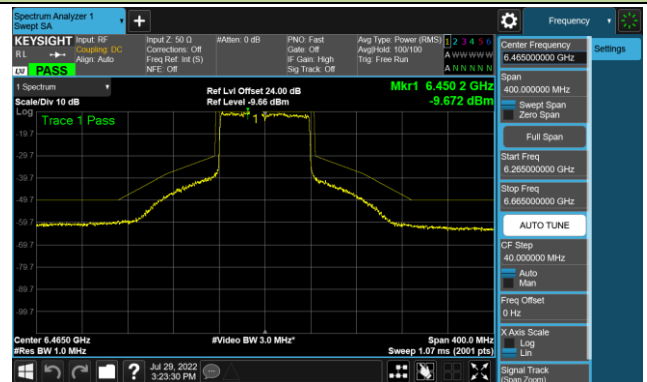 


Channel 119 (6545MHz)

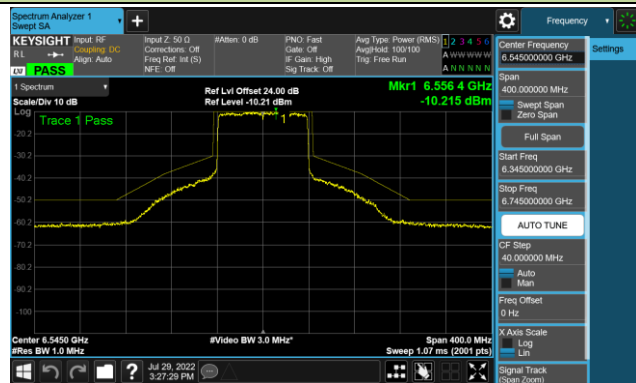 


Channel 135 (6625MHz)

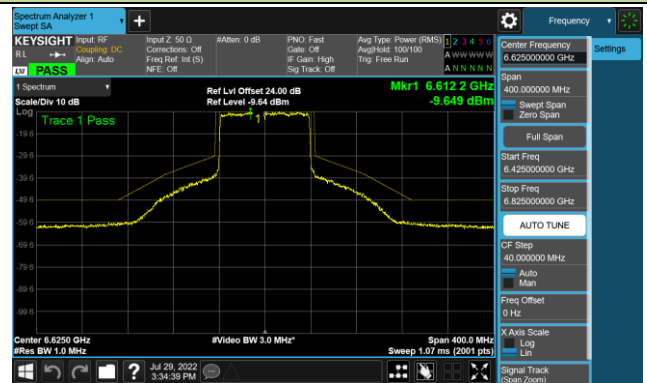 

Channel 151 (6705MHz)

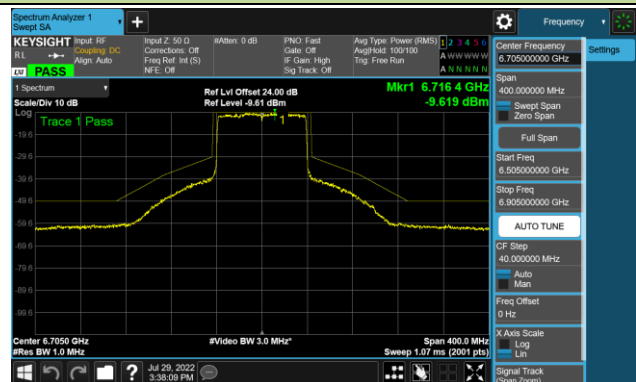 


Channel 183 (6865MHz)

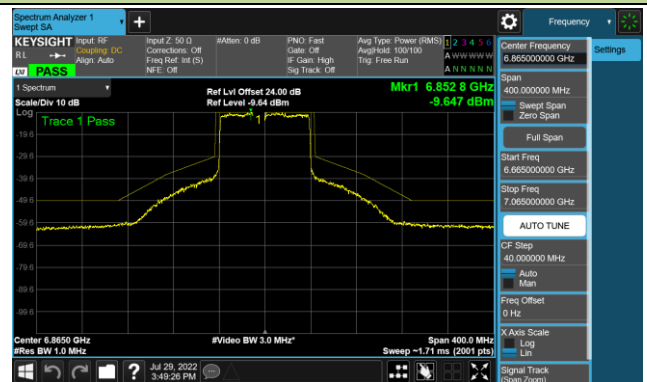 


802.11ax-HE80 - Ant 1 (Nss = 1)

 Channel 199 (6945MHz)

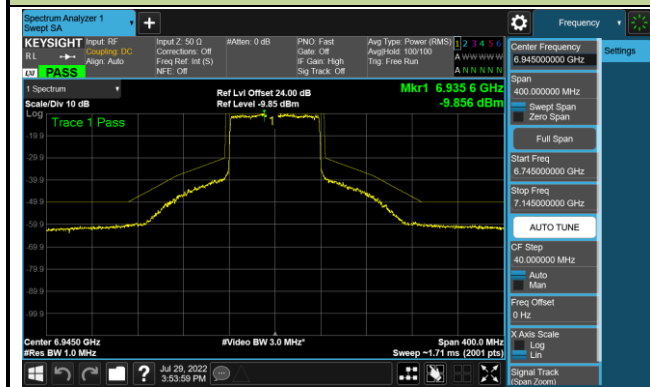


Channel 215 (7025MHz)

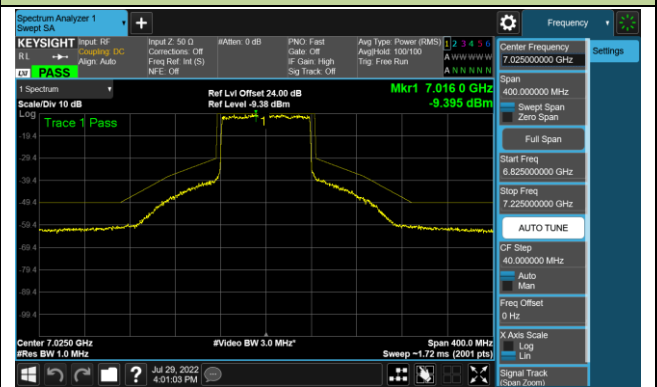 


802.11ax-HE160 - Ant 1 (Nss = 1)

 
Channel 47 (6185MHz)

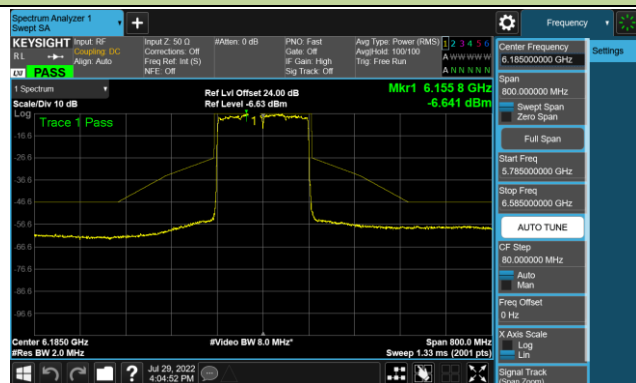


Channel 79 (6345MHz)

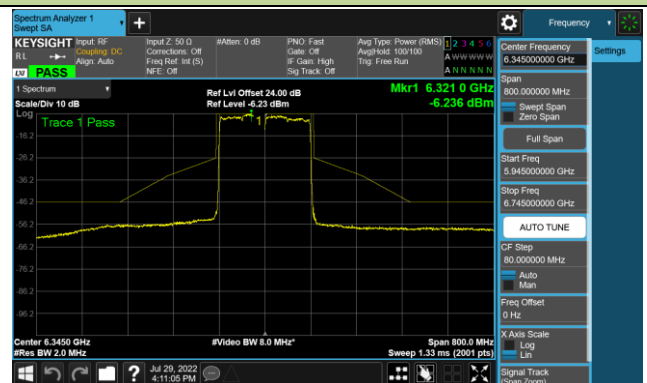 


Channel 111 (6505MHz)

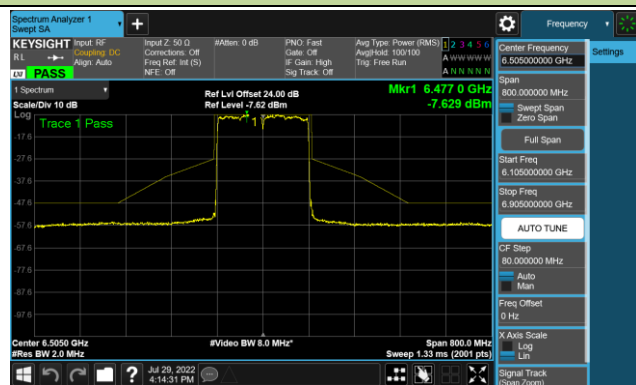 


Channel 143 (6665MHz)

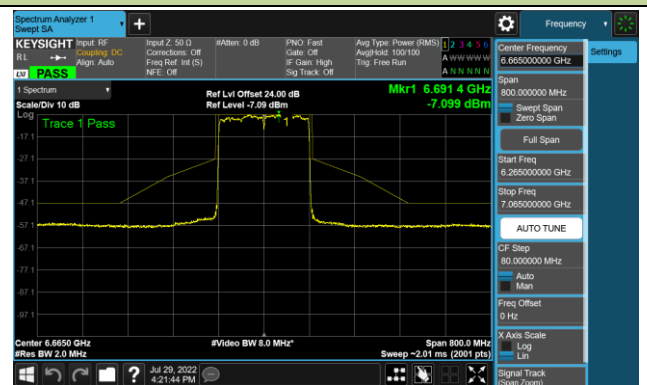 

Channel 175 (6825MHz)

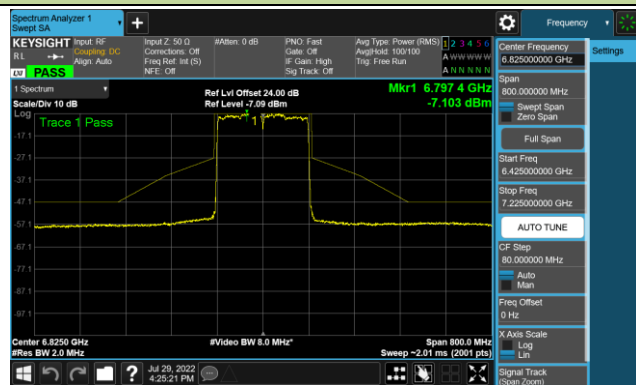 


Channel 207 (6985MHz)

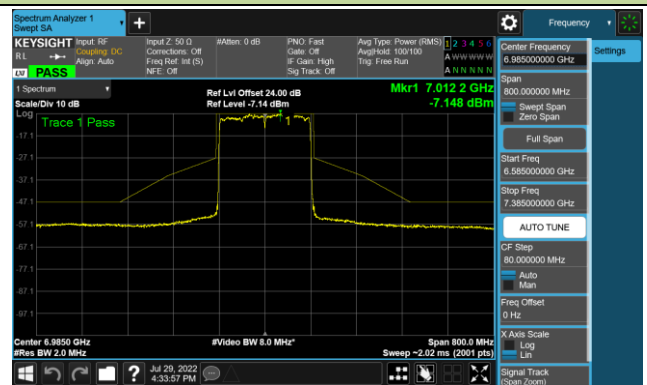 


802.11ax-HE20 - Ant 2 (Nss = 1)

 
Channel 33 (6115MHz)

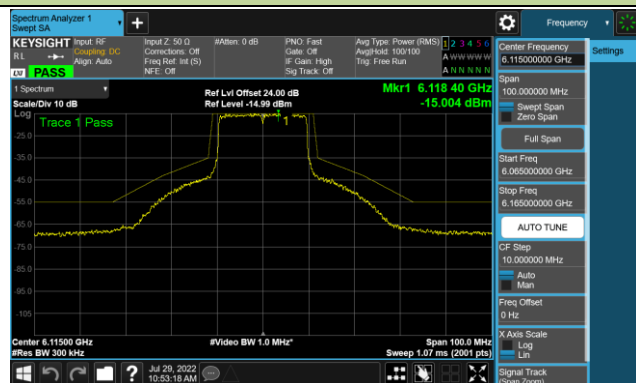


Channel 65 (6255MHz)

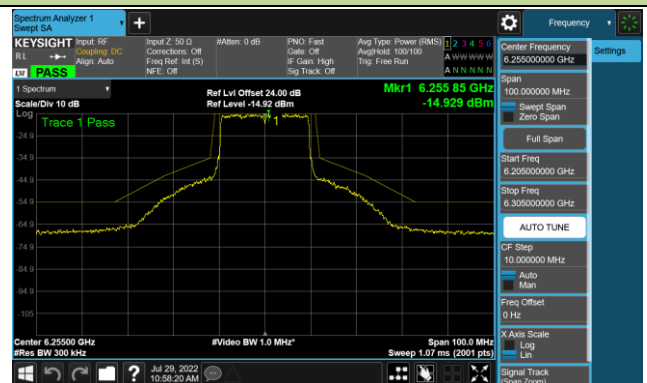 


Channel 93 (6415MHz)

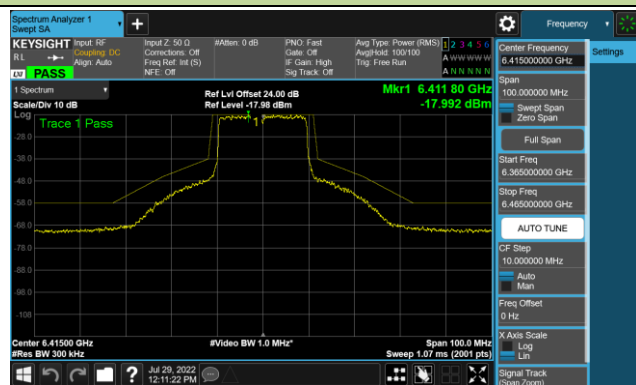 


Channel 97 (6435MHz)

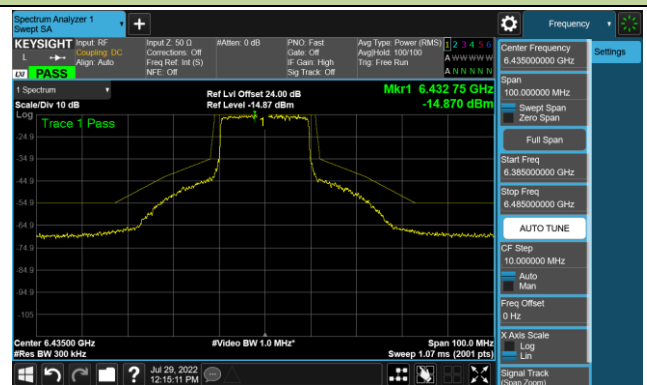 


Channel 105 (6475MHz)

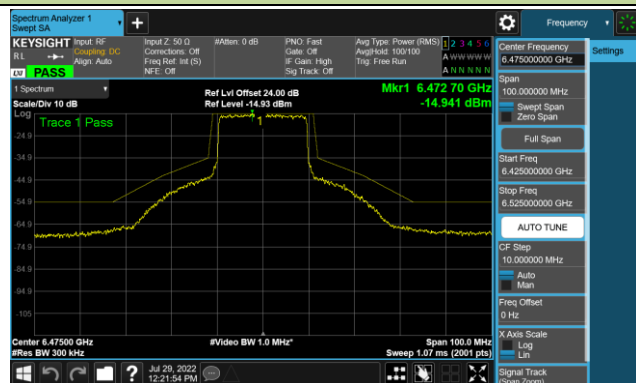 


Channel 113 (6515MHz)

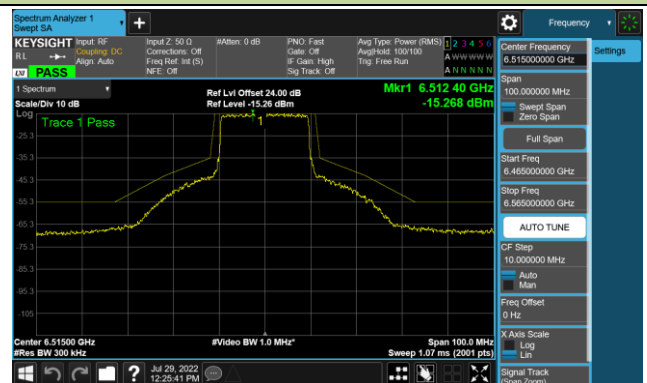 

Channel 117 (6535MHz)

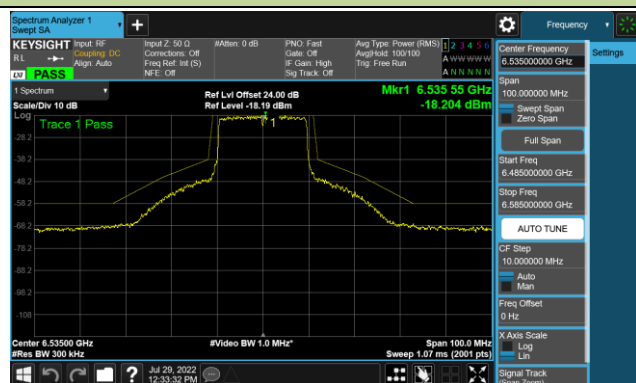 


Channel 153 (6715MHz)

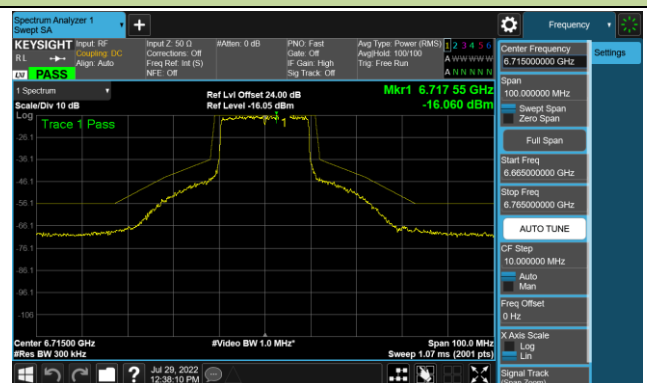 


802.11ax-HE20 - Ant 2 (Nss = 1)

 
Channel 181 (6855MHz)

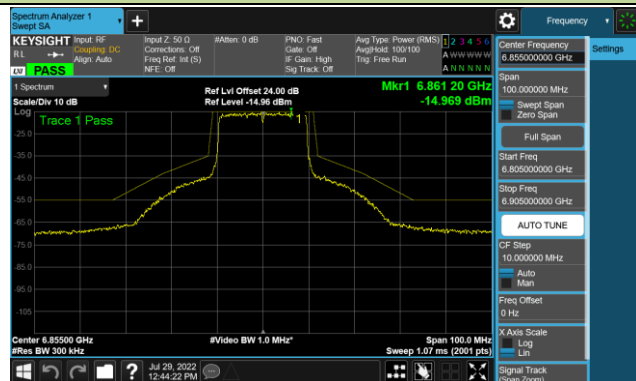


Channel 185 (6875MHz)

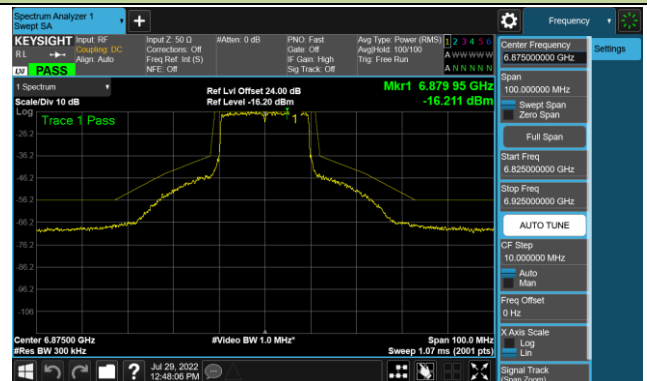 


Channel 189 (6895MHz)

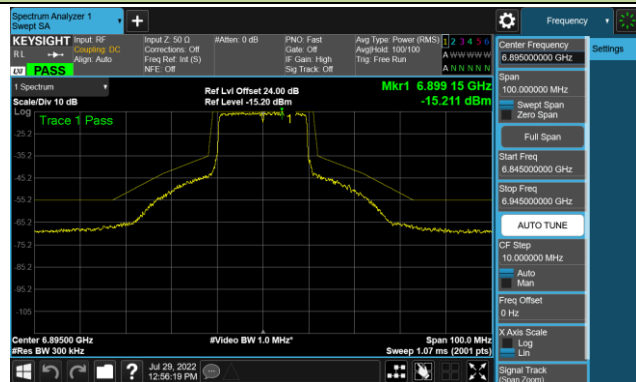 

Channel 213 (7015MHz)

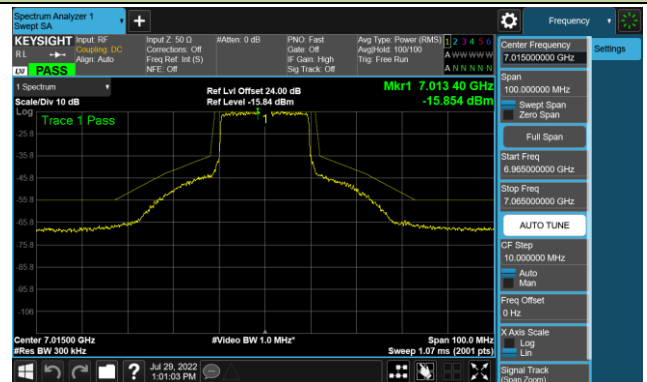 


Channel 229 (7095MHz)

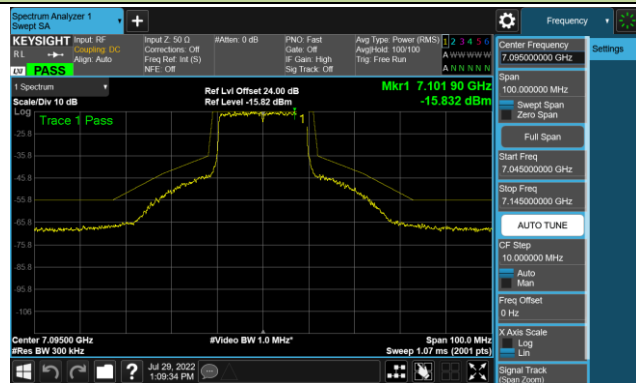 


802.11ax-HE40 - Ant 2 (Nss = 1)

 
Channel 35 (6125MHz)

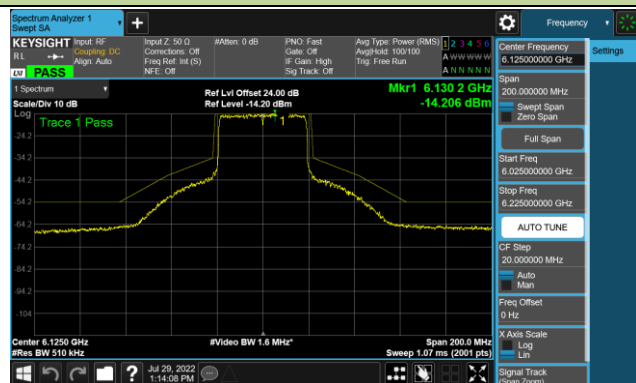


Channel 67 (6245MHz)

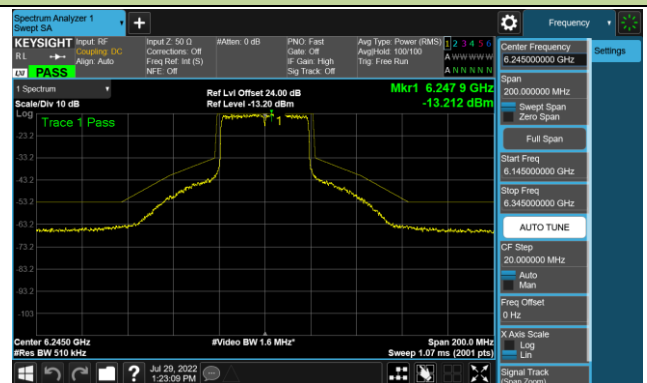 


Channel 91 (6405MHz)

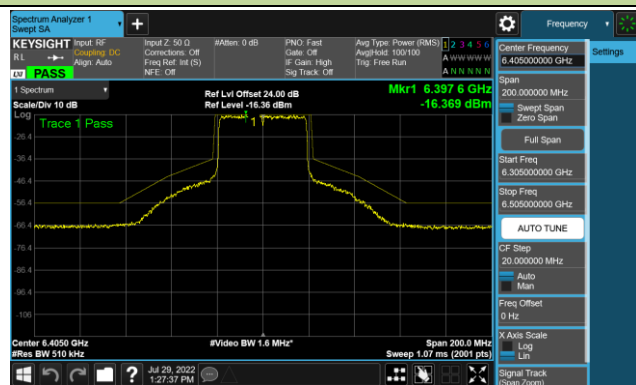 


Channel 99 (6445MHz)

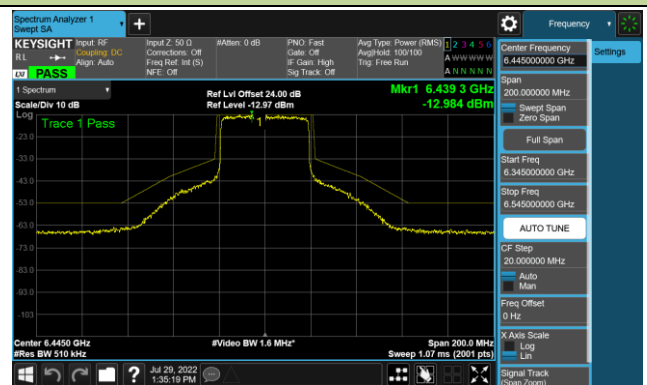 

Channel 107 (6485MHz)

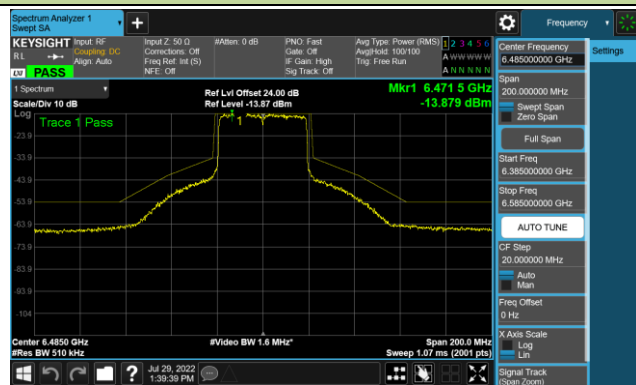 


Channel 115 (6525MHz)

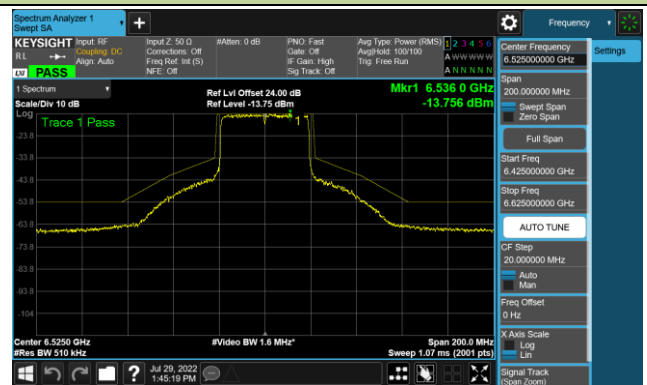 


802.11ax-HE40 - Ant 2 (Nss = 1)

 
Channel 123 (6565MHz)

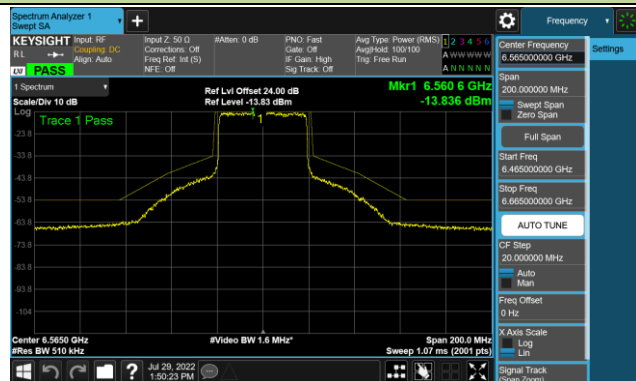


Channel 147 (6685MHz)

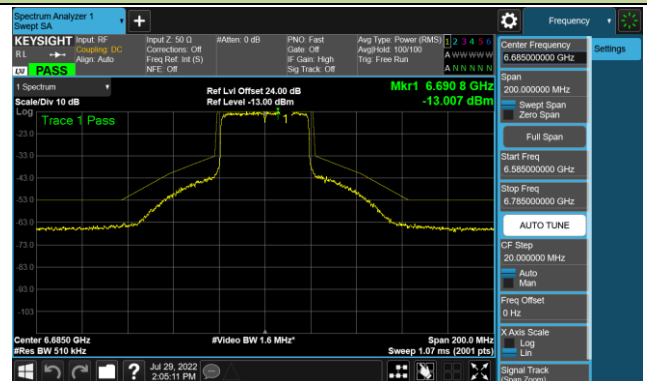 


Channel 179 (6845MHz)

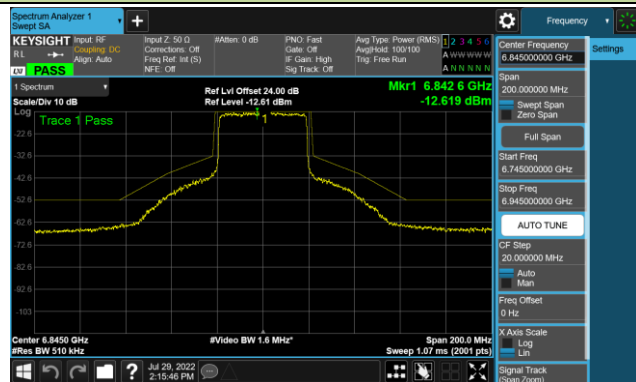 


Channel 187 (6885MHz)

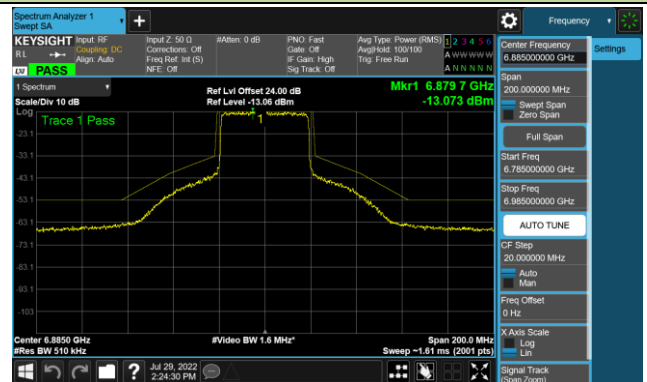 


Channel 195 (6925MHz)

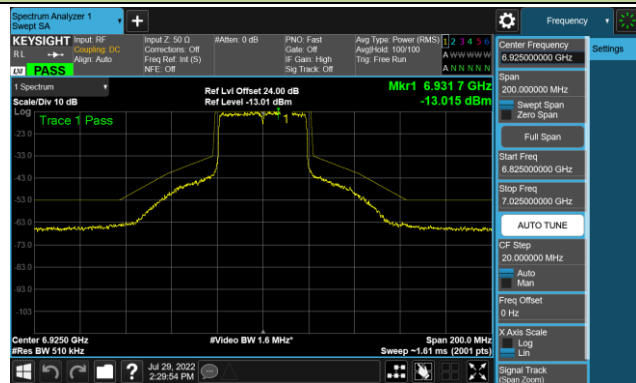 

Channel 211 (7005MHz)

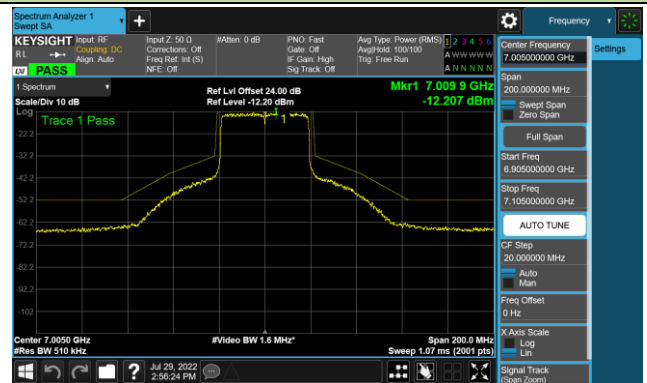 


Channel 227 (7085MHz)

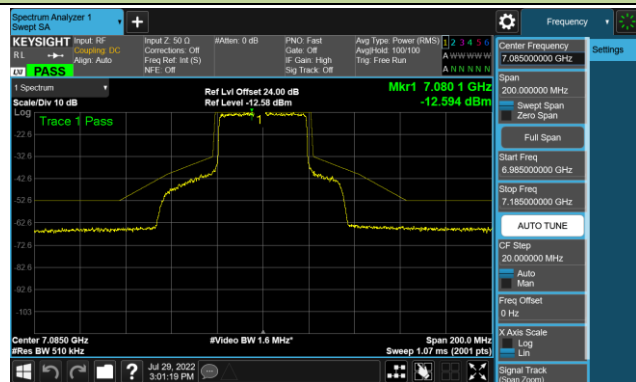 


802.11ax-HE80 - Ant 2 (Nss = 1)

 
Channel 39 (6145MHz)

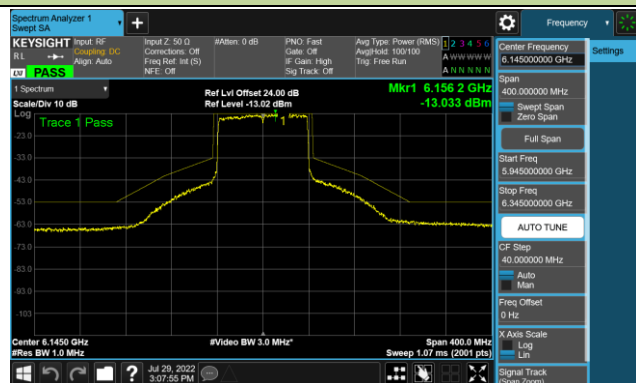


Channel 55 (6225MHz)

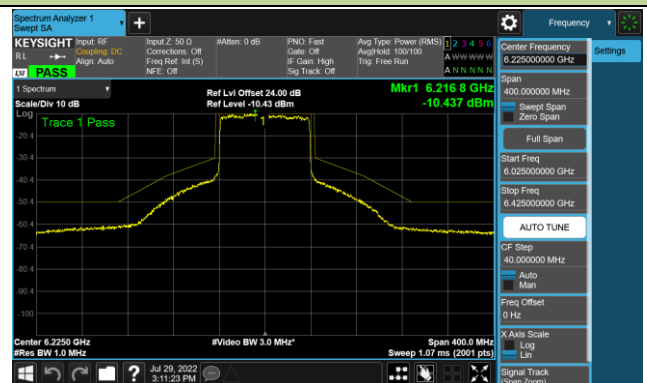 


Channel 87 (6385MHz)

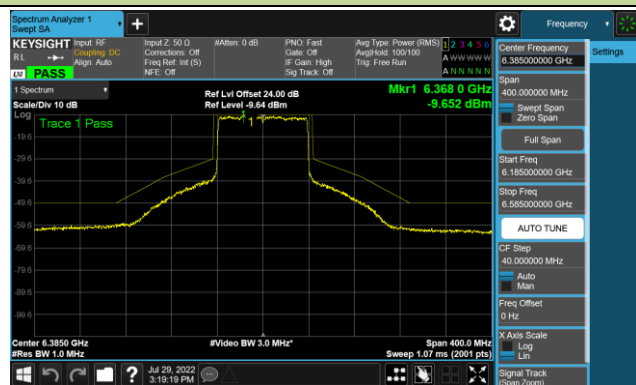 


Channel 103 (6465MHz)

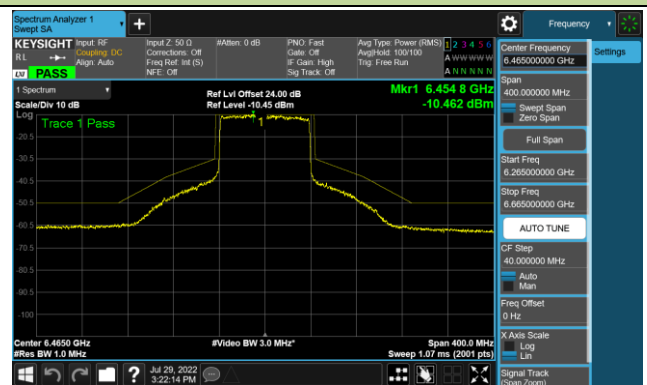 


Channel 119 (6545MHz)

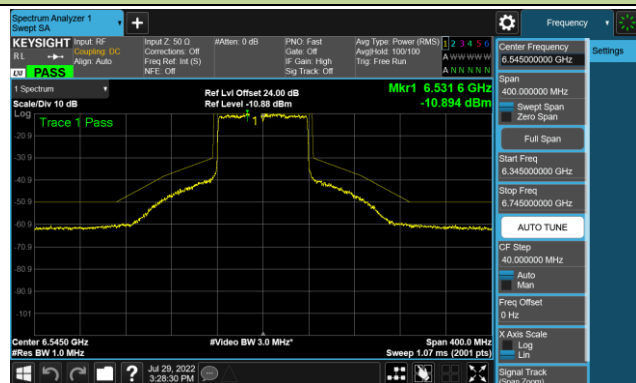 


Channel 135 (6625MHz)

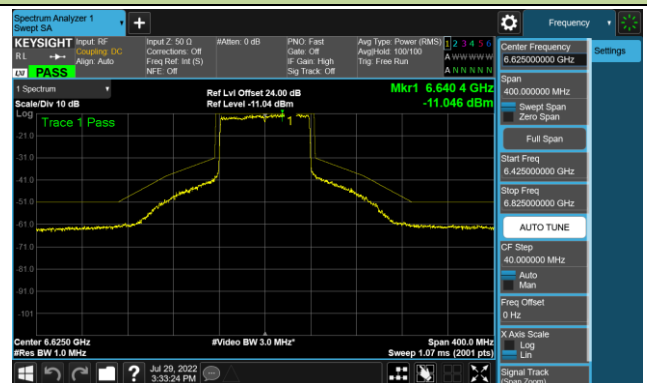 

Channel 151 (6705MHz)

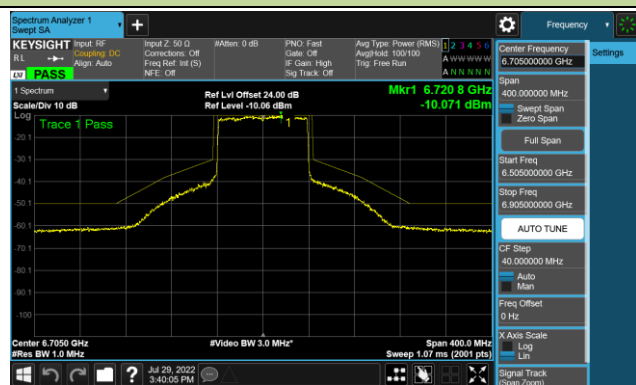 


Channel 183 (6865MHz)

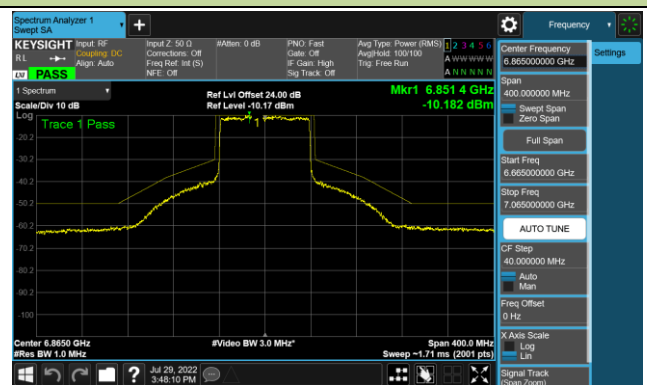 


802.11ax-HE80 - Ant 2 (Nss = 1)

 Channel 199 (6945MHz)

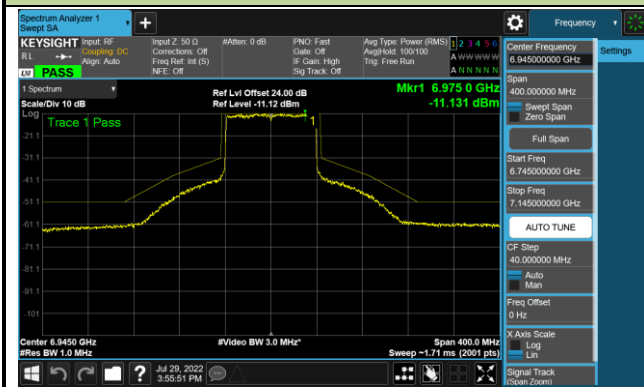


Channel 215 (7025MHz)

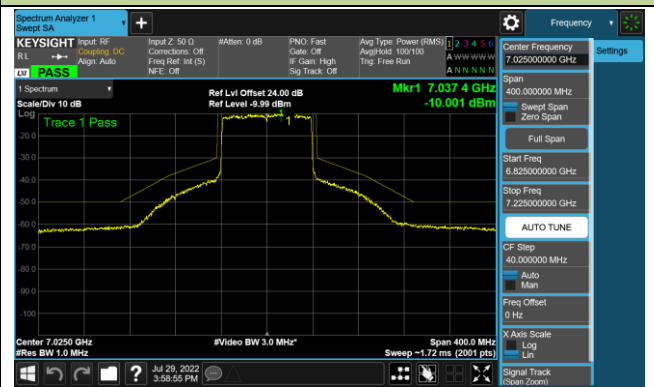 


802.11ax-HE160 - Ant 2 (Nss = 1)

 
Channel 47 (6185MHz)

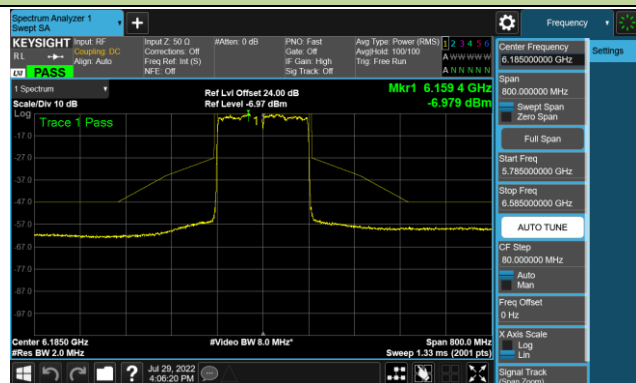


Channel 79 (6345MHz)

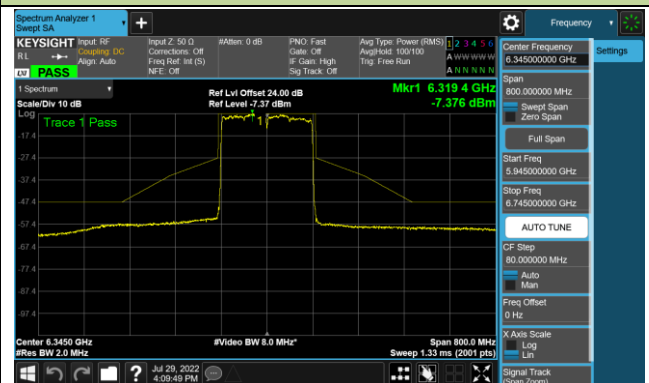 


Channel 111 (6505MHz)

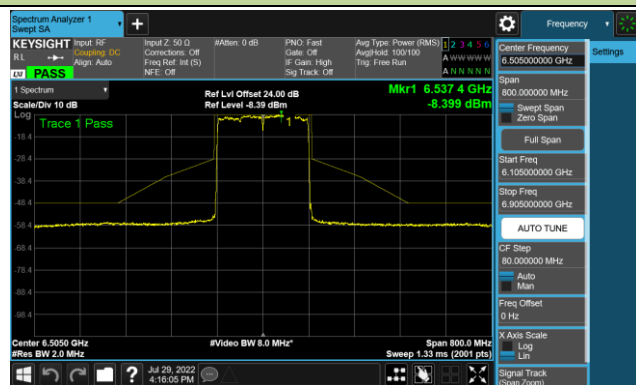 


Channel 143 (6665MHz)

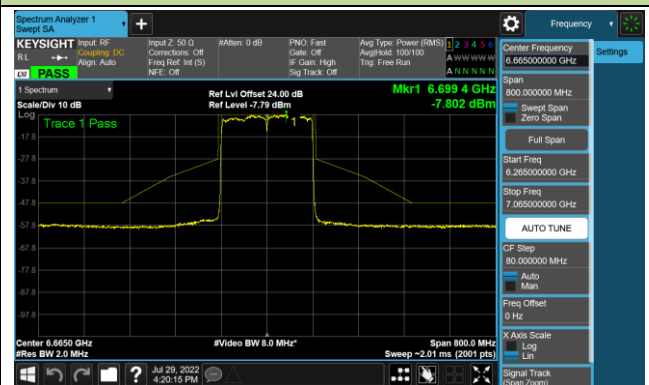 

Channel 175 (6825MHz)

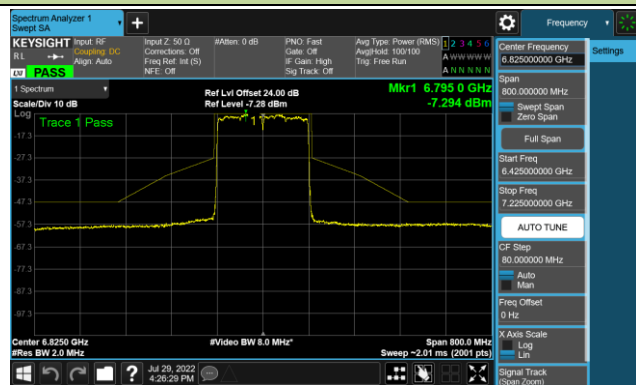 


Channel 207 (6985MHz)

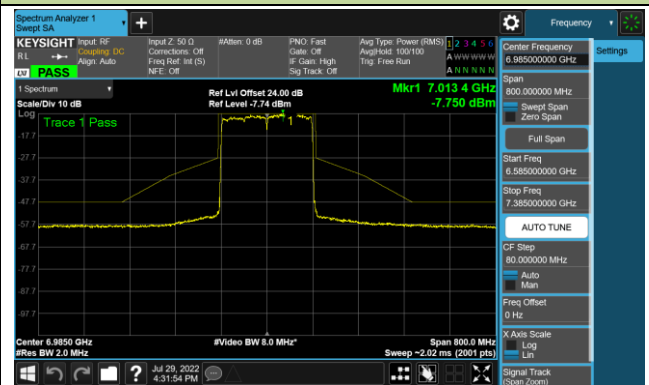 


802.11ax-HE20 - Ant 3 (Nss = 1)

 
Channel 33 (6115MHz)

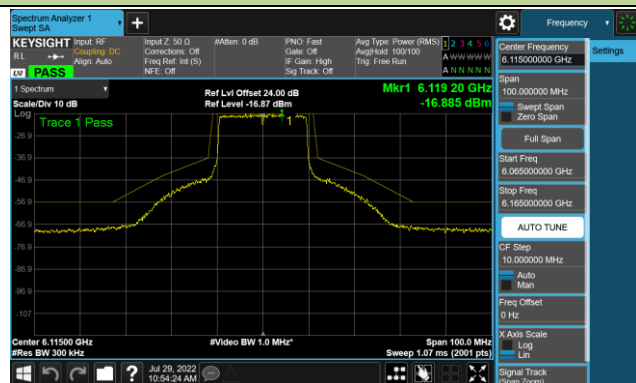


Channel 65 (6255MHz)

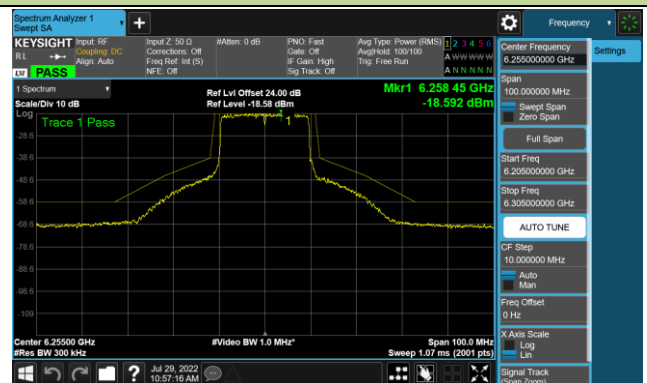 


Channel 93 (6415MHz)

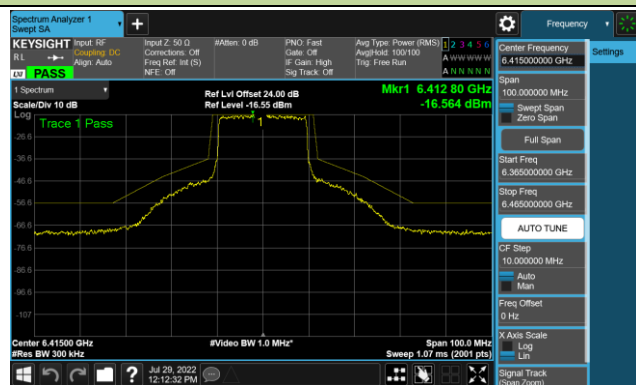 


Channel 97 (6435MHz)

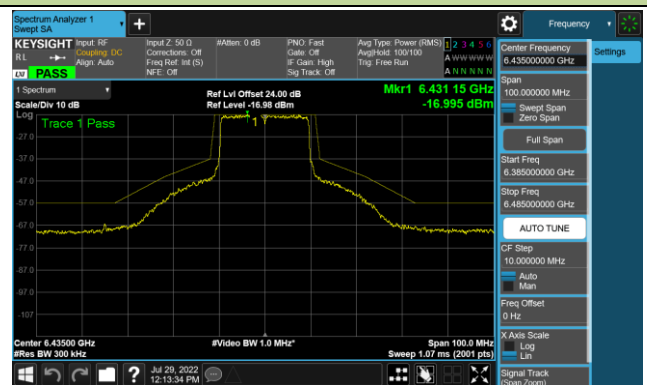 


Channel 105 (6475MHz)

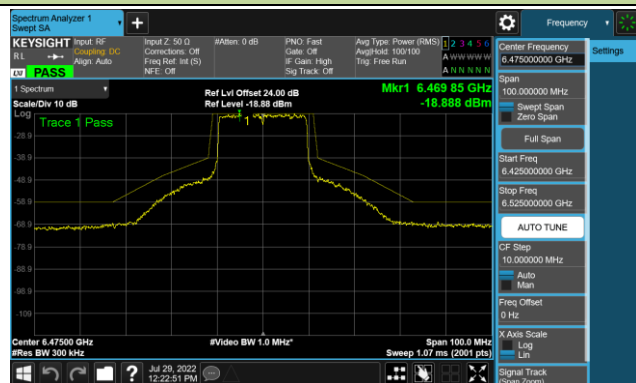 


Channel 113 (6515MHz)

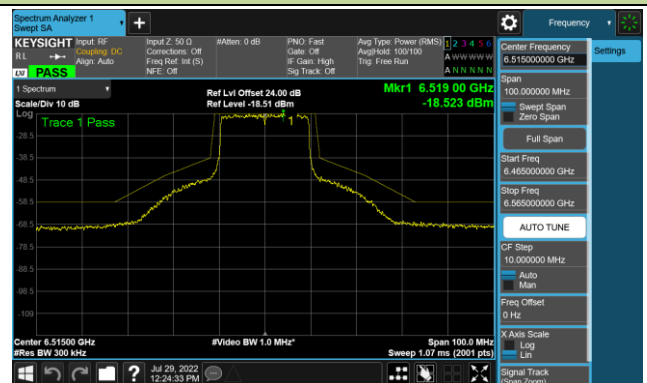 

Channel 117 (6535MHz)

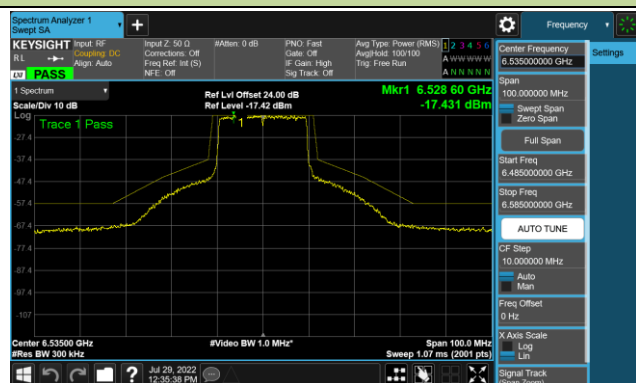 


Channel 153 (6715MHz)

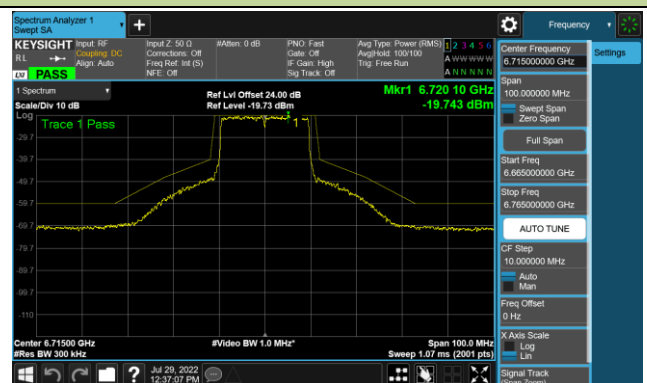 


802.11ax-HE20 - Ant 3 (Nss = 1)

 
Channel 181 (6855MHz)

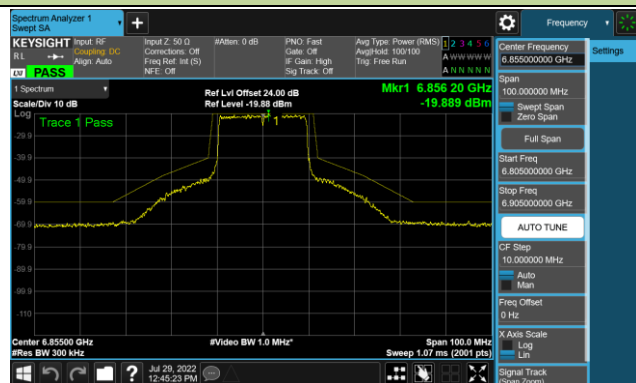


Channel 185 (6875MHz)

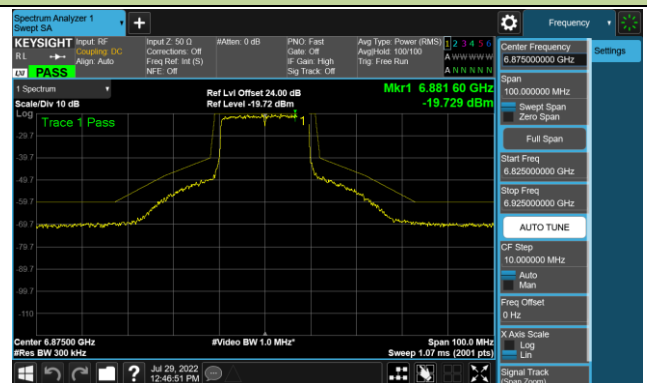 


Channel 189 (6895MHz)

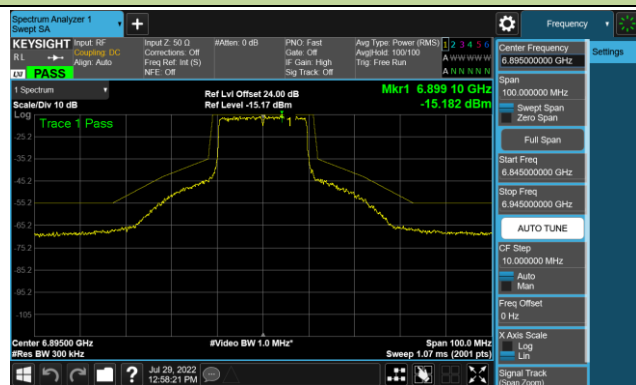 

Channel 213 (7015MHz)

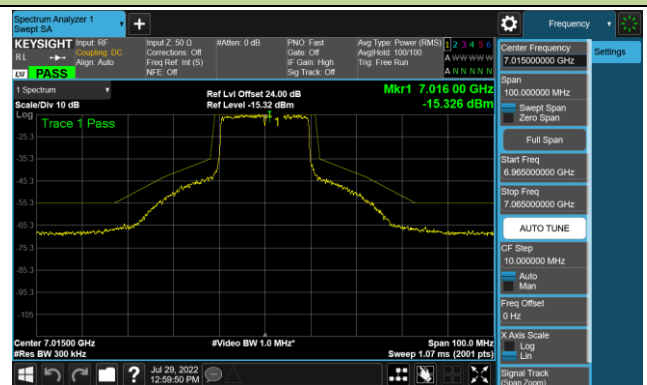 


Channel 229 (7095MHz)

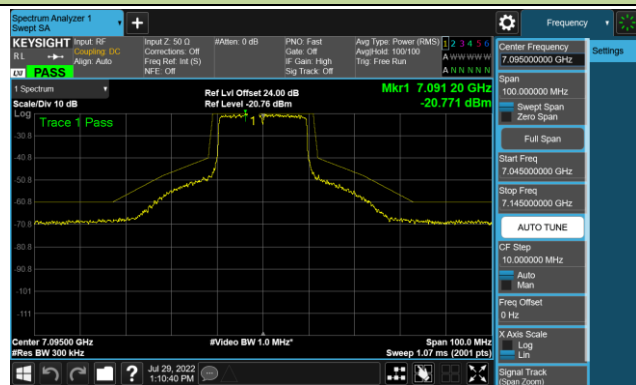 


802.11ax-HE40 - Ant 3 (Nss = 1)

 
Channel 35 (6125MHz)

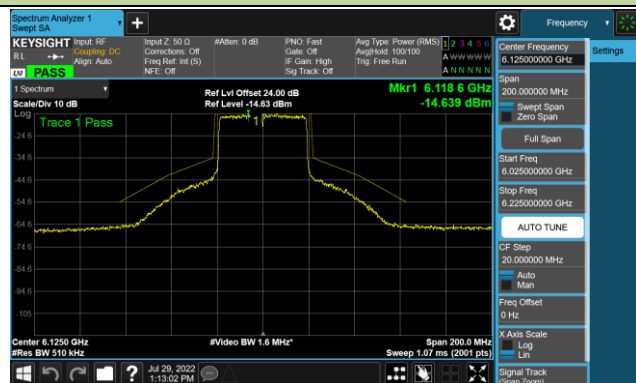


Channel 67 (6245MHz)

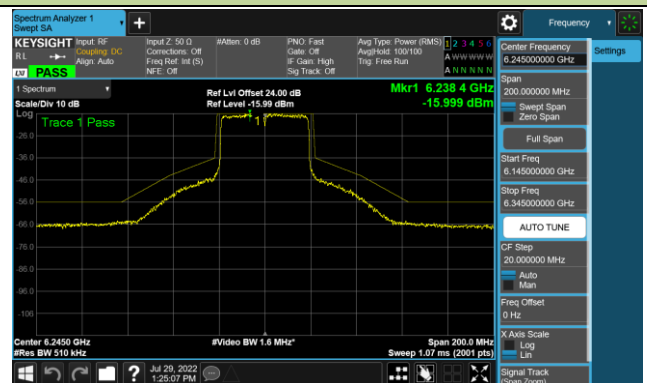 


Channel 91 (6405MHz)

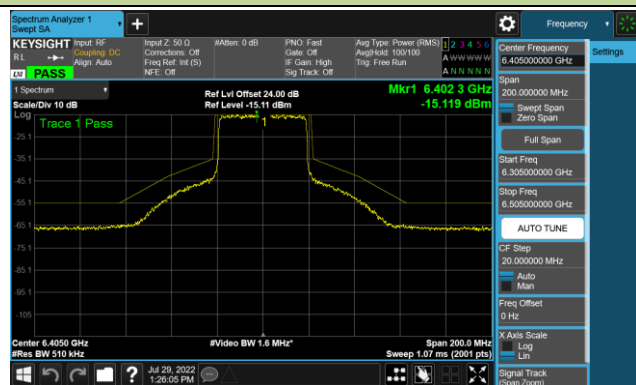 


Channel 99 (6445MHz)

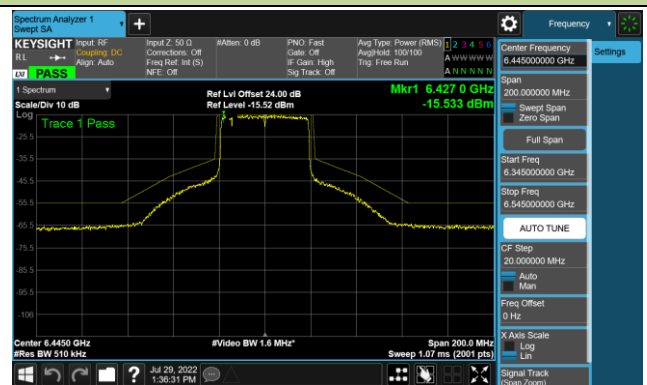 


Channel 107 (6485MHz)

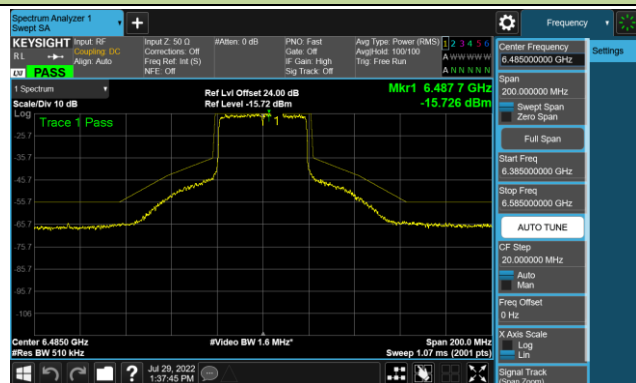 

Channel 115 (6525MHz)

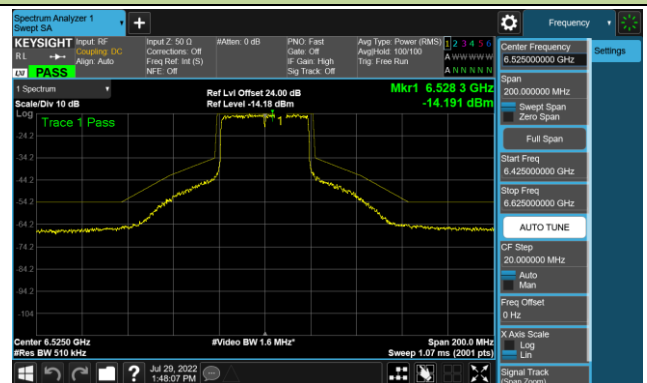 

Channel 123 (6565MHz)

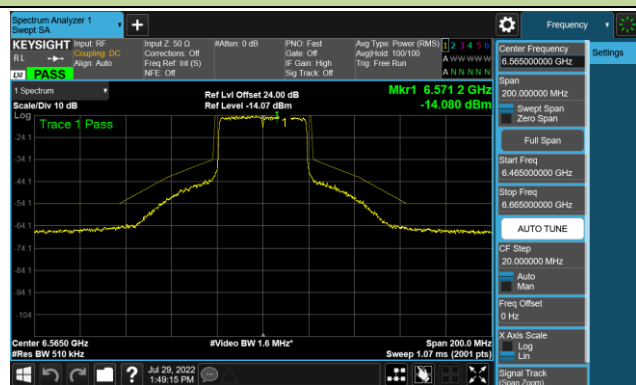 

Channel 147 (6685MHz)

