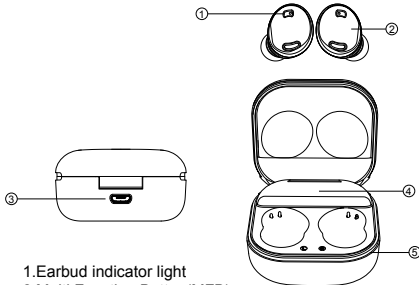


说明书材质：105G铜版纸，正反两面单色印刷，Size: 63x73mm

<div data-bbox="222 515 614 578" data-label="Section-Header"><h1>User Manual</h1></div> <div data-bbox="190 823 336 840" data-label="Text"><p>FCC ID: 2A3ZO-21554</p></div>	<div data-bbox="701 288 1114 348" data-label="Section-Header"><h2>TWS Earbuds EBT4-21554, 4SN019A, 4SN019ATOL</h2></div> <div data-bbox="701 376 854 396" data-label="Section-Header"><h3>PRODUCT KEY</h3></div> <div data-bbox="711 425 1173 743" data-label="Image">A line drawing of the TWS earbuds and their charging case. The earbuds are shown at the top, with callout 1 pointing to the earbud indicator light and callout 2 pointing to the multi-function button (MFB). Below them is the charging case, with callout 3 pointing to the micro USB input, callout 4 pointing to the charging case battery indicator, and callout 5 pointing to the charging case LED light.</div> <div data-bbox="736 720 992 821" data-label="List-Group"><ol style="list-style-type: none"><li>1.Earbud indicator light</li><li>2.Multi Function Button(MFB)</li><li>3.Micro USB input</li><li>4.Charging case battery indicator</li><li>5.Charging case LED light</li></ol></div>	<div data-bbox="1229 288 1347 308" data-label="Section-Header"><h3>CONTROLS</h3></div> <div data-bbox="1229 336 1388 353" data-label="Section-Header"><h4>Charge the earbuds</h4></div> <div data-bbox="1229 360 1701 418" data-label="Text"><p>Put the earbuds into the charging case, the earbuds will be charged automatically. The red status LED light will be on during charging and will turn off when fully charged.</p></div> <div data-bbox="1229 446 1423 463" data-label="Section-Header"><h4>Charge the charging box</h4></div> <div data-bbox="1229 470 1676 486" data-label="Text"><p>Use a Micro USB cable connected to a USB charger (DC 5V-1A)</p></div> <div data-bbox="1229 514 1617 535" data-label="Section-Header"><h4>The Steps for dual earbud pairing (First use only)</h4></div> <div data-bbox="1229 542 1704 644" data-label="Text"><p>Take out both earbuds from the charging case at the same time. The LED light on both earbuds will be flashing blue and red. One of the earbuds LED will turn off after 2 seconds. This means that both earbuds are ready to pair. Turn on the Bluetooth on your device and search for a new device then select "swissbrand glow" to connect.</p></div> <div data-bbox="1229 672 1374 688" data-label="Section-Header"><h4>How to re-connect</h4></div> <div data-bbox="1229 696 1694 754" data-label="Text"><p>The earbuds will automatically try to re-connect with the last paired device after re-start. If not put the earbuds back into charging case and try again, or connect manually.</p></div>	<div data-bbox="1753 288 2065 308" data-label="Section-Header"><h3>EARBUD BUTTON FUNCTIONS</h3></div> <div data-bbox="1753 336 2117 498" data-label="Text"><p>Power ON: Press+hold(3s) L/R earbud Power OFF: Press+hold(3s) L/R earbud Play/Pause: Press once L/R earbud Increase Volume: 3x Press R earbud Decrease Volume: 3x Press L earbud Next Track: 2x Press R earbud Previous Track: 2x Press L earbud Activate Voice Assistant: Press+hold(2s) L/R earbud</p></div> <div data-bbox="1753 536 2176 557" data-label="Section-Header"><h3>ANSWER/END/REJECT INCOMING CALLS</h3></div> <div data-bbox="1753 585 2152 620" data-label="Text"><p>Answer/End: Press once L/R earbud when incoming calls Reject: Press+hold(2s) L/R earbud</p></div> <div data-bbox="1753 658 2100 679" data-label="Section-Header"><h3>FREQUENTLY ASKED QUESTIONS</h3></div> <div data-bbox="1753 707 2145 724" data-label="Section-Header"><h4>The smartphone cannot find the wireless earbuds</h4></div> <div data-bbox="1753 731 2215 810" data-label="Text"><p>Check whether the earbuds power is switched on or not. Does the status LED light flash red and blue alternatively? If the wireless earbuds still haven't been found after switching power on, please restart both the earbuds and the bluetooth search on your phone.</p></div>	<div data-bbox="2277 288 2742 323" data-label="Section-Header"><h3>There is something wrong with the wireless earbuds while using them</h3></div> <div data-bbox="2277 336 2749 411" data-label="Text"><p>Please try to re-connect with the smartphone after turning it on and restarting the earbuds. Check the charging status of the earbuds by putting them into the charging box until the red LED indicator is on. Then take them out and let them try to re-connect with your device.</p></div> <div data-bbox="2277 439 2763 474" data-label="Section-Header"><h3>The wireless earbuds always disconnect or make noise when connected to smartphone</h3></div> <div data-bbox="2277 481 2756 601" data-label="Text"><p>The wireless earbuds power status is low, please re-charge it. There is an obstruction between the mobile device and the wireless earbuds, or the wireless distance is beyond the signal range. Please do not cover the wireless earbuds with your hands in order to maintain the continuous stability of the signal. Try to keep the wireless earbuds and the smartphone in the same direction.</p></div> <div data-bbox="2277 629 2430 650" data-label="Section-Header"><h3>FCC Statement</h3></div> <div data-bbox="2277 678 2763 817" data-label="Text"><p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there</p></div>	<div data-bbox="2805 288 3284 385" data-label="Text"><p>is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p></div> <div data-bbox="2805 413 3284 510" data-label="List-Group"><ul style="list-style-type: none"><li>- Reorient or relocate the receiving antenna.</li><li>- Increase the separation between the equipment and receiver.</li><li>- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li><li>- Consult the dealer or an experienced radio/TV technician for help.</li></ul></div> <div data-bbox="2805 538 3284 592" data-label="Text"><p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p></div> <div data-bbox="2805 620 3284 717" data-label="Text"><p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p></div> <div data-bbox="2805 735 3284 810" data-label="Text"><p>RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p></div>
---	---	--	--	--	---