

CONTENTS AND BATTERY INSTALLATION

Contents


Porsche Taycan Turbo S
Remote Control
USB-C Charging Station

Battery Installation

The vehicle requires 1 3.7V lithium-rechargeable battery (battery included) and the remote requires 2 AA 1.5V alkaline batteries (not included).

Use a Phillips head or Cross screwdriver to loosen the screws securing the battery cover on bottom of the remote. Insert the batteries, ensuring the correct polarity. Replace the battery cover and tighten the screws.

Charge your Porsche Taycan Turbo S by plugging the USB end of the charging cable into a AC wall adapter (not included). Insert the charging cable into the left charging port of the Porsche Taycan Turbo S. The battery will take approximately 100 minutes to fully charge. The red indicator light will turn off when the Porsche Taycan Turbo S is fully charged.

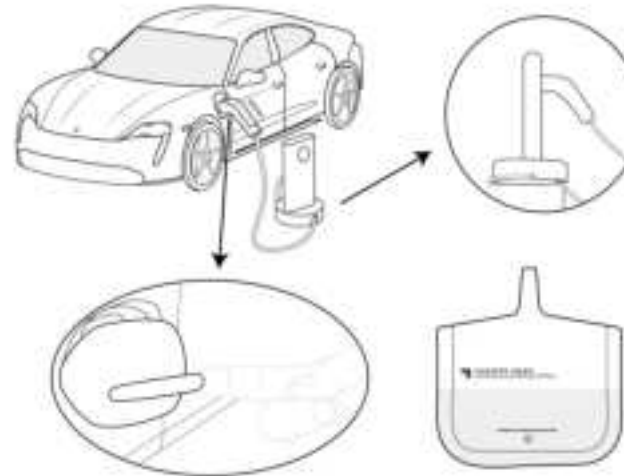

START UP

1. Turn on the Porsche Taycan Turbo S by pressing the power button on the bottom of the vehicle.
2. Turn on the remote by turning the power trim clockwise.
3. Push for the parking remote pair light to turn shining and remain steady (indicating the remote and vehicle have been successfully paired).
4. Place the vehicle on a hard, flat surface and remove the vehicle using the remote keys. The car will start moving forward and reverse movement. The right stick controls left and right turn.

CONTROLS



BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline standard button-cell, or rechargeable batteries.
- Dispose batteries as recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire. Batteries may explode or melt.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Read these instructions for safety reference.

Rechargeable Battery Warning:

- This product contains batteries that are non-rechargeable.
- There is a risk of fire and personal injury if battery is overloaded, damaged or misused.
- Do not disassemble, crush, incinerate or short circuit battery.
- Never submerge battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off strong odor.
- Battery chargers used with the product are to be regularly maintained (damage to the cord, plug, indicators, and other parts). In the event of malfunctions, chargers must not be used until the damage has been repaired.
- Recycle or dispose of batteries according to federal, state, and local laws.

SAFETY WARNINGS

- Adult supervision required.
- Do not use device at animals or obstacles.
- Never operate your vehicle in inclement weather, rain, or standing water.
- Keep fingers, hair, and loose clothing away from wheels while vehicle is in motion.
- Do not expose to extreme temperatures.
- Do not leave vehicle or transmitter near sources of heat or under direct sunlight for long periods of time.
- Adult supervision is recommended when operating the vehicle.
- Thoroughly inspect products before every use. If the product appears worn, frayed/damaged, cracked or broken in any manner, discontinue use and discard immediately.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reposition or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:
CHOKING HAZARD - Small
Parts. Not For Children Under
3 Years.

Sharper Image® name and logo including the TI logo are trademarks or registered trademarks. Distributed by and © 2021 MechSource, LLC Irvine, CA 92618. All rights reserved.
The name the Porsche Taycan and the distinctive design of Porsche cars are trademarks and trade dress of Porsche AG. Permission granted.

Sharp's Best Product Manuals, All IT contents, SHARP and SHARP logo are trademarks or registered trademarks. Due to continuous product improvements, the price on the manual may differ slightly from the actual product.

FOR CUSTOMER SUPPORT, PLEASE CALL

1-800-374-2744