

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RECHARGEABLE BATTERY WARNING:

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult Supervision of the battery while it is charging is required.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws
- Keep these instructions for future reference.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Computers, tablets, Smart Phones, and music players must have built-in Bluetooth® wireless technology to connect. This product is not affiliated with or endorsed by any of the above mentioned, referenced or pictured trademarks, companies or devices.

SHARPER IMAGE® NAME AND LOGOS (INCLUDING THE 77 LOGO AND TOMORROW'S TOMORROW) ARE TRADEMARKS OR REGISTERED TRADEMARKS. DISTRIBUTED BY AND © 2020 MERCHSOURCE, LLC. IRVINE, CA 92618. ALL RIGHTS RESERVED.

FOR TECHNICAL SUPPORT, PLEASE CALL 1-800-374-2744
PRINTED IN CHINA



SHARPER IMAGE®

WIRELESS EARBUDS

CONTENTS

- 1 Wireless Earbuds
- 1 USB Charging Cable
- 4 Earbud tips

SPECIFICATIONS

- Model: 1014048
- Power: 0.1W
- Bluetooth® Version: V5.1
- Battery Size: 130mAh Lithium Battery
- Input Power: DC 5V, 1A (Micro USB Port)

PAIRING THE EARBUDS

1. Turn on the earbuds.
2. Keep place your device within 3 feet of earbuds.
3. Enable Bluetooth® on your device and search for new Bluetooth® devices. Refer to your device's manual on how to enable and operate Bluetooth® connectivity.
4. Select SI WIRELESS EARBUDS from the list of Bluetooth® available devices.
5. You will be notified by a tone from the earbuds when pairing is successful.
6. You're ready to wirelessly stream music to your earbuds!
7. Earbuds will automatically power down after 5 minutes of inactivity.

FIND THE RIGHT FIT




Start with the larger ear tips first before trying the smaller tips.

There is an improper seal if:

- Earbuds do not stay in during light activity.
- There is no reduction in outside noise.
- You experience "distant" sounds.



CONTROLS

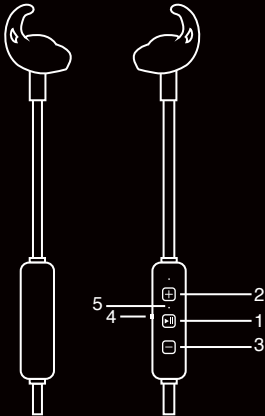

1. Long press [Volume Up] to power on/off Bluetooth; short press [Volume Up] to play/pause music and to answer/end calls
2. Short press [Volume Up] for volume up; long press [Volume Up] for next track
3. Short press [Volume Down] for volume down; long press [Volume Down] for previous track
4. DC input
5. LED indicator: fast flashes in red and blue when waiting for Bluetooth pairing; slow flashes in blue when Bluetooth pairing is successful

SAFETY WARNINGS: PLEASE READ BEFORE USE

- Not a children's item. Keep out of the reach of children.
- Only charge using the included cable.
- Do not attempt to use this product for other purposes.
- Do not expose to direct sunlight.
- Do not expose to extreme temperatures or moisture.