

Specifications

ITEM	SPECIFICATION	
Model	WVR-175	WVR-185
Max. Recording Time (HQ)	310 min.	620 min.
Max. Recording Time (SP)	464 min.	930 min.
Max. Recording Time (LP)	1012 min.	2029 min.
Number of Files & Folders	Voice	3 Folders(A, B, C) x100 Files
	Data	1(D) Folder
Memory	32 MB	64 MB
Frequency	500 ~ 3400 Hz	
Actual Max. Output	180 mW	
Earphone	3.5 ϕ Mono Jack	
Microphone	3.5 ϕ Mono Jack	
USB Cable	PC Interface USB 1.1	
Speaker	Dynamic 20mm, 8 Ohm	
Dimensions	4.2" x 1.6" x 0.7 (W x H x D)	
Weight	2.50 oz(Including battery)	
Storage Media	Imbedded Flash Memory	
Power	DC 3V, AAA Alkaline battery x 2	
Battery Lifetime	Recording: 19 Hours, Playback: 11 Hours	
Operating Temperature	0 $^{\circ}$ C ~ 40 $^{\circ}$ C	
Accessories	User Manual, Earphone, USB Cable, Installation CD	

⚠ The specifications and appearance of the product may change without prior notice in order to improve the quality.

Note

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE:THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.