

Gimbal Show APP



Download on the App Store

扫码下载 Gimbal Show APP



扫码查阅 APP 说明书

https://www.tokqi.co

认识M01

Tvpe-C 充电线充电; M01充电过程中指示灯绿灯闪烁,指示灯绿色常亮时 表示充电完成。

10.横滚轴电机

11.航向轴电机

13.转轴锁紧旋钮

16.M键/电源键

18.补光灯电源键

12.变焦键


14.摇杆

15.指示灯

17.拍摄键

19.三脚架

充电

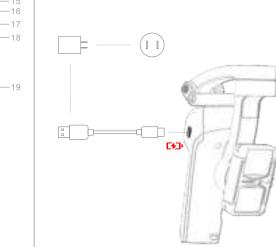

① 1.首次使用前,请先给 M01 充满电,保证产品顺利使用。 2.请在关机状态下给 M01 充电。


M01电量不足时指示灯红灯闪烁,使用包装内提供的

1.请按照以下步骤展开**M01**: 逆时针旋松转轴旋钮,解除航向轴、俯仰轴、横滚轴

安装手机



2. 将手机安装至手机夹内。 (注意手机镜头安装方向,避免遮挡镜头)

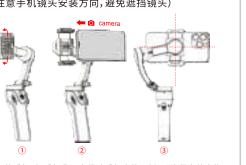

① 1.安装手机时,手机背面应紧贴手机夹的面板,以确保安装牢靠。 2.为使云台达到最佳工作性能,尽量保证手机处于手机夹的中间 水平位置。

显示系统状态指示灯、电池电量及云台模式。

■ 系统状态指示灯

状态显示

	13 17 0 0 1 1 1 1 1 1 1 1 1 1	
Ī	闪灯方式	描述
	红灯闪烁	低电量提示
	蓝灯常亮	已连接蓝牙
	蓝灯熄灭	无蓝牙连接
	绿灯常亮	充电完成
	绿灯闪烁	充电中

• 云台模式指示灯

模式灯 描述 PF灯常亮 半跟随:横滚轴和俯仰轴保持平衡, 航向轴跟随主题运动 AF灯常亮 全跟随:横滚轴保持平衡,俯仰轴和

(适合俯仰变化拍摄) AL灯常亮 全锁定:三个轴都保持平衡 (适合直线运动拍摄)

航向轴追随主体运动

FV灯常亮 POV:第一人称模式

PF+AF **盗梦空间:**相机自动朝上与手柄方向 灯常亮 保持一致,通过摇杆转动相机绕中心 点旋转

按键说明 1

M键/电源键

补光灯电源键


长按: 关闭灯光

摇杆

双击: 爆闪模式(SOS)

上下、左右推动云台摇杆

控制云台转动

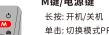

单击: 切换模式PF-AF- AL-FV 双击:横拍/竖拍模式切换 三击: 显示剩余电量



单击:冷白3档-暖黄3档-冷白+暖黄3档

按键说明 2

变焦键 侧面拨动开关

最佳的拍摄效果)

双击: 云台回正

长按: 锁定模式

三击: 盗梦空间一键成片

上拨: App 中镜头拉近(画面放大) 下拨: App 中镜头拉远 (画面缩小)

单击: APP锁定跟随目标(人或物体)

单击+长按: 疯狗模式(全跟随模式下操作进)

模式, 稳定器的电机扭矩和响应速度都达到最大, 这时




竖拍模式

连接APP

启动云台后,使用手机搜索"M01-XXXXXX"并匹配 或进入"Gimbal Show"APP 匹配,点击左上角图标 🛭 配对,配对成功后指示灯蓝灯常亮, 🖥 图标变成蓝色 🧠



) 1.搭配专为M01定制的 APP "Gimbal Show"使用, 能够让您将此款云台的各项功能得到更好的运用。 2.请以最新版本"Gimbal Show" App 为准,如有更新, 恕不另行通知。

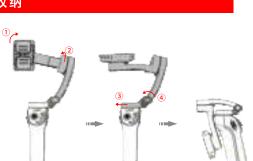

安全概要

M01 较为精密,使用者应具备基本的动手能力以及安全常识,并且需要小心使用。 请先阅读M01使用说明,熟悉产品功能之后再使用。错误的操作将会导致产品损坏 和财产损失,甚至带来人身伤害。本产品不合适儿童使用。为了保证您能正确、安全 地使用 M01,在进行安装、设置和使用之前请务必仔细阅读使用说明以及安全概 要,并且严格按照相关说明安装和使用 M01。

- 1. 严禁使产品接触任何液体,切勿将产品侵入水中或将其弄湿。切勿在雨中或者潮 湿的环境中使用产品。产品内部接触到水后可能会发生腐蚀反应,从而引起电池自
- 2. 若产品发生起火,请立即使用水、水雾、沙、灭火毯、干粉、二氧化碳灭火器灭 火。请根据实际情况按以上推荐顺序选择灭火方式。 3. 请在温度为-10℃至45℃之间的环境中使用产品。
- 4. 禁止以任何方式拆解产品。若拆解过程中刺破电池,将会导致电池内部电解液泄 露、甚至引发起火、爆炸。
- 5. 禁止机械撞击,碾压或抛掷产品。请勿在产品上放置重物。 6. 切勿对产品进行加热。请勿将产品放置于微波炉或压力锅中。
- 内。切勿将产品存储在超过60°C的环境下。理想的存储环境温度为22°C至28°C。
- 8. 切勿将电池彻底放完电后长时间存储,以避免电池进入过放状态而造成电芯损 坏,将无法恢复使用

1. M01为高精度控制装置。摔落或受到外力碰撞可能会使M01损坏,导致工作异常。 2. 确保M01电源开启后,云台转动不受外力阻挡。 3.M01不防水。请勿让M01接触到任何液体或对其任何清洁功能的液体。建议使用

4. 使用M01的过程中请注意防尘防沙。

注意 1. 请在关机状态下给产品充电。充电完成后,请断开产品与充电器的连接。 2. 若超过 10 天不使用产品,请将电池放电至 40%-65% 电量存放,这样可延长电

3. 每隔3个月重新充放电一次以保持电池活性。

TOKQI

HAPPY SELFIE FROM TOKÇI

M01 3-AXIS GIMBAL STABILIZER User Manual



HAPPY SELFIE FROM TOKÇI

Gimbal Show APP

App Store

SCAN DOWNLOAD Gimbal Show APP



Scan the code to view APP User Manual

https://www.tokqi.co

RECOGNIZE M01

7. Handle

8. Hang hole

9. Locking clip of

roller motor 19. Tripod

1.手机夹

2.补光灯

6.板机键

7.手柄

8.挂绳口


3.俯仰轴电机

4.俯仰轴锁紧卡扣

5.航向轴锁紧卡扣

9.横滚轴锁紧卡扣

flashes red,and the Type-C charging wire provided in the packaging is used for charging;

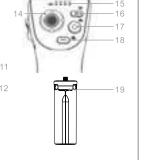

1. Phone holder 10. Horizontal roller motor 11. Heading axis motor 2. LED 3. Pitch axis motor 12. Zoom key 4. Pitch axis locking clip 13. Rotary shaft locking knob 5. Heading axis locking clip 14. Rocker 15. Pilot lamp Trigger key


16. M key/Power key

18. Power key for fill light

17. Camera key


When the **M01** battery is low, the indicator light

During the **M01** charging process, the green indicator light flashes, and when the greenin dicator light is constantly on, it indicates that

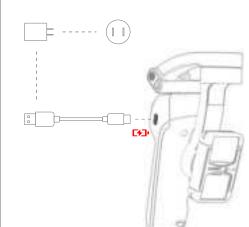

ensure smooth use of the product. 2.Please charge **M01** while it is turned off


the charging is complete.

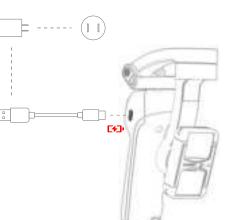

① 1.Before first use, please fully charge **M01** to

CLAMP PHONE

. Please refer the following step to unfold M01: Contrarotate the locking knob, and release the locking

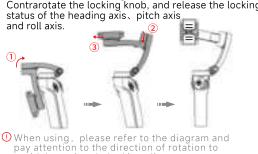

avoid damaging thelocking clip. . Clamp the phone into the phone holder (Pay attention to the installation direction of the



1. When clamping the phone ,the back of the phone should be tightly attached to the panel of the phone holder to ensure a secure installation 2. To achieve optimal working performance of the middle horizontal position of the phone holder.

STATUS DISPLAY

Display system status indicator light, battery level, and modes.



Flashing red light Low battery reminder Blue light always on Successful connected Blue light off No connection Green light always on Charge Complete Green light flashing Charging

Mode

Mode light Describe

PF light always on Semi-follow: Maintain balance between the roll axis and pitch axis, while the heading axis follows the theme motion. Full follow: Maintain balance on the roll axis,and follow the main motion on the always on pitch and heading axes (suitable for shooting pitch changes)

Fully locked: All 3-axes remain AL light balanced (suitable for linear motion always on shooting) POV: First-person perspective

PF+AF light Inception Space: Inception space, PF fast blink Semi-follow Go Mode

AF fast blink Full follow Go Mode

KEY FUNCTION 1



M key/power key Long press: turn on/off Click: switch mode PF-AF-AL-FV Double click: horizontal/vertica mode switching Three clicks: display remaining power



Three clicks: switching between frontand rear cameras



Power button for fill light Click: white light; warm light; natural light Double click: flash mode (SOS) Long press: turn off the light



Push the stablizer joystick up and down.

KEY FUNCTION 2


Trigger key Click: App lock destination (person or object) Three clicks: Inception mode

Long press: lock mode Click+long press: Enter Go Mode(when otor torque and response speed of the your speed as quickly as possible to achiev the best shooting effect)



横拍模式

Zoom key Side toggle switch Slide up: Zoom in on the camera in the app (zoom in) Slide down: Zoom out in the app (zoom out

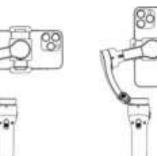



SPECIFICATION PARAMETERS

Main materials

Structurer

Control

otation range

rotation angle

Suitable for thick

Battery capacity

Charging current

Working current

Working hours

Tripod

Product size

Product weight

Main materials

Interface

weight of mobile phones

规格参数

产品尺寸

产品重量

主要材质

结构转动范围

控制转动角度

适用手机宽度

适用手机厚度

适用手机重量

电池容量

充电电流

工作电流

工作时长

三脚架

产品尺寸

产品重量

主要材质

163x119x50mm(折叠)

378g

航向:320°

俯仰:330°

航向:300°

横滚:320°

俯仰:65°

50-90mm

≤11mm

≤280g

8小时

40g

1/4"标准螺丝

PA66

3600mAh

2A(最大)

500mA(近似值)

32.5x32.5x95mm(折叠)

378g

Course:320°

Roll:330°

Pitch:330°

Course:300°

Roll:320°

Pitch:65°

≤280g

3600mAh

8 hours

2 A(max)

500mA(approximate)

32.5x32.5x95mm(fold)

40g

1/4"standard screw

Applicable phone width 55-90mm

Applicable phone thickness ≤11mm

横滚:330°

PA66

After activating the stabilizer, use your phone to search for"M01-XXXXXX"and match it; Or enter the "Gimbal Show" app to match and click on the wireless iconAfter successful pairing, the indicator light remains; Product size blue and the icon turns blue. 🚦 Product weight



M01, you can better utilize the various functions of this stabilizer. 2. Please refer to the latest version of the "Gimbal Show" app. Any updates are subject to change without prior notice.

FOLDING STEP

APP CONNECTION



163x119x50mm(fold)

SECURITY PROFILE

Please use the product in an environment with a temperature between -10 °C and 45 °C assembly, it will lead to electrolyte leakage inside the battery, and even cause a fire

7.1 It is portionated to prace products real near sources source as stores or relates of in transi-hot days. Do not store the product in an environment exceeding 60°C. The ideal storage environment temperature is 22 °Cto 28°C. 8. Do not store the battery for a long time after it has been completely discharged to preve

from entering an over discharged state and causing damage to the battery cell, which will prevent it from being restored to use.

TAKE CARE

 M01 is a high-precision control device. Falling or being hit by external forces may cause damage to M01, leading to abnormal operation.
 Ensure that after the M01 power is turned on, the pan tilt rotation is not ostructed oy external. forces.
3. M01 is not waterproof. Do not allow M01 to come into contact with any liquid or any liquid with any cleaning function. It is recommended to use a soft dry cloth to clean M01.
4. Please pay attention to dust and sand prevention during the use of M01.

ATTENTION

1. Please charge the product while it is turned off. After fully charged please disconnect the oduct from the charger.

If the product is not used for more than 10 days, please discharge the battery to 40% -65% the canadah first sharpan which can extend the battery's service life.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.