
Size: 297(W) x 105(H)mm



FRONT SIDE

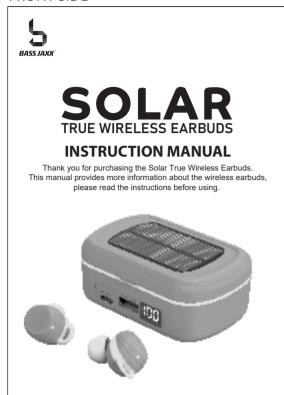



On/Off Button / Play/Pause Music Answer/End Call

- 2. LED Indicator
- 3. Wingtips
- 4. Solar Panel 5. USB Type-C Charging Port
- 6. USB Output Port 7. Battery Level Indicator True Wireless Farbuds
- *Remove the protective stickers before using

Package Contents

1(One) Pair Earbuds 1.2 in. x 1.0 in. x 0.8 in. (3cm x 2.5cm x 2cm) each 1(One) USB Type-C Charging Cable 9.8 in. (25cm) 1(One) Portable Charging Case 3.4 in. x 2.2 in. x 1.3 in. (8.5cm x 5.6cm x 3.4cm) 1(One) Instruction Manual

Specifications

Driver Diameter: 10 mm Impedance: 32 Ohms Frequency Response: 20 Hz - 20 kHz Sensitivity: 96 dB +/- 3 dB Power Supply: Li-ion Battery 3.7V 35 mAh Per Earbud Playtime: 24 Hours Charging Time: 2 Hours Bluetooth Range: 32.8 Feet Bluetooth Version: 5.3 Charging Case Battery Capacity: 1600 mAh USB Type-C Charging Cable Included
USB Type-C Charging Cable Rating: maximum 5V/1A

Power On/Off

Power On Press and hold down the On/Off Button of earbuds for 3 seconds and the LED will flash

Power Off

Press and hold down the On/Off Button of earbuds for 4 seconds and the LED will turn off.

Pair the wireless earbuds with your mobile device

- 1. Keep the distance between the earbuds and mobile device within 32.8 feet
- De-activate the Bluetooth function on your mobile device.
 The protective stickers must be removed from the earbuds and put the earbuds back to charging case before use. Take both earbuds out from charging case and wait for 3 to 5 seconds for auto pairing. The earbud has indicator blinking in Red and Blue. Another earbud will stop blinking when auto pairing is done successfully.
- 4. Activate the Bluetooth function on your mobile device and select "EP-0704 TWS" from the list shown.
- 5. After pairing is successful, both earbuds will stop blinking

*Attention: If the auto pairing is not successful, manual pairing between earbuds is essential by following below procedures:

1. Make sure the earbuds are charged.

- 2. De-activate the Bluetooth function on your mobile device, (if you had been paired the earbuds to some other mobile device(s) nearby, please su those device(s) too).
- 3. Power on both earbuds simultaneously by pressing the On/Off buttons for 3 seconds and wait for 3 to 5 seconds for auto pairing. (Keep the Bluetooth function off on your mobile device before this operation.)
- Activate the Bluetooth function on your mobile device and select "EP-0704 TWS" from the list shown.
- 5. After pairing successfully, both earbuds will stop blinking.

Reconnect the wireless earbuds to your mobile device

When powered on, the wireless earbuds will automatically connect with the last successfully paired device.

Disconnect the wireless earbuds from your mobile device

Power off the wireless earbuds: or Switch off the Bluetooth on your mobile phone; or Leave the earbuds 60ft away from your mobile phone or further

Answer / Reject a call

When receive a call, press the On/Off Button once (on either earbud) to accept the call, or answer the call normally via your mobile phone Press and hold 2 seconds to reject it.

To end the call, just press On/Off button at any side of earbud with Beep sound

Functions

Pause / Play Music: Short Press on On/Off Button Go back to previous song: Double click left On/Off Button.
Advance to next song: Double click right On/Off Button.

Charging your Earbuds

- Open the charging case cover.
 Insert the earbuds into the charging case.
- The earbuds will start the charge automatically.
 LED indicator light of the charging case will show the charging case's battery level. The LED indicator light of the charging case will be turned to Red.
- 5. Once fully charged, all LEDs will be off.

Recharge the Charging Case with Solar Power



- 1. Place the charging case under sunlight with the solar panel face up.
- The center segment of the last digit will be flashing when the charging case is charging with solar power

NOTE: If the earbuds are charging or the charging case is charging by USB power or working as a powerbank, the segment will not flash.

Solar charging is subject to sunlight intensity and panel conversion rate, so it may take several days to recharge the product. It is recommended to fully charge the battery if you plan on going on a lengthy trip.

BACK SIDE

Recharge the Charging Case with USB Power

⚠ For your safety, please always use appropriate 5V output charger/Adapter to charge the product. **DO NOT USE** Quick Charging USB Adapter to charge the product, as it might damage the product.

- 1. Use the USB Type-C charging cable provided with the packaging
- You can charge your charging case through your computer's USB port or an AC adapter (not included). Connect the USB Type-C plug to USB Type-C charging port on the charging case, then connect the USB plug to a USB port on a computer or wall adapter to begin charging

 4. When the last digit of the Battery Level Indicator is blinking, the power bank is being
- charged.

 5. When the Battery Level Indicator shows 100 and stop blinking, the power bank is fully charged

NOTE:

You must select a qualified charger from a regular manufacturer.

 
· You must charge the charging case and earbuds if it has been not used for more than 6 months



Charging Other Device With Charging Case

- 1. Connect your device to the charging case using your device charging cable (or the supplied USB Type-C changing cable for Android device /USB Type-C input device).

 2. Connect the USB plug of the cable to the output port of the charging case.
- Connect the other end of the cable to the charging port of your device.
 The Battery Level LED Indicators light will be on while charging your device.
- 5. The Battery Level LED Indicators will be off when charging case capacity is low. The charging case will stop charging the device.



- 1. Use the USB Type-C charging cable provided with the charging case.
- Fully charge your charging case before your first use.
- 3. The input voltage to the power bank is DC 5V 1A. In order to charge the charging case in safe manner and reliable conditions, please only adopt certified appropriate charger/adapter.

If the wireless earbuds cannot be paired with your device.

please try the following:
Ensure that your earbuds are in pairing mode or reconnection mode
Ensure that Bluetooth search function of your mobile device is activated.

If the wireless earbuds will not turn on Make sure the earbuds are fully charged

Can I change the battery for the earbuds?

The wireless earbuds use a built-in non-detachable battery which cannot be removed.

If the charging case cannot be recharged:

If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

Caution

- 1. Do not submerge in water. This product is not water resistance
- Keep the product dry. Avoid dusty, damp, and dirty environments. Using the product in these environments may damage the circuitry.

 3. Do not use the product during thunderstorms to avoid any lightning-related damage
- or injury. 4. Keep the product away from excessive heat sources. Such as microwave ovens stoves, or radiators. The product may even explode in extreme overheating
- Do not store the product in enclosed vehicle
- 6. Do not attempt to disassemble or remanufacture the product, insert foreign objects into it, or immerse or expose it to water or other liquids. Doing so may lead to fire, explosion, or other hazards.
- Do not attempt to burn the product as it may explode
- Dispose of the product in accordance with local regulations. Do not dispose of the product in normal household waste. Improper product disposal is dangerous and could cause an explosion. Please respect local laws on the disposal of electronic products and their accessories and support recycling efforts.
- 9 Keep the product out of reach of children and nets to prevent them from accidentally swallowing and choking on the small parts of the product. Biting or swallowing the product could lead to serious injury.
- Do not drop, squeeze, or pierce the product. If excessive pressure is applied to the product, the product may short circuit or overheat.
- 11. When the product is being charged, make sure the power outlet is close to the 12. When the product is fully charged, disconnect the charger from the product and
- unplug the charger from the power outlet. Do not leave charging overnight.

 13. USB Type-C Charging Cable Rating: maximum 5V/1A

A CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product. Only operate the product at ambient temperatures between 10°C/50°F and 40 °C/104 °F. The unit should be stored below 70°C/158°F.

 Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development

FCC STATEMENT

- 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their



FCC ID: 2ADM5-EP-0704

Item# EP-0704

Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200, Philadelphia, PA 19106 Keep all relevant information for future reference

