 



RC	DESCRIPTION	DESIGN	CHECK	APPROVAL
A0				

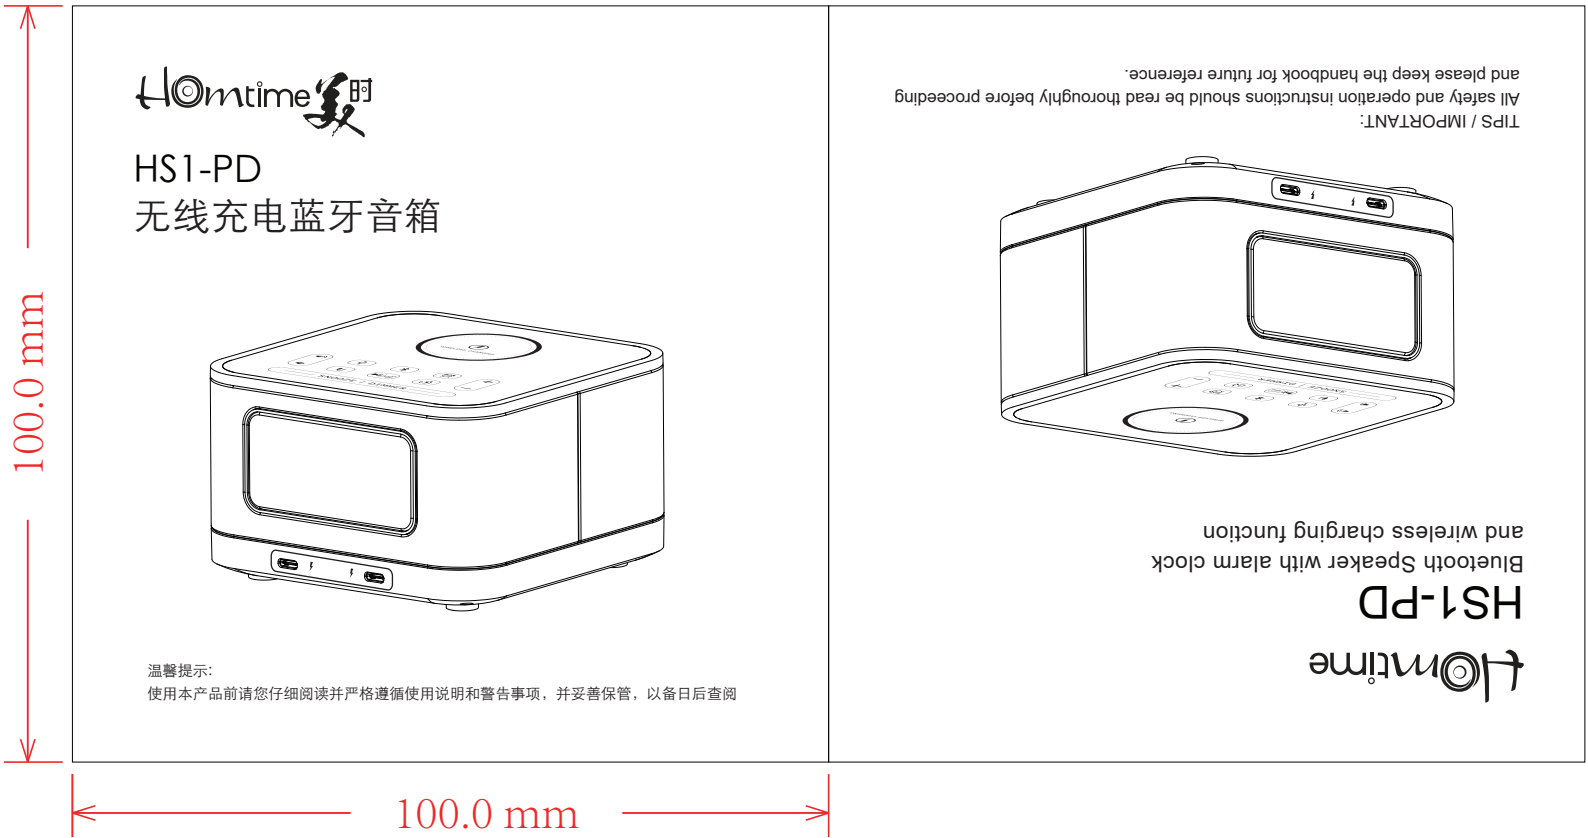

DEG	A	B	C	D		
DIV	A	B	C	D		
0~10	±0.02	±0.05	±0.1		0~30°	±0.5°
11~20	±0.05	±0.1	±0.15		31~60°	±0.5°
21~30	±0.1	±0.15	±0.2		61~90°	±1°
31~50	±0.15	±0.2	±0.3			
51~	±0.2	±0.25				

Model Name:	HS1-PD(美时酒店版)中
Part Name:	英文说明书
Doc No.:	311- HS1PD001- 03- A00
Material:	120G道林纸
Finish:	单黑+两语倒翻钉装 共24P

 3rd Angle Projection




Unit mm	Scale 1/1
Sheet	1 of 1

Homtime 美时			
Draw		Date:	
Check	钟勇	Date:	2024-5-16
Approval		Date:	



HS1-PD

 Bluetooth Speaker with alarm clock
and wireless charging function

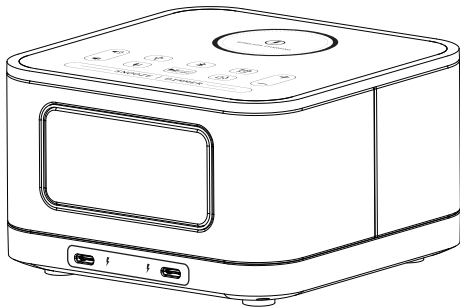

TIPS / IMPORTANT:

All safety and operation instructions should be read thoroughly before proceeding and please keep the handbook for future reference.

IMPORTANT SAFETY INSTRUCTIONS

flomtime

KNOW THESE SAFETY SYMBOLS



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electric shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

IMPORTANT SAFETY INSTRUCTIONS

- a Read these instructions.
- b Keep these instructions.

c Heed all warnings.

d Follow all instructions.

e Do not use this apparatus near water.

f Clean only with dry cloth.

g Do not block any ventilation openings.

 
Install in accordance with the manufacturer's instructions.

h Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

i Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

j Only use attachments/accessories specified by the manufacturer.

k Unplug this apparatus during lightning storms or when unused for long periods of time.

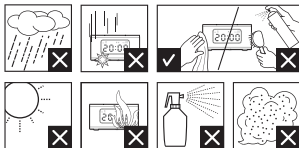

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

SPECIFICATIONS

- Bluetooth Specification: 5.1
- Bluetooth Profiles: HSP、HFP、A2DP and AVRCP
- Operating Distance: 10 meters Class II
- Output Power: 3W+3W
- Driver Unit: 40hm 3w 2in
- Frequency Range: 40Hz-20KHz
- S/N Ratio: >65dB
- Distortion Rate: <1%
- FM Frequency Range: 87.5-108MHz

 
WHAT'S IN THE BOX



Unit



Manual




AC adapter


** Product information is subject to change without prior notice.*

UNIT FEATURES & FUNCTIONS

 FRONT

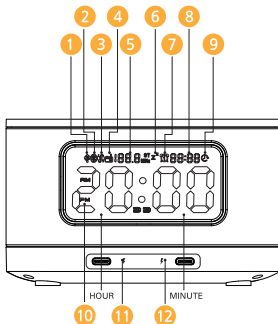


REAR

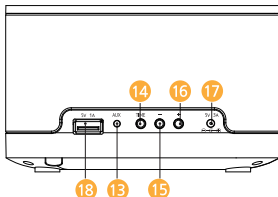 

FUNCTION

- 1 USB MODE
- 2 BLUETOOTH MODE
- 3 AUX MODE
- 4 FM RADIO MODE
- 5 FM FREQUENCY
- 6 SNOOZE
- 7 ALARM
- 8 ALARM TIME
- 9 SLEEP
- 10 AM/PM
- 11 TYPE-C
- 12 PD CHARGE
- 13 AUX INPUT
- 14 TIME SETTING
- 15 TIME SETTING -
- 16 TIME SETTING +
- 17 POWER
- 18 USB PLAY / CHARGE

 UNIT FEATURES & FUNCTIONS

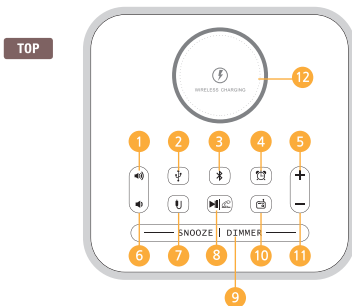

BUTTON	FUNCTION
1 VOL +	Volume up
2 USB MODE	USB Play Mode
3 BLUETOOTH	Bluetooth Mode
4 ALARM	Alarm Setting,On/Off
5 NEXT SONG/Adjusting Alarm Time	Skip Forwards Next Song/Adjusting Alarm Time
6 VOL-	Volume down
7 AUX IN	AUX IN Mode
8 PLAY/PAUSE,TALK,SCAN FM	Bluetooth&USB,Play/Pause,Answer the phone and Hang up,Auto scan FM station
9 SNOOZE, LED	SNOOZE, Display Brightness Level (4 Level : 1-2-3-4)
10 FM	FM Mode
11 BACKWARD SONG/Adjusting Alarm Time	Skip Backwards last song/Adjusting Alarm Time
12 Wireless Charging	Wireless Charging Station

POWER ON

Connect the power cable into the jack on the back of HS1-PD labeled , and then plug the power cable into the socket. The LCD display turns on.

 
SET TIME

Under any mode, press **"TIME"** to set time. Press **"+"** or **"-"** to switch the Hour mode between 12-Hour and 24-Hour. Press **"TIME"** to confirm it. Then Hour figure and MINUTE figure begin to flash. Press **"+"** or **"-"** to adjust the HOUR and press **"TIME"** to confirm it, then press **"+"** or **"-"** to adjust the MINUTE and press **"TIME"** to confirm the setting. It exits the setting in 5 seconds if no operation on any key.

SET ALARM TIME

When alarm is off, press  to set alarm time. Press **"+"** or **"-"** to adjust alarm time. It will confirm and exit setting in 5 seconds if no operation on any key.

ALARM FUNCTION

- 1) When alarm is on, icon is flashing in the LCD and the alarm ring tone is becoming larger and larger. Press  to activate the Snooze function. **"Z"** icon appears in the LCD. Alarm will be on again in 9-minute snooze.
- 2) To stop alarm, press  or press and hold snooze. Alarm is one-off alarm.
- 3) The alarm can last for 30 minutes at most if no button is pressed.

PLAY MUSIC FROM MOBILE VIA BLUETOOTH**OPERATION**

Press  to put Bluetooth on. Go to mobile setting, turn on Bluetooth and search Bluetooth devices. Connect "HS1-PD". When it is successfully paired, you will hear a sound of "DU". Play music from your mobile now. (When Bluetooth is connected, press  or other mode key to switching it to other mode, Bluetooth will be OFF automatically and get disconnected with mobile. When switching it to Bluetooth mode again, connect "HS1-PD" manually or automatically.)

ANSWER THE PHONE

When a phone call is coming, press  to answer the phone.

HANG UP

Press  to hang up when having a phone call.

PLAY MUSIC

When playing music, press  to pause the music. Press **"-"** to skip backwards last song; Press **"+"** to skip forwards next song.

FM RADIO OPERATION

Press  to put FM Radio on,  appears on the LCD display. Press and hold  to auto scan radio station and store the scanned stations

accordingly. The frequency starts from 87.5MHz to 108MHz and skips at every 0.1 MHz in scanning process. Once catching a station, it stops a second and store it, then continues the auto-scanning. When it scans from 87.5MHz to 108MHz, it will stop scan automatically. Press “+” or “-” to select the station.

 
PLAY MUSIC FROM AUX JACK

Press “U” to put AUX IN on, “U” appears on the LCD display. Plug in the 3.5mm audio cable into the AUX IN jack. Play music now.




USB PLAYBACK & CHARGING

Supports USB memory music playback and enables fast charging of smartphones and other digital devices.

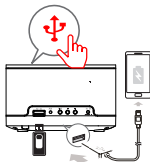

Back-up the lithium battery

 The 3.6V NiMH battery is to retain the memory of time in case of a power failure.

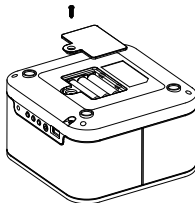

Infrared remote control(Optional)

Install the battery: Unscrew the back cover of the remote control, open the screws, install 3 pieces AAA battery, lock the screw and screw the back cover.

Sync time with phone: Unscrew the back cover of the remote control, connect the remote control's lightning connector to the iPhone interface. In this way, the time will be synced with iPhone.

Sync time with the remote control: Align the remote control with the alarm screen, press the sync button on the remote control, the time of the remote control will be transmitted to the alarm clock and turn off the alarm, reset the alarm.

CAUTION

a Wireless charging covers are sold separately.

b Do not place the wireless charging cover solely on the wireless charger. Doing so may overheat the wireless charger and cause a fire. It may also result in serious burn or device malfunction.

c To charge a mobile device that does not have a built-in wireless charging coil, attach a wireless charging cover to the mobile device. Then, place the mobile device on the wireless charger.

d Do not place foreign materials, such as metal objects, magnets, and magnetic stripe cards, between the mobile device and the wireless charger. The mobile device may not charge properly or may be damaged due to overheating.

e When the mobile device is fully charged, remove it from the wireless charger.

f When the mobile device is not placed on the charging surface properly, or depending on the location of the mobile device's wireless charging coil, your mobile device may not charge properly.

g Depending on the location of the mobile device's wireless charging coil, your mobile device may not charge properly.

h Wireless charging may not work properly if you have attached a thick case to your mobile device. If your case is thick, remove it before placing your mobile device on the wireless charger.

i If you use the wireless charger in areas with weak network signals, you may lose network reception.

j If you connect a charger to the mobile device during wireless charging, the wireless charging feature will be unavailable.

k The wireless charger is compatible with Wireless Power Consortium (WPC) certified devices.

CARE AND MAINTENANCE

Read the following recommendations before using the unit. Following these you will be able to enjoy our product for many years.

1. *Keep the product dry and don't put it in the damp place to avoid the product's internal circuit being affected.*
2. *Keep the product away from direct sunlight or hot places. High temperature will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.*
3. *Don't expose the product to cold areas as it may damage the internal circuit board.*
4. *Don't try to disassemble the product as it may get damaged if you are not professional.*
5. *Don't let the product fall down onto the floor or other hard surfaces. The internal circuit might get damaged.*
6. *Don't use intensive chemical products or detergent to clean the product.*
7. *Don't scratch the surface with sharp things.*

FAQs

What to do when there is no sound when making a call with the unit ?

1. *Ensure **the unit** connects well with Bluetooth mobile phone*
2. *Ensure the volume has already been properly adjusted*

3. *Make sure the audio input of car audio system is adjusted to AUX.*

What to do when my mobile phone can not search and find the unit ?

*If **the unit** is not in pairing mode, your mobile phone can't find it. Please make sure **the unit** is in pairing mode and in the effective working range.*

What to do when the voice is not clear?

1. *Ensure your mobile phone is in strong-signal areas.*
2. *Ensure **the unit** is in the effective working range.*

How far is the effective range between the unit and Bluetooth mobile phone?

According to the Bluetooth standard, the max. controllable range of Class II handsfree kit is 10 meters. But it varies with different environment and paired mobile phone.

Poor radio reception?

1. *Keep the clock radio away from other electronic devices to avoid radio interference.*
2. *Fully extend and adjust the position of the FM antenna.*

No response from the clock radio

Disconnect and reconnect the power cavlllllllee, then turn on the clock radio again.

Clock/alarm setting erased

- 1. Power has been interrupted or the power plug has been disconnected.*
- 2. Reset the clock/alarm.*
- 3. Backup battery was low, so please charge it.*

** Please comply with the actual product if there is any discrepancy between the product and the content of the manual*



Homtime Group LTD

info@homtime.com


www.homtime.com

www.facebook.com/homtime.global



HS1-PD

 无线充电蓝牙音箱

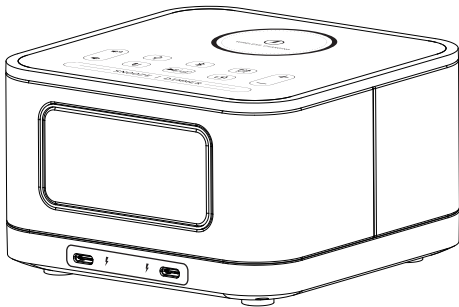

温馨提示:

使用本产品前请您仔细阅读并严格遵循使用说明和警告事项，并妥善保管，以备日后查阅

安全图标说明



闪电符号表示您产品内的绝缘材料可能会导致触电。为了您和家人的安全，请不要拆开产品外壳。

感叹号表示请您认真阅读产品的使用说明书，避免使用和保养中遇到问题。

 
警告：为了避免着火和触电的危险，请不要让产品淋雨或放置于潮湿处，请不要将花瓶等装水的容器，放置于产品上。

注意：为避免触电，请完全插入电源。（两极插头地区：为避免触电，请完全匹配宽槽叶片）

重要安全注意事项

- a 请认真阅读本产品的使用说明书。
- b 请妥善保存本产品的使用说明书。
- c 留意所有警告事项。
- d 请按照指示操作该产品。

- e 请勿在靠近水源的地方使用该产品。
- f 请仅用干抹布清洁本产品。
- g 请不要封闭任何产品通风口。按照使用说明书操作安装该产品。
- h 请不要在靠近热源的地方使用该产品，如散热器、电热器、火炉及其他产生热能的装置。
- i 请不要踩踏和挤压电源线，尤其是电源插头，请妥善收纳电源等配件。
- j 请用原装或厂商指定的附件/配件。
- k 遭遇雷雨天气或长时间不使用本产品时，请拔下电源插头。

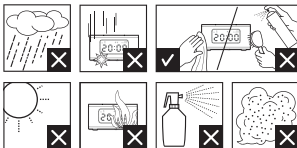


- 蓝牙版本: 5.1
- 蓝牙模式: HSP, HFP, A2DP and AVRCP
- 蓝牙频率范围: 2.402GHz - 2.480GHz
- 蓝牙距离: 10米以内
- 电源: DC 9V 2A
- 输出功率: 3w + 3w
- 喇叭: 4Ohm 3w 2in
- 频率范围: 40Hz - 20KHz
- 信噪比: >65dB
- 失真率: <1%
- 调频范围: 87.5 - 108MHz
- 无线充电: 15 W



主机



 
说明书




电源适配器

* 产品信息如有更改,恕不另行通知。

 正面

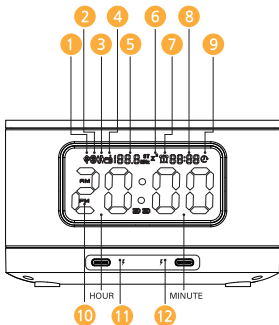


背面

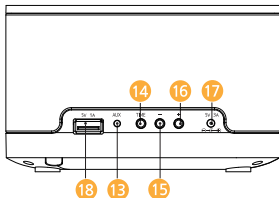 

功能

- ① USB 模式
- ② 蓝牙模式
- ③ AUX 模式
- ④ 收音机模式
- ⑤ 收音机频率
- ⑥ 贪睡功能
- ⑦ 闹铃
- ⑧ 闹铃时间
- ⑨ 定时关机
- ⑩ AM/PM
- ⑪ TYPE-C 普通充电
- ⑫ PD 快充口
- ⑬ AUX输入
- ⑭ 时钟设置
- ⑮ 时钟设置-
- ⑯ 时钟设置+
- ⑰ 电源
- ⑱ USB

 顶面

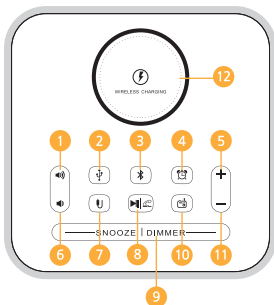

按键	功能
1 音量+	音量调高
2 USB播放	开启/关闭USB播放功能
3 蓝牙	开启/关闭蓝牙功能
4 闹钟设置, 开启/关闭	开启/关闭闹钟, 设置闹钟
5 下一首/闹钟时间加	调整闹钟时间/跳到下一首
6 音量-	音量调低
7 AUX IN	开启/关闭AUX IN功能
8 播放/暂停, 通话, 搜索调频	蓝牙&USB时播放/暂停; 通话时接听/挂断; FM时自动搜台
9 贪睡, 亮度调节	贪睡功能, 亮度调节 (4级, 1-2-3-4)
10 FM调频收音	开启/关闭FM收音
11 上一首/闹钟时间减	调整闹钟时间/跳到上一首
12 无线充电区域	将移动设备放在上面充电

开机

将电源插入插口，电源通电，LCD屏亮。

设置时间

在任何模式下，按**TIME**设置时间。按**+**或**-**键选择12H/24H显示模式，按**TIME**调节时间，先是小时闪动，按背后**+**或**-**键调节，再按**TIME**键，分钟闪动，按背后**+**或**-**键调节，再按**TIME**键确认设置或5秒钟后自动保存并退出。

可通过遥控器对时(遥控器需另配)。

闹铃时间设置

在闹铃关闭的情况下，按闹铃键，LCD上闹铃图标闪烁显示。按**+**或**-**键调整闹铃时间，再按此键设置完毕，或不按任何键，5秒后自动完成设置并退出。

闹铃功能

- 1) 闹铃响起后，LCD闹铃符号闪烁，而且闹铃时声音从小渐大，按SNOOZE 10MINER，5分钟后闹铃再次响起。
- 2) 如果要关闭闹铃，按或长按Snooze键，闹铃只有一次响闹。
- 3) 若不按任何键，一次闹铃最长时间为30分钟。

蓝牙连接手机播放

蓝牙操作

按键打开蓝牙模式，启动手机的蓝牙功能搜索及连接设备。配对连接成功后，喇叭发出“嘟”一声提示声，即可蓝牙播放音乐或无线通话（成功连接后，按或其它功能键转到其他模式时，蓝牙关闭，与蓝牙设备自动断开；当再次按选择蓝牙模式时，自动连接或手动连接。）

设备名称:HS1-PD

接听电话

来电的时候，按接听电话。

挂断电话

通话的时候，按挂断电话。

音乐播放


播放音乐时，按键暂停音乐。按**-**播放上一曲，按**+**播放下一曲。

FM收音机操作

按切换到FM模式，长按自动搜索并储存电台。调频范围从87.5MHz到108MHz，每搜到一个电台，会暂停1秒储存电台，然后继续搜索。当搜索完87.5MHz到108MHz，搜索会自动停止。按**-**或**+**选择收听电台。


播放AUX IN

 按 **U** 选择AUX IN模式，
将3.5mm音频线插入
AUX IN插口，播放音乐。

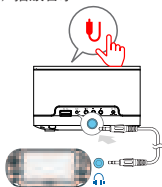

USB音乐播放

 
支持USB接口记忆卡内的音乐播放，能够给智能手机或其他电子设备充电。

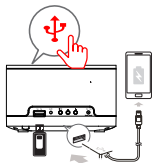

时钟备份功能

机底有3.6V可充电镍氢电池，当外接电源断开后，电池仓的3节镍氢电池只做备份时间使用，不显示时间，无闹钟功能。

 注意：当电池电量不足时不能记忆时间，需要充电。
外置电源重新提供时会显示时间。

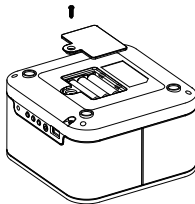

红外遥控器(选配)

●装电池：拧开遥控器的后盖，打开螺丝，装上7号电池，并锁上螺丝，拧上后盖。

●手机同步时间：拧开遥控器的后盖，将遥控器的lightning头与iPhone接口连接，将自动同步iPhone的时间。

●遥控同步时间：将遥控器对准音箱显示屏，按遥控器上的同步按键，遥控器的时间则传送到音箱上，并关闭音箱等功能，复位闹钟。

注意

a 无线充电外壳须单独购买。

b 只能使用许可的电源。

未经授权的电源可能会损坏机器，或导致无线充电无法正常工作。

c 请勿将无线充电外壳单独放在充电面上，这可能会导致充电面过热并引起火灾，还可能导致严重的烧伤或设备故障。

d 如需给没有内置无线充电功能的移动设备充电，请给设备套上无线充电外壳，然后将设备放在无线充电面上。

e 充电时，请不要将外部材料，如金属、磁铁和磁条卡，放置于移动设备和无线充电面之间。这会导致无法正常充电，并因过热损坏机器。

f 充电完成时，将移动设备从机器上移除。

g 当移动设备没有正确放在充电面上，或无线充电部件没有与充电面充分接触，可能导致设备无法正常充电。

h 当无线充电部件没有与充电面充分接触，可能导致设备无法正常充电。

i 当设备外壳过厚时，可能导致设备无法正常充电。充电时，请先移除外壳。

j 在网络信号较差的区域无线充电时，可能会导致设备无法收取信号。

k 无线充电时，如给移动设备接上有线充电器，会导致无线充电功能不可用。

l 无线充电功能适用于无线电力集团WPC认证的所有设备。



仅适用于非热带气候条件下安全使用

维护和保养

使用前请阅读以下建议，可让您更久地使用我们的产品。

1. 保持产品干燥，不要放置于潮湿处，以避免产品内部部件受潮。
2. 避免阳光直射或高温场所。高温会缩短电子设备的使用寿命，损坏电池或某些塑料部件。
3. 避免将产品放置于低温场所，低温会导致内部线路板损坏。
4. 请不要自行拆开分解本产品。
5. 请勿猛烈碰撞本产品或使其从高处跌落，否则可能导致产品损坏。
6. 请不要使用高浓度化学产品或清洁剂清理该产品。
7. 请勿用尖利物品划伤商品表面。

常见问题

为什么用设备打电话时没有声音？

1. 确保设备的蓝牙连接正常。
2. 确保音量正常
3. 如车载情况下，确保音频输入源切换到 AUX

手机无法搜索到设备怎么办？

1. 在非配对模式下，手机无法搜索到设备。请确保设备在配对模式并在有效的工作范围内。

通话音质不清晰怎么办？

1. 确保手机信号正常。
2. 确保设备在有效的工作范围内。

手机和设备的有效工作距离是多少？

1. 根据蓝牙标准协议，2级蓝牙标准的最大工作距离是10米。但视具体环境和手机机型而定。

收音机信号差怎么办？

1. 确保设备远离其他电子设备以避免电磁干扰。

设备无响应怎么办？

1. 重新连接电源，重新开机。

时钟 / 闹铃设置被抹除

1. 电源中断或未连接电源。
2. 重设时钟/闹铃。
3. 备用电池用尽，请及时充电。

* 本说明书内容与实物可能存在差异，
请以实物为准。



美时公众号



上海锋乐电子科技有限公司
服务热线: 4008-600-330
www.homtime.com