


Anova Quick Start Guide
North America — Front Side

Material:
Ink: Digital + 1 spot ink

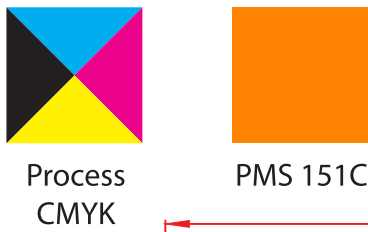


100.0

100.0

ANOVA | **NANO**
PRECISION
COOKER
A SOUS VIDE IMMERSION CIRCULATOR

QUICKSTART GUIDE

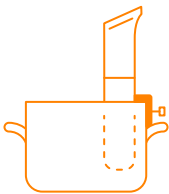

01 | DOWNLOAD THE
ANOVA CULINARY APP



Connect your Anova to get started!

DISCOVER THOUSANDS OF RECIPES AND GUIDES

SAVE YOUR FAVORITE RECIPES

INSTANTLY SHARE YOUR CREATIONS


all on the **Anova Culinary** app.



02 | WHAT YOU
NEED



Sealable
bags

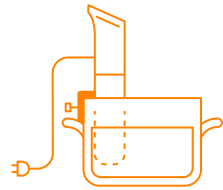


Your pot
(any pot)



Something
to cook

GET INSPIRED WITH TASTY RECIPES IN THE ANOVA APP

03 | SETTING
UP

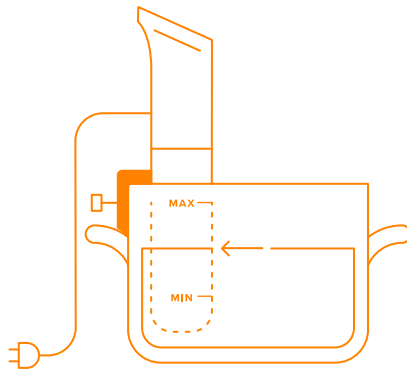

CLAMP cooker to
the side of any pot.

FILL water between
min & max line.

PLUG IN Anova.

NOT SURE WHAT TEMPERATURE? FIND GUIDES IN OUR APP

04 | GET
COOKING



1

Place your food in a
sealed bag, removing as
much air as possible.



2

Submerge the bag in
the pot and cook to your
desired level of doneness.




3


Remove your food from the
bag and sear it in a hot pan
for a crispy texture. Enjoy!

SPECS AND KEYS

- | | |
|---------------------|----------------------|
| 1 Current Temp | 6 Start/Stop |
| 2 Target Temp | 7 Increase Temp/Time |
| 3 Timer | 8 Interface |
| 4 Temp/Time Display | 9 Clamp |
| 5 Reduce Temp/Time | 10 Plug |

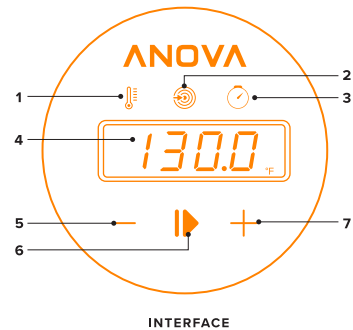


INTERFACE

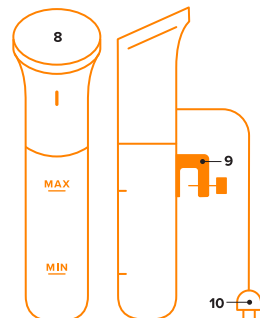

FRONT & SIDE VIEW

Anova Quick Start Guide
North America — Back Side

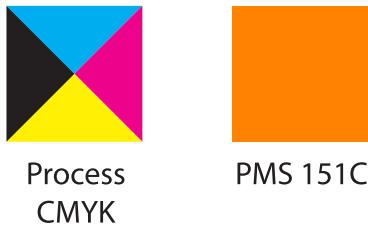

JOIN THE COMMUNITY



See what others are making and share your sous vide creations with the [#anovafoodnerd](#) family.




ANOVA CULINARY



NEED MORE HELP?

Contact support at:
support@anovaculinary.com

To best care for your Anova Nano please go to:
anovaculinary.com/nanocare

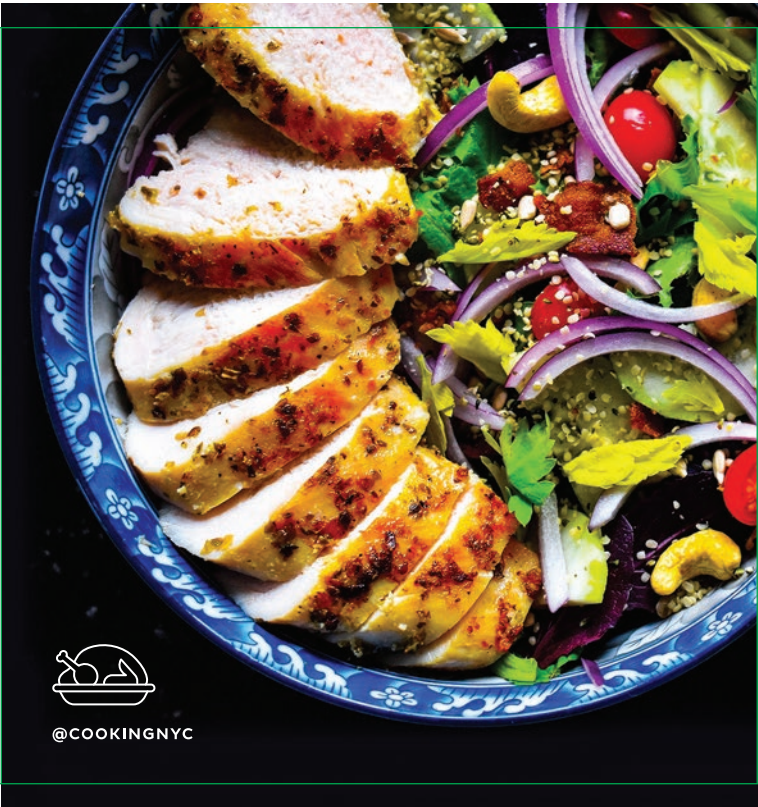

IMPORTANT SAFEGUARDS

- To Reduce The Risk Of Fire, Electric Shock, Or Injury:**
- Do not use with damaged cord or plug.
 - If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
 - Do not use outdoors.
 - Unplug the electrical cord when not in use and before servicing.
 - Do not allow to be used as a toy. Close attention is necessary when used by or near children.
 - Use only as described in this manual. Use only manufacturer's recommended attachments.
 - Do not pull or carry by cord or use cord as a handle.
 - Do not use extension cords or outlets with inadequate current carrying capacity.
 - Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
 - Do not handle plug or appliance with wet hands.
 - Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
 - Do not use appliance in flammable or combustible liquids such as gasoline, or use in areas where they may be present.
 - Store your appliance indoors in a cool, dry area.
- Always Exercise Basic Safety Precautions When Operating Electrical Appliances, Including The Following:**
- Read all instructions, including the instructions you're reading now.
 - Do not touch hot surfaces.
 - To protect against electrical shock, do not immerse cord, plugs, or the device's electrical components in water or other liquid.
 - Close supervision is necessary when appliance is used by or near children.
 - Unplug from outlet when not in use and before cleaning. Allow device to cool before assembling or disassembling.
 - Do not operate any appliance with a damaged cord or plug. Do not operate the appliance if it has malfunctioned or been damaged in any manner. Contact Anova Support at support@anovaculinary.com for assistance.
 - The use of accessory attachments is not recommended by the appliance manufacturer and may cause injuries.
 - Do not use outdoors.
 - Do not let cord hang over the edge of the table or counter. Do not let the cord come in contact with hot surfaces.
 - Do not place the device on or near hot gas or electric burner, or in a heated oven.
 - Use extreme caution when moving an appliance containing hot liquids.
 - To operate, plug cord into the wall outlet. To disconnect, press "stop" on the device interface or in the Anova Culinary App, then remove plug from wall outlet.
 - Do not use appliance for anything other than its intended use.
 - Do not open bottom enclosure while device is plugged in or operating as there are heating elements and moving parts.
 - Do not use directly on a granite or marble surface. Always place an insulating surface between the hot pot and granite or marble surface.

SAVE THESE INSTRUCTIONS