

此页只是文件说明, 不做印刷用!

文件名
File Name 21PHZ028-1M-V1.1

版次
Revision V1.1

机型
Project# MDT1005-MK

比例
Scale 1:1

客户/品牌
Customer CTIS

公差
Tolerance $\pm 3\text{mm}$

尺寸+P数
Size 100*135mm, 20P

设计
Designer 陈慧虹

材质
Material 80g双胶纸

审核
Checked 黄春花

工艺
technique 单黑印刷, 骑马钉

设计日期
Design Date 2021.6.17

PdfEditor 4.0.0.14 Testversion, - <https://www.pdf-editor.com/>



SYLVANIA

SLTDVD1024-B



USER'S MANUAL

 


PdfEditor 4.0.0.14 Testversion, - <https://www.pdf-editor.com/>

Table Of Contents

Safety Precaution	01
Package	04
Main Features	04
Overview	05
Charge the Battery	06
Start the device	06
DVD Playback	08
Camera Function	10
Wi-Fi Connection	11
Mirror Cast Connection	12
Text Input	13
Transfer files between tablet and PC	13
Battery Use	14
Specifications	15
Trouble shooting	15
LIMITED PRODUCT WARRANTY	17

Safety Precaution

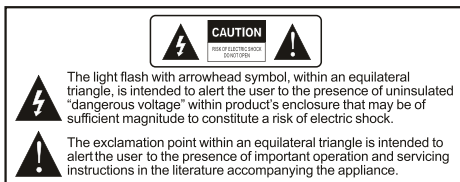

Caution---use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- 1) Please read the instruction manual carefully and follow all the requirements of safe operation to operate the device.
- 2) Do not use or leave the device in direct sunlight or a hot environment such as a vehicle etc. Overheating can damage the device.
- 3) There's a rechargeable battery built inside the device. If the device is not used for long, it may occur no charging indication when power up. Under this circumstance, please keep power connected and wait for about 5~10 minutes. You're advised to charge the battery every 3 months to keep the device in good condition.
- 4) Do not overcharge the device, do not leave the device on the charger for very long after the battery has been fully charged.
- 5) Device should be protected from any physical impact or damage and care should be taken not to drop the device.
- 6) Only use the factory supplied charger. The use of unapproved charger or cable may cause the battery to fail, explode and/or damage the device.
- 7) Do not disassemble, puncture, crush or expose your device to temperatures above 40 °C / 104 °F.
- 8) Keep your device away from fire or water.
- 9) ~~Keep your device from moisture and extreme temperatures.~~

10
yg
oy

- 11) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 12) Unplug this unit during lightning storms or when unused for long time.
- 13) About Cleaning: Unplug the system, use only wet cloth to clean. Do not use liquid detergent or aerosol.
- 14) Refer all servicing to qualified service personnel, servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, exposed to moisture, does not operate normally. Don't try to repair the device by yourself because of the danger of high voltage and electric shock.
- 15) Do not use irregular shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction.
- 16) This device is not compatible with Blue-ray disc while playing DVD.
- 17) BD type disc not supported.
- 18) While playing DVD, in wireless connection, there's a slight audio lag less than 5 seconds. This is normal and design related.
- 19) It is recommended that volume level of your earphones should be adjusted to an appropriate level to avoid damages to your hearings due to high volume. (earphone not included)
- 20) Do not cut off the power abruptly during software update, software download, or during this device is in operation, to avoid data loss and system error.
- 21) Wi-Fi connection could be affected by related wireless equipments and networks in each specific location and situation, please try with patience.
- 22) Any wireless equipment will influence the flight of an airplane, please consult the airline company if you want to use this device on the airplane.
- 23) For data safety, please back up important data on a timely manner.

* As constant improvement, UI display may vary slightly.



This product is not a toy.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- .. Reorient or relocate the receiving antenna.
- .. Increase the separation between the equipment and receiver.
- .. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- .. Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

 
Package

DVD Player with tablet combo	1
Bluetooth headphone	1
Car adapter	1
AC/DC adapter	1
USB cable	2
User manual	2

Main Features

- * 10.1" panel of 1024x600 resolution
- * Built-in rechargeable Lithium-ion battery
- * Built-in two speakers
- * Support playback DVD/VCD/CD/MP3
Note: This unit is NOT compatible with Blu-ray.
- * Android™ 10 (Go edition), Quad core MTK8167, Arm Cortex-A35 @1.3GHZ, Wi-Fi: 802.11b/g/n
- * Built-in internal memory of 16GB
- * Support Wireless connection (Tablet mode)
- * Touch control functions
- * Stand on back plate
- * 0.3 MP front camera

 
Overview

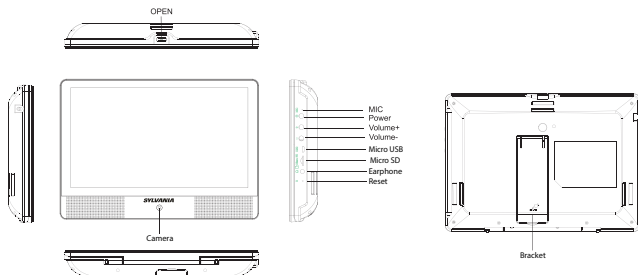 


OPEN(▼) : Press it to open the unit and put the disc on the loading tray.

MIC: To record if recording function turned on.

Power button 

Long press  2-3 seconds, screen will light up and pictures will show up until the interface page.

Long press  2-3 seconds, it will show Power off, Restart, Screenshot, choose Power off to turn off the unit; choose Restart to restart the unit; choose Screenshot to make a screenshot.

Volume +/-

Press +/- to adjust volume.

USB(Micro USB jack): For both power supply input and connecting with PC (for the latter, after connecting with PC, select Setting -> Connected devices->USB->Use USB for FileTransfer to transfer files between PC and tablet.)

Micro SD(Micro SD slot): to insert a micro SD per instruction.

Earphone jack: To connect external earphone.

Reset: To restart the system if abnormal situation happens and the device can't be turned off. Use a thin object(like the end of a paper clip) to press Reset, the device

Basic Operation

1. Charge the battery

Note: Charge the device before using it the first time

- Connect the Micro USB cable to the device.
- Connect the other end of the Micro USB cable to the USB power adapter (wall charger), then plug the adapter into a power outlet. It takes about 5 hours to fully charge the device.

Caution: Use only the included power adapter to charge the battery. An incompatible adapter may cause damage.



2. Start the device

- After connecting the power adapter, screen will light up and show battery charging icon for about 5 seconds, then screen will turn off, press power button once, the unit will light up again. If screen does not light up, please charge and wait for about 5 minutes. If still no response, please call after sales service for help.



- Keep pressing power button for 2-3 seconds, screen will light up, the first boot will take about 5-10 minutes, please be patient.

d) Turn on the device, you will see the main page which has a lot of app icons. or swipe up to go to app page where all the pre-installed apps can be found.



No matter what you're looking for, Google Play has it all. Get your music, movies, TV, books, magazines, apps and games all in one place.

e) Function buttons at the bottom of the interface.



- ✱ : Touch it to enter Walmart Apps.
- ◀ : Touch it to back to last step or quit the current app.
- : Touch it to go to the main page at once.
- : Touch it to show recent app list.