 


# Remote Controlled Toys

2.4GHZ REMOTE CONTROL

※ Please fully charge before playing

## Battery Installation:

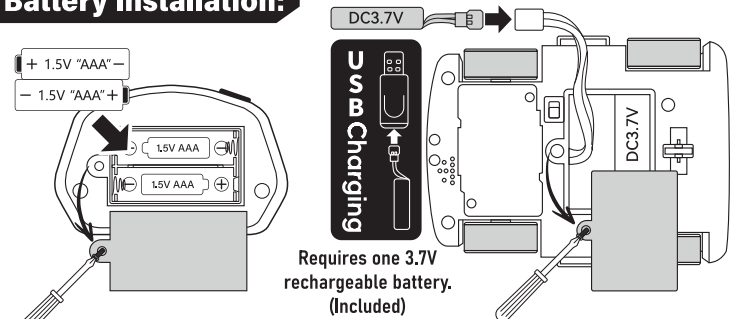

1. Insert 2 x 1.5V "AAA" batteries into the battery compartment of the remote controller with correct polarity.
2. Close the battery compartment: Tighten the screw by turning clockwise with a phillips screwdriver.

1. Open the battery compartment: Align the screwdriver with the small contact point on the battery cover and gently press down while dragging the battery cover to open.
2. Insert one 3.7V rechargeable battery into the toy battery compartment with correct polarity.

## Battery Notice:

 
 
1. The remote control requires two 1.5V AAA non-rechargeable batteries (not provided);
2. The toy body requires one set of 3.7V rechargeable batteries (provided);
3. Do not charge the non-rechargeable batteries;
4. Do not mix new and old or different types of batteries;
5. Please note the polarity when installing or replacing the battery;
6. Please timely take out the battery with low power;
7. Do not short circuit the power supply terminal;
8. Take out and install the rechargeable battery: Loosen the main battery compartment screws with screwdriver, open the battery cover, connect and pull out the battery connector socket in the correct direction, then close the battery cover; tighten the screws of the battery cover with screwdriver.
9. This rechargeable battery is non-replaceable, and the rechargeable battery can only be charged under the supervision of adult;
10. Connect the supplied USB charger to the power supply with output voltage of 5.0V 2A; (such as: USB mobile phone charger, computer USB interface) to charge the battery;
11. During charging, the USB charger will be slightly warm, which is normal;
12. The product can only be charged with the recommended USB charger, and the USB charger is not a toy;
13. Regularly check whether the wire, plug, casing and other parts of the USB charger and the recommended charger are damaged. If there's any damage, stop using it before it is repaired;
14. Disconnect the USB charger before cleaning the toy;
15. Please do not disassemble or throw the bad batteries and battery pack into fire or water to avoid accident;
16. The toy must not be used by children under age 3.




## How To Play:

- Turn on the power switch of the remote control car, and the indicator will flash, Turn on the power switch of the remote control, and when the frequency emitted by the remote control is correct, the indicator will stop flashing and be normally on. (Note: If the indicator keeps flashing, it means that the frequency is incorrect; please turn off and then restart the toy);
- When being idle for ten minutes, it will enter a sleep mode and needs to be restarted to continue playing;
- When a collision occurs on both sides of the car, the rear bumper will pop out and drop, emit smoke, trigger an alarm sound and flash (When the bumper is collided off and after being idle for on minute, the remote control car will automatically stop and enter the sleep mode, and should be restarted for operation).
- Before installing the bumper, press down the rear button of the remote control car first;
- Open the top water tank cover of the remote control car, add an appropriate amount of purified water, and then close the water tank cover tightly.


## Operate:

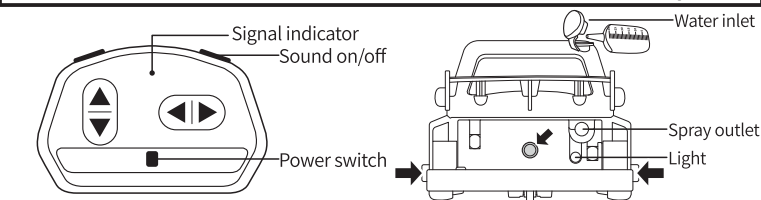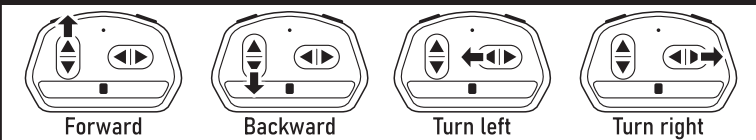

## Football mode:

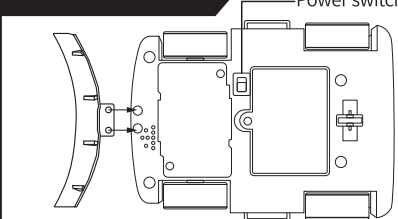 

## Football gate:

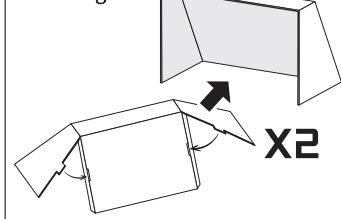 

## WARNING

- The packaging parts (such as pack threads, ribbons, color boxes, etc.) are not toys. DO NOT play with them for fear of injury!
- The toy must be taken out of the package by an adult and can be handed over to a child after everything is OK.
- The toy must be operated under a direct supervision of the adult.
- This product contains small parts and poses a risk of suffocation. It is not suitable for children under 3 years old to play with.
- Purified water is required for spray, and water mist can be generated through ultrasonic wave.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. The device shall be operated and installed without restriction.