PA970 Operation Manual



3.5 Pegterm

Path: My Computer/Windows/Pegterm.exe Or Start/Program/Communications/Terminal

This tool allows you to make a session when you access the network by using modem card or when you want to dial to the phone by using GPRS card.

1. Insert the modem card or GPRS card.

2. Double tap "pegterm".

<u>File Edit View G</u> o F <u>a</u> v	×
Address \Windows	•
Name	
🖻 pdfview.htm	
凹 pdfviewer.exe	
Ppdfviewer.lnk	
🔊 Pdfviewerhlp.lnk	
🛅 peghelp.exe	
Spegterm.exe	
₿∋pegterm.lnk	
🔊 picstream.dll	
🔊 pimprint.dll	
🔊 pm.dll	
🖗 pmail.exe	
🔊 pmail.lnk	-

3. Tap "Make New Session".



- 4. Under "Communication", Session name: <Enter a name>
- 5. Select a modem: <Select the modem card you are using>
- 6. Telephone Number: <Enter the phone number>

Session Pro	perties	ОК	×
Communicati	ons Emulation		
<u>S</u> ession na	me		
my moder	1		
Select a <u>m</u>	odem		
Hayes Cor	mpatible on CON 👻		
	onfigure		
Area code	Telephone number		
425	*99#		
Country cod	e Dialing from:		
1	Dialing Properties		
Force lo	ng distance cal		

7. Tap "Configure". Set the baud rate, stop bits, parity and so on.

Device Properties	ок 🗙		
Port Settings Call C	Options		
Connection Prefere	nces		
Baud Rate:	115200		
<u>D</u> ata Bits:	8 💌		
<u>P</u> arity:	None 💌		
<u>S</u> top Bits:	1		
Elow Control:	None 💌		
Terminal —			
🗌 Use terminal wir	ndow b <u>e</u> fore dialing		
Use terminal window after dialing			
Manual Dial			

- 8. Tap "OK" and exit configure window.
- 9. Tap "Dialing property". Tap "Edit".

Dialing Pro	operties	ок 🗙
Location:	Work	-
	New	Remove
Local settin Area co Country co Disable Dialing pat Local / Lor 9,G 9,1FG 9,011,EFG	igs are: ide: 425 ide: 1 call waiting; d terns are: – ng Distance / In	Tone dialing Pulse dialing ial:

10. Specify the local calls, long distance calls etc. Tap "OK" to exit.



- 11. Tap "OK" to exit pegterm.
- 12. Start to connect.



3.6 Pmail

Path: My Computer/Windows/pmail.exe

This is an email applications for you to sent/receive email by using the terminal.

(Must connect the terminal to the network)

1. Double tap "pmail".



2. In "Service" menu, select "Options".

<u>E</u> ile	Compose Servic 😨 ? 🗙
	ActiveSync 🖸 From
	Options
	Services Compose Read Delete
	Installed services:
•	

3. Under "Service" tab, tap "Add".



4. Select the service type. Tap "OK".

PA970 Operation Manual

Ē	le	<u>C</u> ompose	<u>S</u> ei	vic	8	?	×
.	\$	ActiveSync	ocal		Fror	n	
	20			2	OK.	V	1. A
	Se	rvice Name					OK
Rea	9 [Service <u>t</u> ype: POP3 Mail					•
		Service <u>n</u> ame:					
		POP3 Mail					
				•			

5. For connection, select type of your connection. (If you are using wireless LAN card, select "Network Connection".)

6. Key in the Pop3 host.

7. Enter user ID and password.



8. Key in the SMTP host and return address. Tap "Next".



- 9. Tap "Next", "Next". Tap "Finish".
- 10. Pmail is ready to be used for email sending.

3.7 Regview

Path: /My Computer/Windows/Regview.exe

This tool shows the registry keys of the system. (Like "Regedit" in Windows)

1. Double tap "Regview".

<u>File E</u> dit <u>V</u> iew <u>G</u> o	Fav 😵 🗙	<u>File H</u> elp	×
Address Windows	-		
Name	▲		
🔊 regenum.dll	6		
🚔 REGFUNCKEY.exe	1		
🚔 REGFUNCKEY.Ink	26		
Region_1_0.nlp	7		
🔊 Registry Tool.Ink	23	Name	Data
🔊 Registry View.lnk	23		
Regtool.exe	6		
RegView.exe	1		
🔩 repllog.exe	5		
🔊 riched20.dll	1		
🍉 rnaapp.exe	3		
🕑 rnetw.htm	2 🔻		
•	•	•	•

3.8 repllog

Path: My Computer/Windows/repllog.exe

Repllog is a tool to enable RS232/IrDA communication.

1. On your PC, open ActiveSync. Under "File" menu, select "Connection Settings". Allow Serial cable or infrared connection to this com port, select "Infrared Port".

Connection Settings			
Click Get Connected to connect your mobile device to this computer.			
Status: Waiting for device to connectGet Connected			
✓ Allow serial cable or infrared connection to this COM port:			
Infrared Port (IR)			
Status: COM port is not available			
Allow USB connection with this desktop computer.			
Status: USB is available			
Allow <u>n</u> etwork (Ethernet) and Remote Access Service (RAS) server connection with this desktop computer. Status: Network is available			
- Status icon			
Show status jeon in Taskbar.			
OK Cancel Help			

2. On the terminal, control panel/ PC Connection/Change Connection: IR to PC.



- 3. Open MS Activesync on your PC.
- 4. Place the IrDA port of the terminal towards the IrDA port of your PC.
- 5. On the terminal, double tap "repllog.exe".



6. Terminal and PC are connected by IrDA.

3.9 Taskman

Path: My Computer/Windows/TASKMAN.exe

This tool shows the tasks that are running currently.

1. Double tap "TASKMAN".

<u>F</u> ile	<u>E</u> dit	<u>V</u> iew	<u>G</u> o	Fav	8
Addr	ess \\W	'indows			
Name					
🔊 syst	oots.p7	7b			8
🔊 syst	tem.cpl				2
🖹 tah	oma.ttf				
🔊 tap	i.dll				6
🚦 Tas	kman.e	xe			8
🐉 Tas	kMan.In	ik			23
🔊 tcp	ip6.dll				2
🔊 tcp	stk.dll				1
🗊 tem	nplats.In	ik			36
🔊 terr	nctrl.dll				3
🖹 tim	es.ttf				-
🔊 tice	srv.dll				7

2. Active tasks are shown. Select a task you want to terminate, tap "End Task".



3.10 wceload

Path: My computer/Windows/wceload.exe

This tool is exist to execute *.cab file.

<u>F</u> ile	<u>V</u> iew <u>S</u> et	up 75% ?	×
PCMCI	(A Card		
B4 =	•		
1	В	C	
1	Supplier	Model No.	
2	Abocom	RE450	1
3	Symbol	LA-4121	1
4	Symbol	LA-4137	1
5	Cisco	340 series 350 series	<u>1</u>
6	Lucent OEM	Card	1
7	Agere system	h i	1
8	All type of C	F is compliant.	
9	GVC	VF-1156PV/C3	E
and the			
		I	

3.11 Screen Rotation

Path: /My Computer/Windows/ScrRotation.exe

Screen Rotation allows the users to rotate the screen of terminal to the right, to the left or upside down.

1. Double tap "ScrRotation.exe".



2. The screen rotation icon will appear on the taskbar. Tap the icon to select the option from the menu.



- 3. Tap "Rotate Right". The screen is rotated to the right.
- 4. Tap "Rotate Left". The screen is rotated to the left.
- 5. Tap "Upside Down". The screen is flipped 180° vertically.
- 6. Tap "About". The version of screen rotation is shown.
- 7. Tap "Exit". Screen rotation icon is disappeared.

3.12 WMAGS46

Path: My Computer/Windows/WMAGS46.exe

WMAGS46 is the RF utility for Lucent Orinoco RF card. It allows the users to set the power management, to check site connection and link test etc.

1. Insert the Lucent Orinoco RF card into the PCMCIA slot.

2. Tap "WMAGS46.exe".



3. Tap "Tools".



4. Select "Disable Radio" to disconnect RF connection. (select "Enable Radio" to connect the RF)

5. Select "Power Management" > "On" or "Off".



6. Select/Deselect "Suspend While Connected". If select "Suspend While Connected", the terminal will be suspend according to the time set in suspend mode even if the RF connection is on. If deselect "Suspend While Connected", the terminal will not be suspend while the RF connection is on.

7. Select/deselect "Load/unload automatically".

8. Select "Version Info". The information of the utility is shown.



9. Tap "Advanced" > "Network Troubleshooting". You may check your current IP.

Client: Ready	
	Network Troubleshooting
	Below is the IP Address assigned to your device.
Network: UTE	192.168.110.100
Connection: Good	192.168.110.199
Channel: 1	Advanced Repair
Enc Network Troubleshooting	Enter the name of a computer to contact and click 'Contact' to see if your network is
Site Monitor	Computer
	Contact
To char View Certificates	Condectar
Edit Wil Enroll	Remote Computer
Tools Advanced ×	

10. Tap "Advanced" to check detail IP address or tap "Repair" to renew IP.

Advanced IP		OK
Advanced IP		3
Connection		
MAC Address	00-60-B3-6D-61-49	Э
IP Address	192.168.110.100	
Subnet Mask	255.255.255.0	
DHCP Server	192.168.110.6	
Gateways	192.168.110.240	
DNS	192.168.110.4,	
IP Forward Table	•	
Dest	Mask	Int 🔺
0.0.0.0	0.0.0.0	US
0.0.0	0.0.0.0	PR
0.0.0.0	0.0.0.0	w
127.0.0.0	255.0.0.0	Lo 💌
4		•

11. You may communicate with a remote computer by entering the name of that computer , then tap "Contact".

Network Troubleshooting						
Network Troubleshoo OK 🗙						
Your device successfully contacted yukiko-pc in less than 5 ms.						
E and click 'Contact' to see if your network is functioning.						
Computer yukiko-pc 💌						
yukiko-pc responded in 5						

12. Select "Advanced" > "Site Monitor", tap "Open", the user can check signal strength.

ι	JTE			OK
•	Site Monitor			3
	AP MAC Address	SNR	Signal	Noise
	00-0c-30-cc-04-bc 00-0c-30-cc-04-92	13 15	-72 -68	-85 -83
	100		_	
	•			
			E	Back

13. Select "Advanced" > "Link Test", users can check the link of RF.

Link Test Link Test				OK		
Select Partner:	15/	AXMO1		-		
MAC Address: Link Speed:	00-02-2d-5b-fb-76 11 Mbits/s					
	Sta	tion	Par	tner		
SNR	16		45			
Signal	187		208	3		
Noise	171		163	3		
Mbps	1	2	5	11		
Send	0	0	1	24		
Receive	0	0	0	25		

14. Tap "Tool" > "Exit" to close WMAGS46.



3.13 Transcriber-character recognition

Execute processes of Transcriber:

1. Execute Transcriber at Desktop on PA970



2. Transcriber Icon will display at Taskbar



3. Execute Microsoft WordPad at Desktop on PA970 and write something with Stylus

<u>F</u> ile	<u>E</u> dit	<u>V</u> iew	F <u>o</u> r	Ŧ	\?	×
-	T	<u> </u>		\sim	Λ	
		1	V	V	1	
💐 🗓	🛛 Doc 1	<u>s</u>	12:3	2 PM	>	

4. Then you can see that you write on process 4

Eile	<u>E</u> dit	<u>V</u> iew	F <u>o</u> r	Ŧ	\?	×
Tim						

教 👿 Doc1 🛛 🚳 👘 > 12:33 PM 🗭 🖷

Chapter 4 Control Panel

Settings under "Control Panel"

- 1. Certificates
- 2. Date/Time
- 3. Display
- 4. Input Panel
- 5. Internet Options
- 6. Keyboard
- 7. Mouse
- 8. Network and Dial-up connection
- 9. Owner
- 10. Password
- **11.PC Connection**
- 12. Power
- **13. Regional Settings**
- 14. Remove Programs
- 15. Stylus
- 16. System
- 17. Volume & Sounds
- 18. Storage Manager

4.1 Certificates

Path: Start/Settings/Control Panel/Certificates

This setting allows you to specify the certificate issuer besides viewing the details, import a certificate or deleting a certificate.

1.. Double tap "Certificates".



2. Under "Store" tab, specify the authority .

Certificates	? 0K ×
Stores	
Trusted Authorities	-
Lists the certificates trusted by you	
and the second	[]
Class 3 Public Prim	Import
Entrust.net Secur Equifax Secure Ce	View
GlobalSign Root C GTE CyberTrust G▼	<u>R</u> emove

3. Tap "Import" to import a certificate file (If you have)

Certificates	1	? OK ×
Ctoroc		_
Import Certifi	cate or Key	ок 🗙
From a File)	
O From a <u>S</u> m	hart Card	
<u>R</u> eader		~
Card	Absent	
Friendly <u>n</u> ame		

4. Select the certificate and tap "View" to view the details.

Certificate Det	tails	OK ×
Friendly <u>N</u> ame Field	Subject	•
OU=Class 3 Pu O="VeriSign, I C=US	iblic Primary nc."	Certil 🔺

5. Select a certificate and tap "Remove" to delete it from the list.

4.2 Date/Time

Path: Start/Settings/Control Panel/ Date / Time

This is the system date and time. You may set the date and time for the system.

1. Double tap the date/time.



2. Set the date from the calendar and set the time. You may select the time zone too. Then, click "Apply".

Date/Time Properties 🛛 🥐 🗙									
Date,	Date/Time								
	November 2003								
	S	м	т	W	Т	F	S		
	26	27	28	29	30	31	1		
	2	3	4	5	6	7	8		
	9	10	11	12	13	14	15		
	16	1/	18	19	20	21	22		
	23	24	20	20	4	28	6		
	100	-	~	9	т.	-	-		
	2 :18:09 PM								
Time <u>Z</u> one									
(GMT+08:00) Taipei									
) ayliq urror	ght s	avin	gs ti	me		App	ly	

4.3 Display

Path: Start/Settings/Control Panel/Display

This setting allows you to set the style of the windows background, the color and pattern of windows and determine the backlight off time.

1. Double tap "Display".



2. Under "Background" tab, for "Image", select the background name from the drop down list. You may tap "Browse" to retrieve any bitmap file for background. Tap "OK".

PA970 Operation Manual



3. Under "Appearance", for "scheme", select the scheme from the drop down list.

4. For "Item", select the item that you want to apply the scheme on.

5. Tap "Apply".

6. You may also rename the scheme by tapping "Save" button.

7. To delete a scheme, tap "delete".

Disp	olay Properties 🛛 🥐 🔀 🗙
Back	kground Appearance Backlight
<u>S</u> 0	cheme: Rose
S	a <u>ve</u> <u>D</u> elete <u>A</u> pply
	Normal Disabled Selec ? × Inactive Wind ? OK ×
	Active Win? OK × Dialog Box Text
Ite	m: Desktop

8. Under "Backlight" tab, tick "Turn off backlight when using battery power and device is idle for more than X minutes". Specify the time.

This will turn off (suspend) backlight of the terminal after it has not been operated for X minutes to save the battery power. (Provided that the terminal is used with the battery).

9. Tick "Turn off backlight when using external power and device is idle for more than X minutes". Specify the time.

This will turn off (suspend) backlight of the terminal after it has not been operated for X minutes to save the battery power. (Provided that the terminal is used with the power adapter).



4.4 Input Panel

Path: Start/Settings/Control Panel/Input Panel

This setting is to specify the input method and the keyboard style of the software keyboard.

1. Double tap "Input Panel".



2. For "current input method", select the input method you prefer. Tap "OK".

Input Panel Properties	?	OK	×			
Input Panel						
Current input method:						
Keyboard	•					
Options			■			
Allow applications to change the input panel state						
To quickly switch input me tap the Input Panel arrow tap the desired method fro menu that appears.	etho and m ti	ds, then ne				

3.. Tap "Options". You may specify the large keys or small keys. For Example, select "Large keys". Tap "OK", "OK".

PA970 Operation Manual

Soft Keyboard Options OK 🗙	Eile View ? ×
Large keys d f g Small keys C V b	
Use gestures for Space, Backspace, Shift and Enter f f Space f Backspace	Communic Date/Time Dialing
F f Enter	Input Panel
	Esc q w e r t y u i o p ← Tab a s d f g h j k l * Shift z x c v b n m ; ' ← 123 áü Ctl @ 8.

4. For Example, select "Small keys". Tap "OK", "OK".

Soft Keyboard Options OK 🗙	File View ? ×
Large keys Ert dfg Small keys Crt	
Use gestures for Space, Backspace, Shift and Enter	Communic Date/Time Dialing
f F f Enter	Input Panel
	Esc 1 2 3 4 5 6 7 8 9 0 - = ◆ Tab q w e r t y u i o p [] CAP a s d f g h j k l ; ' Shift z x c v b n m , / ← Cttláü ` \ \

5. You may use gesture so that you can use the stylus to slide the software key to indicate the main key and space, backspace, enter key and shift key. Tick "Use gestures for Space, backspace, Shift and Enter. Tap "OK", "OK".



6. Open pocket word. Tap the software keyboard. Tap a key and slide upwards.

You should see the "Shift" key value. For example, Tap "b" key and slide upwards will return "B". You may try to tap the key and slide downwards, to left side and right side to see the effect.

Ei	le	Edi	t <u>1</u>	<u>v</u> iev	Y	F <u>o</u> r		t;	?		×
bb	В										
b											
Inn	ut P) ane	1								
. I.	. (D.	.#[_	\$[_9	/o['	শন	R o	*]0	(lo	J	-	_+
q	w	e	r	t	y y	u	i	Τo	1	p	11
a	s	d	f	g	'n	i	k	tī		; :	-
Z	X	C	V	b	n	m	1, <	1.	7	1?	1}
Ctl	áü	Esc	Ta	b [C	AP)	~	VII.	ΨĪ	1	+	->

4.5 Internet Options

Path: /Start/Settings/Control Panel//Internet Options

This setting allows you to specify the home page, clear cache, specify connection, define the security and make advance settings of the IE browser.

- **File** View ? × Date/Time Dialing Display 2 All Keyboard Input Panel Internet Options Network and Mouse Owner Dial-up Co... Password PC Power Connection
- 1. Double tap "Internet Options".

2. Define your start page and search page. Tap "Clear cache" to clear the cache and tap "clear history" to clear the internet's history records. Tap "OK".

Internet Settings OK 🗙
General Connection Security Ad
<u>S</u> tart Page:
http://www.msn.com
Search Page:
http://www.yahoo.com
⊆ache Size (in KB): 512
Clear Cache Clear History

3. Under "Connection", specify the network connection you want the browser to connect to the network.

Internet Settings OK 🗙
General Connection Security Ac
Us <u>e</u> LAN (no autodial) <u>A</u> utodial name: USB to PC
Network Access the Internet using a proxy server
Address:
Port: 80
Bypass proxy server for local addresses

4. Under "Security", specify the security option for your browser.



5. Under "Advanced" tab, click and select the options you want the browser to apply.



4.6 Keyboard

Path: Start/Settings/Control Panel/Keyboard

This setting allows you to specify the behavior of the terminal keypad. (Hardware keyboard).

1. Double tap "Keyboard".

