

IPRO

Wepad

Quick Start Guide



SAFETY INFORMATION

Hospital Safety

Please follow hospital rules and limitations.
Please turn off your tablet PC when near medical instruments.

Airport Safety

Remember to follow all airport and flight safety regulations.

Water Hazard

Your device is not waterproof. Keep your device away from water or liquid to avoid damage.

Emergency Calls

Make sure your device is switched on and in a service area. On home screen, tap the tablet key and dial the emergency number

Battery usage

For better performance and longer battery life, it is recommended that you charge the battery fully before using the tablet for the first time and that you initially complete two to three charge cycles

LEGAL INFORMATION

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of IPRO mobile which is hereinafter named IPRO in this user guide

Notice

IPRO reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Disclaimer

IPRO expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.
Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Trademarks

The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by IPRO is under license.

KEY FUNCTIONS



Power On / Off

- Long press power button to power on;
- While the device is powered on, long press to access the power off menu or click to lock the screen.

Volume

Adjusts the ringer volume, call volume, and multimedia volume.

Home

The home button pauses any current action and returns to the home screen.

Recent Apps

Opens a list of recently opened applications that allows you to switch conveniently between them. This option can also close any open applications by swiping to the side.

Back

Returns to the previous screen; Closes the keyboard, any open program, or any menu option.

USB Port

Charges the device and transfers data such as documents, music, and video between your device and a PC

Headset Port

Connect earphones to this port for hands-free capabilities. You may also to listen to music or FM radio.

Front Camera

A high-resolution front camera to take pictures and video. This option is ideal for self-portraits.

Rear Camera


A high-resolution rear camera to take pictures and video.

Flash

Provides light for pictures in low-light conditions. It also may be used as a flashlight.

Charging the Phone

Your phone's battery should have enough power for the Tablet PC

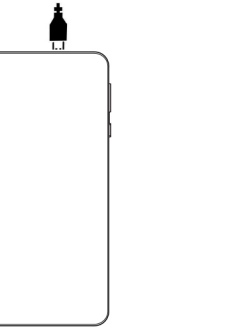

to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

WARNING!

Use only IPRO-approved chargers and USB cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

1. Connect the adaptor to the charging jack.Ensure that the adaptor is inserted in the correct direction.
2. Connect the charger to a standard AC power outlet.
3. Disconnect the charger when the battery is fully charged.

NOTE:


If the screen freezes or takes too long to respond, try pressing and holding the Power key for about 10 seconds to restart the phone.

Installation of the SIM Card

Warning: Please keep the SIM Card out of the reach of children. The SIM card and its contact are easily damaged due to scratching or bending. Please use caution when carrying, installing, or taking out the SIM card.

To insert SIM card

- A) Remove the rear cover. Insert the SIM card.
- B) Insert the SD card (For additional storage capacity)
- C) Replace the rear cover, and power on the tablet

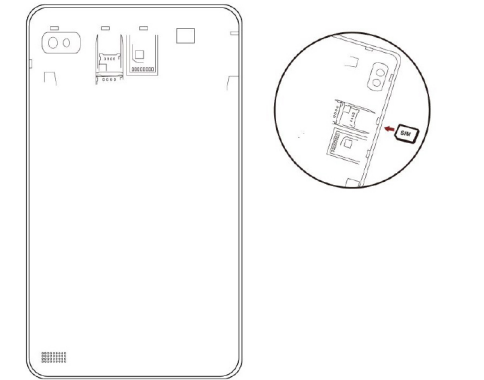

When you initially power on your tablet, there will be a series of steps to set up basic features.

INSERT SIM

Insert your SIM card so the tablet can register to the network.

SELECT LANGUAGE

While on the Welcome screen, please scroll to select your language.

SELECT WI-FI

This process allows the device to connect to the internet. Click on the desired Wi-Fi network that the device that will be connected. Please note that any unsecured Wi-Fi networks can be connected to without credentials and any secured Wi-Fi networks require a password for credentials prior to connection. It is recommended that you connect to a Wi-Fi network to check for software updates prior to start up.

ADD YOUR ACCOUNT

Sign in to your Google account in order to keep accounts streamlined with Google services. Your Gmail account will be used for some Google programs. If you do not have a Google account, click to create a new account.

GOOGLE SERVICES

Click to add or remove Google services that include Backup, Location Service, etc.

RESTORE APPS & DATA

You can restore your previous applications and data that was stored from another device. You also have the option to setup the tablet as a brand-new device.
Google, Google Play and other marks are trademarks of Google Inc.

Product Safety Information

	Don't make or receive phone calls while driving. Never text while driving.
	Keep your phone at least 5 mm away from your body while making calls.
	Small parts may cause choking.
	Your phone can produce a loud sound.
	To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your phone near your ear while the loudspeaker is in use.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Turn off when asked to in hospitals and medical facilities.
	Turn off when told to on aircraft and at airport.
	Turn off when near explosive materials or liquids.
	Don't use at gas stations.
	Your phone may produce a bright or flashing light.
	Don't dispose of your phone in fire.
	Avoid extreme temperatures.
	Avoid contact with liquids. Keep your phone dry.
	Do not attempt to disassemble your phone.
	Don't rely on your phone as a primary device for emergency communications.

FCC Warning

Specific Absorption Rate (SAR) information SAR tests are conducted using standard operating positions accepted by the FCC with the tablet transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the tablet while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output. Before a new model tablet is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each tablet are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.
For body worn operation, this tablet has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal.
Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.