



User Manual

portable bluetooth CD player

Please read this manual carefully before using to ensure the product functions to be used correctly.
Please keep this manual for future reference.

CAUTION:

1. Please install and operate it in accordance with the manufacturer's instructions.
2. Please place the machine in a position where there is sufficient ventilation around it. The distance between the front and rear of the machine should be 5-10cm.
3. Do not install or operate near any heat sources such as radiators, stoves or other apparatus that produce heat.
4. Prevent the power cord from being trampled or squeezed, especially where the power head, power outlet, and device power outlet.
5. Please only use accessories specified by the manufacturer.
6. Unplug this apparatus during lightning storms or when unused for long periods of time.
7. Do not cause excessive impact on the player by dropping it. Do not place heavy objects on top of the player.
8. Do not place the player on damp, dusty or sooty environment, as it could result in fire or electric shock.
9. Do not place the device in a high temperature environment, direct sunlight, etc.
10. Do not get the player wet or drop it in water (If the player gets wet, do not switch it on).

WARNING:

11. Do not disassemble this player by your own.
12. Do not place the device on top of other electronic items.
13. Do not look directly at the laser beam inside the machine.
14. Any operation or adjustment against the product manual may cause serious laser radiation or other danger situation.
15. Make sure the insulation sheet is removed from the battery slot of the remote.

Packing List:

1. CD player x 1
2. 5V-1.5A USB adaptor x 1
3. Remote control x 1
4. Wall-mount kit x 1
5. Wall-mount plate x 1
6. User manual x 1
7. Desk stand x 1
8. 3.5mm male-to-male audio cable x 1

 
Specifications

1. Dimension of Main Unit: 167*167*30mm
2. Power/Switch Cable Length: 2.3m
3. Net Weight: 520g
4. CD format support: CD, CD-R, CD-RW, MP3, WMA
5. FM Radio Range: 76MHz-108.0MHz
6. Speaker: 40mm X 2
7. Rated Impedance: 4Ω
8. Speaker Output: 5W X 2
9. AC: 0-240V~50Hz-60Hz
10. DC: 5V-1.5A
11. USB Memory: Up to 64 GB
12. TF Card Memory: Up to 64 GB

Main Features:

- 1. 6 different color for 6 modes
- 2. LED screen display
- 3. USB flash reading/playing(FAT32 format)
- 4. Full-band FM radio
- 5. Bluetooth V5.1
- 6. Wireless remote control
- 7. Standard 3.5mm audio input/output port
- 8. Support multiple audio formats for disc playback, such as CD/MP3/WMA
- 9. Loop playback modes: Repeat One, Repeat All, Shuffle, Normal
- 10. Support A-B repeat
- 11. Support Time and Timer


Illustration

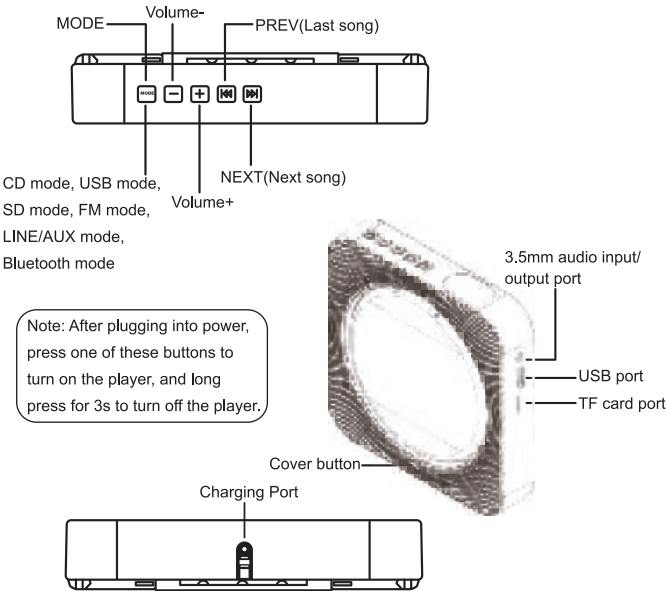

Remote control precautions

- 1. The sensitivity of remote control can be influenced by light and environment.
- 2. Please take out the battery from remote control in case of being unused for a long time, to avoid the battery's unexpected leakage and corroding the remote control.
- 3. Normally, the included battery can last one year but it also depends on your using frequency.

 Remote Control

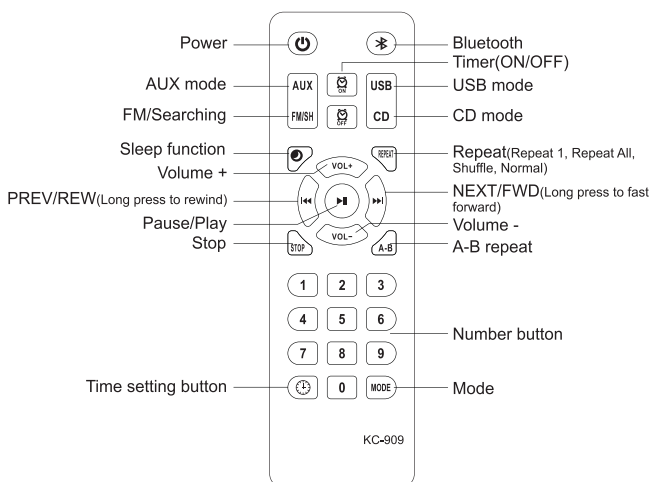



EN

Installation instructions :


- ① Fix the wall-mounted plate on the wall with the included 3 nails. Please follow the arrow's direction when you fix the plate on the wall.



  - ② Or fix it on the wall with the included 4 screws

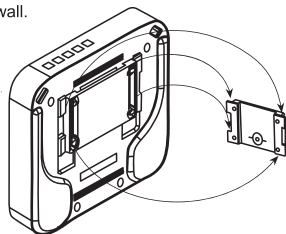

 - ③ Hang the CD Player on the wall-mounted plate

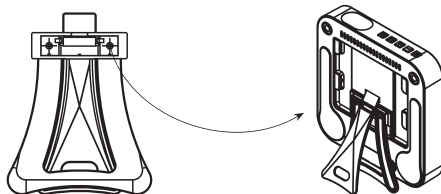

Basic Operation:

1. Remove the protect paper from the player before starting to use, otherwise the laser could be damaged.
2. Plug the power cable into the adapter.
3. Plug the adapter into power outlet. (0-240V)
4. Insert a CD into the player and press one of the buttons (MODE, VOL-, VOL+, PREV, NEXT) on the player.
5. After the disc rotates for 5-12 seconds, it will begin to play music.
6. Press the MODE button on the player or on the remote control to switch among 6 modes: CD mode, USB mode, SD mode, FM mode, AUX mode, Bluetooth mode

MODE

You can switch modes by pressing the mode button. There are CD mode, USB mode, SD mode, FM mode, AUX mode and Bluetooth mode; the LED display will light up and show the corresponding mode symbol.

①CD Mode Instructions

*CD format support: CD, CD-R, CD-RW, MP3, WMA

1. Press the MODE button on the player or on the remote control, or the CD button on the remote control to switch to CD mode.
2. Follow the instructions of the Basic Operation above to play CD.

②USB Mode Instructions

1. Plug a USB flash drive into the CD Player's USB port.
2. Press the MODE button on the player or on the remote control, or the USB button on the remote control to switch to USB mode.
3. The CD Player will read the audio files in the USB drive and start to play automatically.

③FM Mode Instructions:

*FM Radio Range: 76MHz-108.0MHz

1. Press the MODE button on the player or on the remote control, or the FM/SH button on the remote control to switch to FM mode.
2. Press FM/SH button again to search all radio stations and it will automatically store the first 40 stations if there are such enough stations around; after completing the searching, it will play the first station.
3. The CD Player will automatically play the pre-stored radio stations next time when switched to FM mode.
3. Press <Prev> or <Next> button to go to previous station or next station; or press digital keys to change to certain station pre-stored.

④AUX mode

*Standard 3.5mm audio input/output port.

1. Press the MODE button on the player or on the remote control, or the AUX button on the remote control to switch to AUX mode.
2. Connect the CD Player to other audio devices with a 3.5mm audio cable, then the audio will be transmitted into or out of the CD Player.

⑤Bluetooth Mode Instructions:

1. Press the MODE button on the player or on the remote control, or the Bluetooth button on the remote control to switch to Bluetooth mode, then the player will be ready to pair with other Bluetooth-enabled devices such as mobile phones, tablets etc.
2. Turn on the Bluetooth function on your mobile phone or tablet and search device name. After pairing and connection, you will hear a sound from the speaker, and the Bluetooth icon will appear on the LED screen.
3. Playing music on your mobile phone or tablet through the CD player's speakers. (The CD player only works as a Bluetooth receiver, and can not pair with Bluetooth speakers.)
4. Press the VOL+ or VOL - button to adjust the volume. The mobile phone or tablet PC's volume control also impact the overall volume level. Please adjust that as well if necessary.

⑥ A-B Repeat Function:

In CD mode, the A-B Repeat function enables playback to a specific section repeatedly by setting the start point (A) and end point (B) for the section.

1. Press A-B button on the remote control to set the start point (A) while playing.
2. Press A-B button on the remote to set the end point (B) while playing.
3. Then the specified section from A to B will be played back repeatedly.
4. Press A-B button again to exit AB repeat.
5. Note: A-B Repeat function only works in CD and USB mode

⑦ Repeat(Repeat 1, Repeat All, Shuffle, Normal)

In CD mode, press the REPEAT button on the remote control to change the repeat mode. The LED screen will show "ONE" "ALL" "SFL" "OFF" for Repeat 1, Repeat All, Shuffle, Normal mode correspondingly.

⑧ SD Mode Instructions

1. Plug a TF card into the CD Player's TF card port.
2. Press the MODE button on the player or on the remote control to switch to SD mode.
3. The CD Player will read the audio files in the TF card and start to play automatically.

BACKGROUND LIGHT

CD mode: Green & Blue light


USB mode: Green flashing light

SD mode: Green flashing light

FM mode: Purple light



LINE/AUX mode: Yellow light

Bluetooth mode: Blue light

NOTE: It can be turned off by press sleep button 



TIME SETTING

For example: set the time 07:30



Press the time button  on the remote control, and the time will show up on the LED screen, then press left, right, up and down buttons to set the time 07:30 and press the time button  again to confirm the setting.

TIMER SWITCH SETTING

For example: set the time 07:30 to turn on the player

Press the time ON button  on the remote control, and the time 00:00 will show up on the LED screen, then press left, right, up and down buttons to set the time 07:30 and press the time ON button  again to confirm the setting.

For example: set the time 07:30 to turn off the player

Press the time OFF button  on the remote control, and the time 00:00 will show up on the LED screen, then press left, right, up and down buttons to set the time 07:30 and press the time OFF button  again to confirm the setting.

SLEEP FUNCTION

Press the sleep button on the remote control, then the sleep function is activated, and the main display light will be off; press again the sleep button to resume.

WARNING:

1. Never use chemicals, such as record sprays, anti-static sprays, benzene or thinners to clean the CD. These chemicals can damage the disc surface permanently.
2. To avoid serious scratches on CD, keep them in the cases after using. Scratches can cause the laser pick-up skipping in the playing. Do not place stickers or write anything on the disc.
3. Never touch the laser of the CD player. Keep it in package when not in use to prevent from dust.
4. If the player is unable to scan discs properly, use a standard commercially available cleaner to clean the laser optics. Other cleaning methods may damage the laser optics.

TROUBLE SHOOTING

1. Cannot be turned on.

Reason1: Pull Switch is not turned on.

Solution1: Please check if the pull switch is powered on. The device can only be turned on when the pull switch is powered on; the remote control can not turn on the device.

Reason2: The player is damaged.

Solution2: Please contact us or ask a professional for repairing.

2. Cannot read discs.

Reason1: The disc is installed incorrectly.

Solution1: Make sure the label side of the disc is facing up; ensure the disc is inserted fully into the player.

Reason2: The disc cannot be recognized.

Solution2: The player is not compatible with the disc format.

Reason3: The disc is dirty or damaged.

Solution3: Make sure the disc is not heavily scratched or damaged; wipe the disc gently from the center radially out to the edge with a clean & soft cloth; try another new disc to check if the disc is defective.

Reason4: The loader is dirty.

Solution4: Wipe the laser gently with a degreasing cotton swab. Note: DO NOT TOUCH THE LASER WITH YOUR HANDS.

3. Remote control does not work.

Reason1: The insulation sheet is not removed.

Solution1: Check if the insulation sheet is removed from the battery slot.

Reason2: The remote control is out of power.

Solution2: Check if the remote control battery is running out. Change the battery and try again.

Reason3: The remote control is too far from the CD player.

Solution3: Make sure the remote control is in the range of a reasonable distance (within 6 meters).

4. Noisy and screaming when it plays.

Reason1: The disk may have been used for too long time, so the disk is not smooth.

Solution1: Make sure the disc is not heavily scratched or damaged; wipe the disc gently from the center radially out to the edge with a clean & soft cloth; try another new disc to check if the disc is defective.

Reason2: If there is a hiss sound inside the earphone, it may be caused by scratching of the disc.

Solution2: Please change to another disc, and do not use the old one again to prevent the laser damage.

5. No sound output.

Reason1: Low volume when it's switched to the FM mode.

Solution1: Please volume up.

Reason2: Wrong operation.

Solution2: Follow the manual instruction when operating.

Reason3: The environment temperature changes hugely, and causes water mist on the laser.

Solution3: Try again after setting the player aside for one hour.

FCC Caution.

(1)§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.