


Label & Location

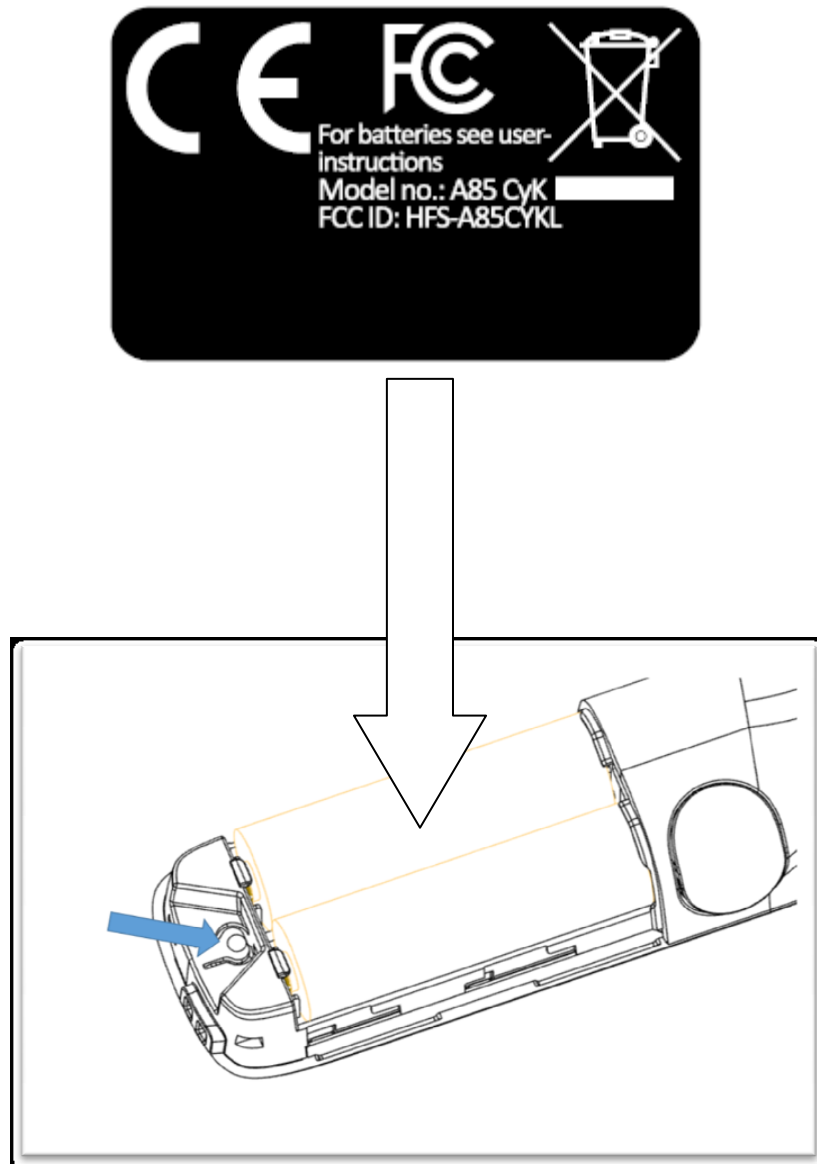

The Label stick inside the battery tank recess, which must be seen when remove the battery cover before using it.