




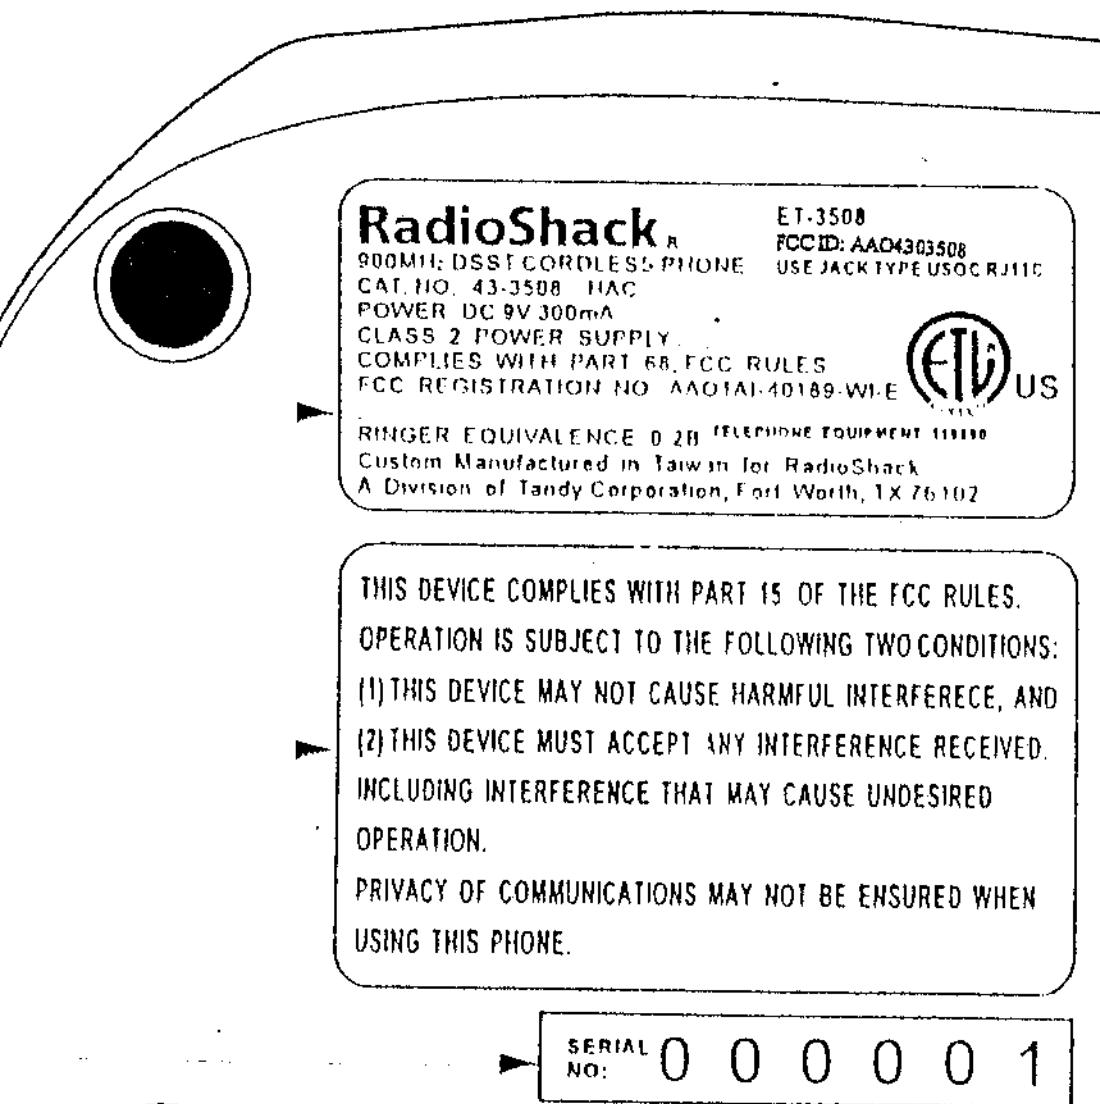

B/S LABEL POSITION DRAW:  
Scale:1/1

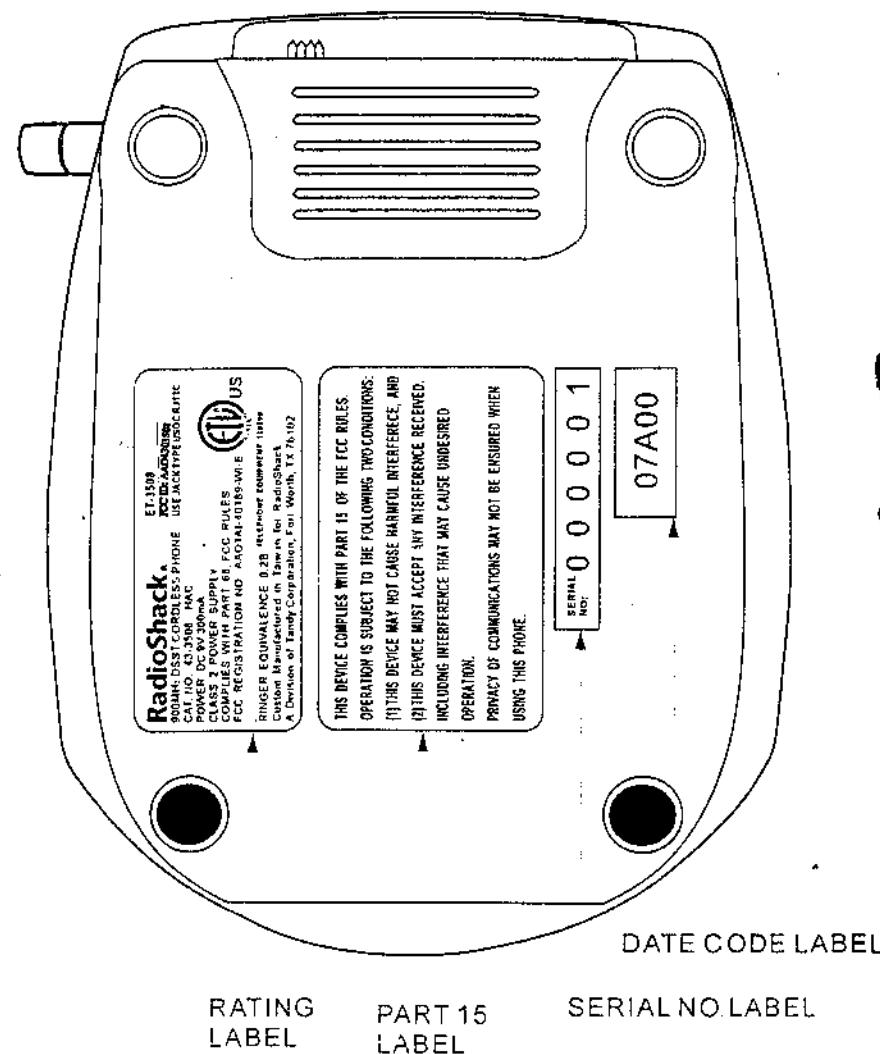

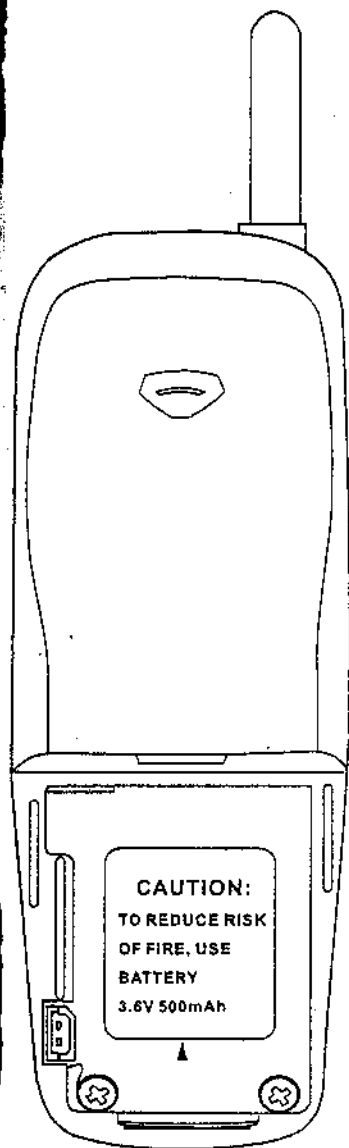

CAUTION LABEL




THIS TELEPHONE'S BATTERY  
IS NOT YET CONNECTED OR  
READY TO USE!

Before you use the phone, follow the directions  
in the owner's Manual to:


1. Open the handset's battery compartment,  
put in the supplied battery, then connect it  
(if necessary).
2. Hook up the phone and plug it in.
3. Put the handset on the base and let the battery  
charge for at least the amount of time  
shown in the Owner's Manual.

Printed in Taiwan

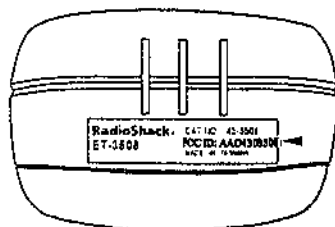

FCC ID LABEL

H/S LABEL POSITION  
Scale: 1/1

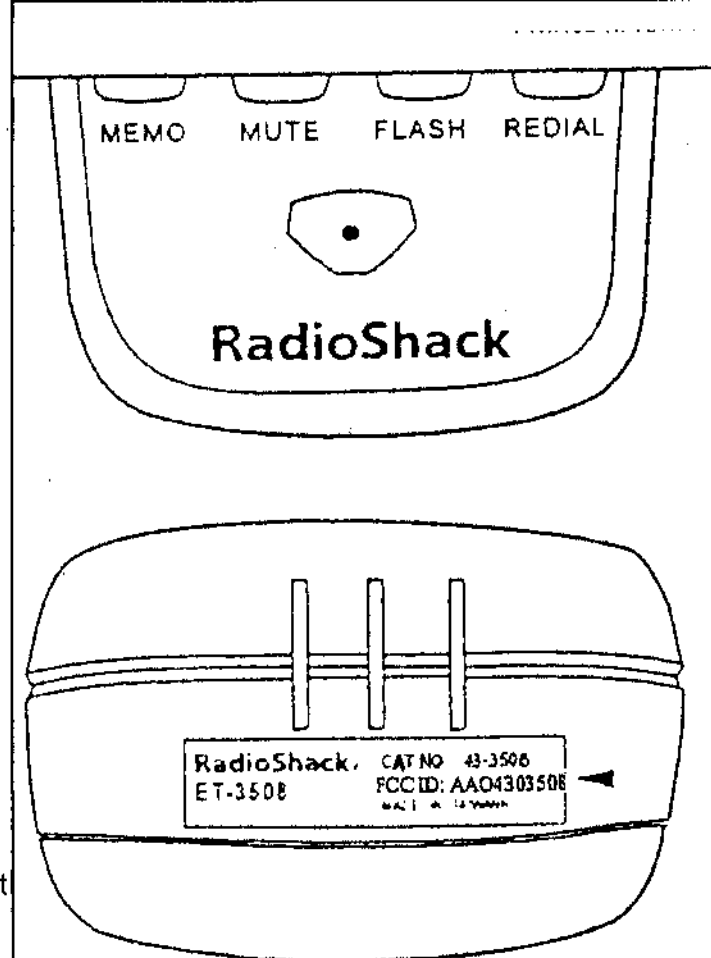

MEMO MUTE FLASH REDIAL

RadioShack

RadioShack, CAT NO 43-3508  
ET-3508 FCC ID: AAO4303508