

Instructions for use Caution I + IPrevious /Volume-Button Please avoid using abrasive cleaners when cleaning this product. Next/Volume+ Button This device complies with Part 15 of the ECC Rules. Operation is subject to the Short press for vioume -, following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation Short press for volume +, Long press for previous song. Keep this product away from heat sources, such as cooking stoves or open Long press for next song. This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause Sunlight Exposure: 1 (1) 1 [•] Avoid prolonged exposure of this product to direct sunlight. ON/OFF Safe Disposal: Indicator light and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device of fand on, the user is encouraged to try to correct the interference by one or more of the following Long press for 3 seconds to turn on/off; Never dispose of this product by incineration to prevent the risk of explosion. 1. Charging status: the red light will be constant on; Short press to switch BT/AUX/USB mode; Modification Warning: Double press to enter/exit TWS mode Do not attempt to disassemble or modify this product, as it contains no user-serviceable components. --Reorient or relocate the receiving antenna. --Increase the separation between the device and receiver. --Connect the device into an outlet on a circuit different from that to which the Weather Protection: 1 > 1 receiver is connected. --Consult the dealer or an experienced radio/TV technician for help Storage and Long-Term Care: Play/Pause If you intend to store this product for an extended period, store it in a dry Short press to play/pause; Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment Short press to answer/end phone call; when incoming call, environment, and charge the headset at least once a month to maximize its long press to reject; lifespan. Keep it away from extreme temperatures and dust Under BT mode, long press to activate voice assistant; Under BT mode, press 2 times to redial last number Under BT mode, press 4 times to disconnect bluetooth Under BT mode, please disconnect speaker first, then press 5 times to clear Bluetooth pairing information 05 03 04

Size:65*85mm折页