

EE5117 – Wireless Headphones

Instruction manual

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed. Children aged and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the product.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This product contains no user serviceable parts.

Keep the product and USB cable out of the reach of children.

Keep the product and USB cable away from heat or sharp edges that could cause damage.

Keep the product away from heat sources, direct sunlight, humidity, water and any other liquid.

Do not operate the product with wet hands.

Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product.

Do not leave any objects susceptible to magnetism (cash cards, floppy disks with magnetic coding, etc.) near the product.

Do not leave the product unattended whilst connected to another device.

Do not use the product for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not play music at excessive volume levels as damage to hearing and/or the equipment may occur.

It is imperative to unplug the USB cable after the product has been used, before it is cleaned and whilst being repaired.

This product is intended for domestic use only. It should not be used for commercial purposes.



To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

Warning: Keep the product away from flammable materials.

Battery Safety

In the event of a battery and cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Do not expose cells or batteries to heat or fire.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not dispose of exhausted batteries in household waste.

Once the batteries have been exhausted, dispose of the product at a local recycling station.

Contact the local government offices for further details. This product is fitted with a 3.7 V 300 mAh li-ion rechargeable battery (non-removable).

UP Global Sourcing UK Ltd. hereby declares that this unit is in compliance with the essential requirements and other provisions of directive 2014/53/EU. The declaration of conformity may be consulted at UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK or online at <https://www.intempo.co.uk>

Getting Started

Remove the product from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Wireless Headphones

USB Charging Cable

Instruction Manual

Features [TO MATCH AW]

Description of Parts

1. Play/Pause
2. Hands-free Button/ Mode Button
3. Skip/Volume + Button
4. Skip/Volume – Button
5. LED Indicator Light
6. Micro USB Charging Port
7. Hands-free Microphone
8. TF Card Slot
9. Line in Aux. Input Jack
10. Aux Cable
11. Micro USB charging cable

Instructions for Use

Charging the Battery

The Wireless Headphones are fitted with a 3.7 V 300 mAh li-ion battery. It is recommended that the battery is charged fully before first use; this will take approximately 2–3 hours.

Connect the micro USB end of the USB charging cable into the micro USB charging port on the Wireless Headphones and the other end to a compatible USB port.

Whilst charging, the LED indicator light will illuminate red. Once the battery has charged fully, the LED indicator light will turn off.

Once the Wireless Headphones are fully charged, carefully disconnect both ends of the USB charging cable and store it safely for future use.

Using the Wireless Headphones

Basic Functionality

Turn on the Wireless Headphones by pressing and holding the 'Play/ Pause/ Handsfree' button for approximately 3 seconds.

Adjust the volume of the Wireless Headphones using the 'Skip/Volume +' and 'Skip/Volume –' buttons. To increase the volume, press and hold the 'Skip/Volume +' button. Decrease the volume by pressing and holding the 'Skip/Volume –' button.

Pause the track by pressing the 'Play/ Pause/ Handsfree' button; push it once more to resume playing the track.

To switch to the next track, press the 'Skip/Volume +' button. Play the previous track by pressing the 'Skip/Volume –' button.

Press and hold the 'Play/ Pause' button for approximately 3 seconds to turn off the Wireless Headphones.

Modes

Ensure that the Wireless Headphones are turned on before using any of the following modes.

Bluetooth Mode

Using the Bluetooth mode allows sound from a Bluetooth compatible device to be played wirelessly through the Wireless Headphones.

It can also be used to make use of the Wireless Headphones as a hands-free device for making phone calls whilst on the go.

To use the Bluetooth mode, the Bluetooth compatible device must first be paired with the Wireless Headphones.

Pairing with a Bluetooth Compatible Device

STEP 1: Turn on the Wireless Headphones by pressing and holding the 'Power/ Mode' button for approximately 3 seconds.

The LED indicator light will flash blue and red alternately, signalling that the Wireless Headphones are ready to be paired with a Bluetooth compatible device.

STEP 2: Search for the Wireless Headphones using a Bluetooth compatible device. Select 'EE5117' to connect and pair to them.

STEP 3: Once a connection has been made, the LED indicator light will remain solid blue to signal that the Wireless Headphones are now paired with the Bluetooth compatible device.

Listening via a Bluetooth Compatible Device

Once the Bluetooth compatible device has been paired with the Wireless Headphones, sound can be controlled using either the Wireless Headphones or the relevant controls on the Bluetooth compatible device.

Making Phone Calls via a Bluetooth Compatible Device

Once the Bluetooth compatible device has been paired with the Wireless Headphones, phone calls can be made.

STEP 1: Using the Bluetooth compatible device, dial the number to be called and select the Bluetooth/hands-free option. The built-in microphone on the Wireless Headphones will now act as a hands-free device.

STEP 2: To connect or disconnect a call using the Wireless Headphones, press the 'Play/ Pause/ Handsfree' button. To reject an incoming call, press and hold the 'Play/ Pause/ Handsfree' button.

STEP 3: The volume of the phone call can be controlled using either the Wireless Headphones or the Bluetooth compatible device.

NOTE: To redial the last number called, press the 'Play/ Pause/ Handsfree' button twice.

Unpairing or Removing a Bluetooth Compatible Device

To unpair or remove a Bluetooth compatible device from the Wireless Headphones, turn off the Bluetooth function on the Bluetooth compatible device or unpair through the device's settings.

The Wireless Headphones can now be paired with a new Bluetooth compatible device.

TF/ Micro SD Card Mode

To use TF/Micro SD mode, insert a TF/Micro SD card (not included) into the TF/Micro SD card slot. The speaker will automatically change to TF/Micro SD mode.

[3 MM CAP HEIGHT, KEY LINE BOX]

Note: Once connected, sound can be controlled using the controls on the Wireless Headphones.

The Wireless Headphones will only recognise MP3 audio files; if other files are present on the TF/Micro SD card, this may prevent the Wireless Headphones from playing.

Aux. Mode

Using the Aux. mode allows sound from a connected device to be played through the Wireless Headphones.

To use Aux. mode, the compatible audio device must first be connected via the line-in aux cable.

Note: The LED indicator light will remain unlit during use of the Aux. mode. Once an Aux. in cable has been removed from the Wireless Headphones, they will automatically turn off.

Care and Maintenance

Wipe the Wireless Headphones with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not use any abrasive cleaning solvents to clean the Wireless Headphones

Do not expose the Wireless Headphones to extremely high or low temperatures

Do not drop the Wireless Headphones

Do not attempt to disassemble the Wireless Headphones

Do not dispose of the Wireless Headphones in a fire as it will result in an explosion.

Specifications

Product Code: EE5117

Bluetooth Version: 5.0

Wireless Distance: Up to 25m*

Driver Size: 40 mm

Impedance: 32 Ω

Sensitivity: 92 dB

Frequency Response: 20 Hz-20 kHz

Bluetooth Frequency: 2.4 GHz
Charging Voltage: 5 V DC USB
Battery: 3.7 V 300 mAh

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Statement:

"This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help