

**FCC ID: L5C0614RX**

**0614-0**

## **Jumbo Wall Clock with Remote Sensor**

### **TO SET THE TIME**

1. Slide the selector to **TIME SET**. This causes the hour and minutes digits to flash on the display.
2. Press **HOURL** to increase the hour digits and **MIN** to increase the minute digits. Holding down either button changes its setting at high speed. Though the seconds are not displayed, they reset to 00 when you press **HOURL** or **MIN**.
3. After you set the time, change the selector to **NORMAL**. Press **12/24** to switch between 12-hour and 24-hour format.

### **TO SET THE DATE**

1. Slide the selector to **DATE SET**. This causes the year, month and date digits to flash on the display.
2. Press **MONTH** to increase the month digits, **DATE** to increase the date digits. **YEAR** to increase the year digits. Holding down either button changes its setting at high speed.
3. After you set the date, change the selector to **NORMAL**.

### **THERMOMETER FUNCTIONS**

- A built-in sensor measures temperature and shows the measured value on the display. The readout from the temperature sensor can also be switched between Celsius (°C) and Fahrenheit (°F).
- Above range the display shows **HI.**, below range the display show **LO.**

### **SWITCHING BETWEEN CELSIUS AND FAHRENHEIT**

Push **°C/°F** to select either Celsius (°C) or Fahrenheit (°F).

### **REMOTE SENSOR**

1. The Unit Code must set to 1.
2. Press **TEST** button once, the Sensor will detect temperature immediately.
3. If the LED flash repeat every one second, that means the battery need replace.

### **REMARK**

- \* User can not modify this product.