

User Manual

Remote Control

1.1

Key Overview

Top



- 1 - Standby / On
To switch the TV on or back to Standby
- 2 - VOICE microphone
- 3 - **ambilight**
To select one of the Ambilight style
- 4 - Philips TV Collection
To launch Philips TV Collection App
- 5 - YouTube
To open the YouTube App directly
- 6 - Quick Menu
To open the Quick Menu with typical TV functions
- 7 - - EXIT
To switch back to watch TV or to stop an interactive TV application
- 8 - **NETFLIX**
To open the Netflix App directly. With the TV switched on or from standby
 - If you have a Netflix membership subscription, you can enjoy Netflix on this TV. Your TV must be connected to the

Internet

- To open Netflix, press **NETFLIX** to open the Netflix App. You can open Netflix immediately from a TV in standby www.netflix.com

9 - SOURCES

- To open or close the Sources menu
- To pair the remote control to the TV



10 - Google Assistant™


To launch the Google Assistant™

 
Middle

 


- 1 - OK key
To confirm a selection or setting. To open the channel list while watching TV
- 2 - BACK
To switch back to the previous channel you selected
To return to previous menu
To go back to the previous App/Internet page
- 3 - Playback and Record
 - Play , to playback
 - Pause , to pause playback
 - Stop , to stop playback
 - Rewind , to rewind
 - Fast forward , to go fast forward
 - Record , to start recording

4 -  Colour keys
Direct selection of options. Blue key , opens Help


5 -  / navigation keys
To navigate up, down, left or right


6 -  HOME
To open the Home menu

7 -  OPTIONS
To open or close the options menu

Bottom




1 -  TV Guide
To open or close the TV Guide

2 -  Volume
Press + or - to adjust the volume level

3 - Number keys
To select a channel directly

4 - TEXT
To open or close Text/Teletext

5 -  Channel
Press + or - to switch to the next or previous channel in the channel list. To open the next or previous page in Text/Teletext

6 -  Mute
To mute the sound or to restore it

7 - AD
To access the Audio Description and toggle to switch on and off

1.2


Pair Your Remote Control to TV

This remote control uses both Bluetooth and IR (infrared) to send its commands to the TV

- You can use this remote control via IR (infrared) for most operations
- To use advanced operation like voice search and remote control keyboard, you need to pair (link) the TV with the remote control

When you start the initial TV installation, the TV invites you to long press the PAIR key, and by doing so, the pairing will be done


Note

- 1 - Once the remote control has entered pairing mode successfully, the blue LED indicator ring around the microphone on the front side of the remote control starts blinking
- 2 - The remote control must be kept close to the TV (within 1m distance) during pairing in order to ensure success
- 3 - If the TV does not launch the voice control field when press , pairing was unsuccessful
- 4 - It is advisable to wait until the set has fully started up and launched all background processes before pairing mode is entered as the toast message containing further instructions may appear too late, thereby negatively impacting the pairing procedure

Pairing or pairing again

If the pairing with the remote control was lost, you can pair the TV with the remote control again

You can simply long press the PAIR key (approximate for 3 seconds) for pairing

Alternatively, go  Settings > Wireless and networks > Remote control > Pair remote control, then follow the on-screen instructions

A message appears when the pairing is successful.

Remote Control Software

⚙ Settings > Wireless and networks
> Remote control > Remote control info

Once the remote control is paired, you can check the current remote control software version.

⚙ Settings > Wireless and networks
> Remote control > Update remote control software

Check available remote control software for updates.


1.3

Voice Search

You can search for videos, music or anything else on the Internet by simply using your voice. You can speak into the microphone on the remote control.

You need to pair the remote control to the TV before use voice search.

To use Voice:

- 1 - Press  on remote control, the blue light on the remote control lights up and the search field opens, the microphone is active.
- 2 - Speak out what you are looking for with clear pronunciation. You can speak for 10 seconds before the microphone switches off. It might take some time for the results to appear.
- 3 - In the list of search results, you can select the item you want.

1.4

IR Sensor

The TV can receive commands from a remote control that uses IR (infrared) to send

FCC Warning:

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

commands. If you use such a remote control, always make sure you point the remote control at the infrared sensor on the front of the TV.

⚠ Warning

Do not put any objects in front of IR sensor of the TV, it may block the IR signal.

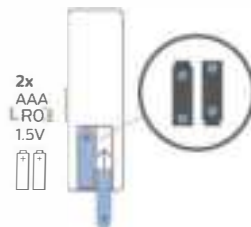
1.5

Batteries

If the TV does not react on a key press on the remote control, the batteries might be empty.

To replace the batteries, open the battery compartment on the back-bottom of the remote control.

- 1 - Slide the battery door in the direction shown by the arrow.
- 2 - Replace the old batteries with 2 Alkaline, type AAA-LR03-1.5V batteries. Make sure the + and the - ends of the batteries line up correctly.
- 3 - Reposition the battery door and slide it back until it clicks.



Remove the batteries if you are not using the remote control for a long time. Safely dispose of your old batteries according to the end of use directions.

For more information, in **Help**, select **Keywords** and look up **End of use**.