

# USER'S MANUAL



**Alpha Numeric Pager**



**SUN TELECOM**  
INTERNATIONAL

# ***T4***

Thank you for purchasing the ***T4*** Pager.

Through its advanced paging technology, the ***T4*** will keep you connected to your important messages-anytime, anyplace.

Please read this manual carefully before using your pager so you can use its functions and capabilities to their fullest.

# CONTENTS

▶ FEATURES	5
▶ DESCRIPTION OF INDICATORS & SYMBOLS	8
▶ CONTROL BUTTONS	11
▶ OPERATION	12
• Installing/Replacing the Battery	12
• Turning the Backlight On/Off	13
• Turning The Pager On	14
• Turning The Pager Off	15
• Main Screen	16
• Function Menu Screen	17
• Inbox Folder Screen	18
• Info Folder Screen	19
• Saved Folder Screen	19
• Reading Messages in each Folder	20
• Reading Previous or Next Message	20

# CONTENTS

▶ <b>FUNCTION MENU</b>	21
• Setting the Time and Date	21
• Setting Alarm	22
• Setting Private Time	23
• Setting Message Alert	24
• Setting Audible ON/OFF	25
• Enabling the Reminder Alert	26
• Low Battery Alert	27
• Locking and Unlocking Messages	28
• Deleting A Message	29
• Deleting All Messages	29
• Moving A Message to the Saved Folder	30
• Setting the Info Slot Alert Type	31

# FEATURES

- ▶ 6 Pocsag
- ▶ 6 Line x 20 Alpha Character Display
- ▶ Up to 20 Inbox Messages
- ▶ 15 Info Message Slots
- ▶ Up to 16 Saved Messages
- ▶ Inbox Message Storage: 6400 Characters
- ▶ Info Message Storage: 19200 Characters
- ▶ Saved Message Storage: 3200 Characters
- ▶ Up to 10 Inbox Messages can be Locked to Prevent Deletion
- ▶ Info History of up to 7 Messages

# FEATURES

- ▶ Battery Status Display
- ▶ One Time or Daily Alarm (User Selectable)
- ▶ Message with Time & Date Stamp
- ▶ Automatic Alert Reset
- ▶ One Beep, Seven Alerts, plus Chirp, Vibe, Vibe and chirp, Silent Options
- ▶ Reminder Alert for Unread Messages (User Selectable)
- ▶ Menu Option to Turn Device ON/OFF
- ▶ New Message Indication (Flashing Icon)

# FEATURES

- ▶ Unread Message Indication
- ▶ Continuous Message Indication (with Icon)
- ▶ Erred Character Indication
- ▶ All or Individual Message Delete
- ▶ Memory Full Indication (with Icon)
- ▶ Message Slot Number
- ▶ Duplicate Message Indication (with Icon)
- ▶ EL Backlight Display
- ▶ Out of Service Range Indication (Optional)
- ▶ Message Retention During Battery Replacement
- ▶ 1 AA Battery
- ▶ Private Time

## DESCRIPTION OF INDICATORS & SYMBOLS

### Indicators



Audio Alert



Vibe Alert



Enabled Alarm



Enabled Private Time



New Page or Unread Message  
Indication



Lock Message



Unlock Message



In Range or Out Range Indication



Full Battery Status



2/3 Battery Status



1/3 Battery Status



Low Battery Status



Message Continuation



Power On



## DESCRIPTION OF INDICATORS & SYMBOLS

### Symbols



Inbox Folder



Info Folder



Saved Folder



Set Time



Set Alarm



Set Alert



Pager Off



Set Private



Enable Reminder



Disable Reminder



Delete All



Delete



Escape



Move to Saved Folder

## DESCRIPTION OF INDICATORS & SYMBOLS

### Symbols



Info Slot (Enabled Alert)



Unread Info Slot (Enabled Alert)



Set Info Slot Alert



Enable Private Time



Disable Private Time



Saved Message



Unread Inbox Message



Read Inbox Message



Read Info Slot



Unread Info Slot



Message Cursor



Set Audible ON



Set Audible OFF

# CONTROL BUTTONS



- Use to navigate through the Function menu and through your messages
- Use to navigate through time, alarm, and, date setting functions




- Use to enter the Function menu mode
- Use to turn the Backlight off
- Use to exit to current Function mode




- Use to turn the pager on and off
- Use to read the received message
- Use to activate your selection
- Use to adjust the time, alarm, and date setting Functions

## Installing/Replacing the Battery

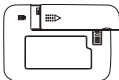

Turn your pager off, hold the pager face down, slide the battery door lock away from the door and open the battery compartment by pressing down with your thumb on the battery door and sliding the battery door in the direction indicated by the arrow on the battery door.

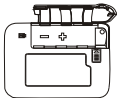



- Lift up the battery door to access the battery.
- Remove the old battery by pulling it towards the end of pager.
- Insert a new AA type battery so the orientation matches the polarity shown in the battery compartment.


If a new battery is inserted within the 30 seconds of removing the old battery, messages will be retained

## Turning the Backlight ON/OFF

The backlight allows viewing of messages in low light conditions.

- To turn the backlight on, press and hold  for 2 seconds
- The backlight will automatically turn off after 10 seconds of no buttons being pressed
- To immediately turn the backlight off, press and hold  for 2 seconds
- If the button is pressed in the dark, the backlight is automatically turned on

## Turning the Pager On

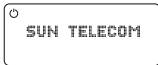

PowerUp Screen

Press the Read button for two (2) seconds to turn the pager on. A start-up screen is momentarily displayed and the pager alerts the currently selected alert-mode (Vibe, Audio, Silent).



Main Screen




Standby Screen






## Turning the Pager Off

 


Off Screen




Time/Date display in Pager Off mode

- Press the  button to display the Function menu
- Press the  or  button to move the cursor on Turn Pager OFF icon
- Press the  button  
*"TURN PAGER OFF?"* is displayed
- Press the  button again to turn the pager off  
The pager is now off and the screen should be blank.

**Note:** If you choose the function key (  ) while the pager is off, the pager will display Pager Off Mode and the time and date. The display disappears after 25 seconds or after you press any of the pager keys.

# OPERATION

## Main Screen

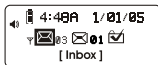

Main Screen

Pressing any of the buttons on the Standby Screen will provide access to the Main Screen.




The Main Screen shows both the current status of message folders (Inbox/Info/Saved) and the time and date.

The Main Screen also displays any activated pager settings on the left hand side.

The numbers to the right of the inbox and info icons indicate the number of unread messages.

When the Main Screen is initially displayed, the Inbox Folder icon is the first icon followed by the Info and Saved icons.

The Inbox Folder is also highlighted. Choosing either arrow button will highlight the other icons.

- Press  or  to move the cursor between Main Screen Folders
- Press  to enter the selected Folder







## Function Menu Screen

The Function Menu provides access to the many features incorporated in the T4.



Function Menu Screen

As you navigate through the Function menu, the Function icon will be highlighted to indicate the current location of the cursor.

- Press  or  to navigate through the Function menu
- Press  to enter the current function
- Press  to exit the Function menu

**Note:** Depending on the pager and whether it has messages, some icons may not display on the pager.


## Inbox Folder Screen



 
Inbox Folder Screen

The Inbox Folder Screen shows information about your Inbox messages.

- Status: Unread, read or locked
- Timestamp: Month/Day
- Preview: First and second line of message

**Note:** The status of an unread message will not change by previewing the message. You must select the Read button (  ) to open and view the message. Only after the message has been opened will it be marked as "read" on your pager.

## Info Folder Screen




Info Folder Screen

The Info Folder Screen shows information about your Info messages.

- Status: Unread or read
- Timestamp: Month/Day
- Preview: First and second line of message

## Saved Folder Screen

 




Saved Folder Screen

The Saved Folder Screen shows information about your Info messages.


- Timestamp: Month/Day
- Preview: First and second line of message

## Reading Messages in each Folder

- Press  or  to move the cursor to the message you want to read
- Press  button to read the message

## Reading Previous or Next Message

- When reading a message, Press  or  button to read the Previous or Next message

**Note:** If the reminder alert is enabled, the pager will give a periodic alert until all unread messages are read. A flashing  symbol on the Stand by screen indicates that there are unread messages on your pager.