 


**SHARPER
IMAGE**

Bluetooth Sound bar


User Guide
SBT2014

In the Box

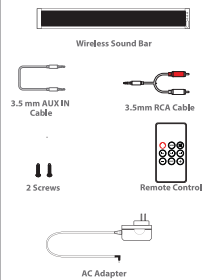


Connecting the AC Adaptor

1. Connect the small end of the AC adaptor to the DC14V port on the side of the speaker.
2. Plug the AC adaptor to an available power outlet.
3. Press the **[POWER]** button to activate the sound bar.

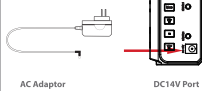

Location of Controls

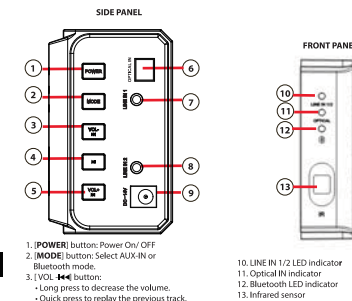

1. **[POWER]** button: Power On/ Off
2. **[MODE]** button: Select AUX-IN or Bluetooth mode.
3. **[VOL]** button:
 - Long press to decrease the volume.
 - Quick press to play the previous track.
4. **[▶|◀]** button: Play and pause music.
5. **[VOL+ ▶]** button:
 - Quick press to increase the volume.
 - Quick press to skip to the next track.
6. Optical In: Audio port
7. LINE IN 1: AUX-IN jack
8. LINE IN 2: AUX-IN jack
9. DC14V jack

10. LINE IN 1/2 LED indicator
11. Optical IN indicator
12. Bluetooth LED indicator
13. Infrared sensor

Mounting the Speaker

1. Measure a width of 32 inches on the wall.
2. Mark the position of the mounting screws on the wall using a pencil.
3. Drill the supplied screws directly into the marks that you have made on the wall and leave approximately 0.3 inch length to hook the Wireless Sound Bar.
4. Put the Wireless Sound Bar onto the mounting screws. Make sure they are firm and stable.



Replacing the Battery

1. Measure a width of 32 inches on the wall.
2. Mark the position of the mounting screws on the wall using a pencil.
3. Drill the supplied screws directly into the marks that you have made on the wall and leave approximately 0.3 inch length to hook the Wireless Sound Bar.
4. Put the Wireless Sound Bar onto the mounting screws. Make sure they are firm and stable.



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Using the Remote

The IR-01 CR2025 battery (included) is protected with a plastic pull tab to prevent battery drain. To remove the pull tab, pull the tab away from the battery compartment. Your remote is now ready for use.


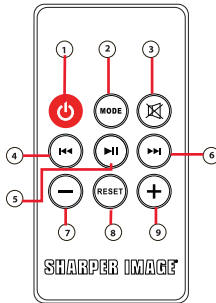


1. **[○]** button
 - Press to place the speaker in "Sleep" mode.
 - Press again to wake the speaker.
2. **[MODE]** button
 - Quick press to switch between BT and AUX modes.
3. **[X]** button
 - Immediately decreases the volume level to 0.
4. **[◀|▶]** button
 - Press to skip to a previous track.
5. **[▶|▶]** button
 - Press once to play music.
 - Press again to pause music.
6. **[VOL-]** button
 - Press to skip to the next track.
7. **[-]** button
 - Quick press to gradually decrease the volume.
 - Press and hold to rapidly decrease the volume.
8. **[RESET]** button
 - Restores default volume settings.
9. **[+]** button
 - Quick press to gradually increase the volume.
 - Press and hold to rapidly increase the volume.

Pairing the Speaker

1. Quick press the **[POWER]** button on the control panel or quick press the **[○]** on the remote to turn the sounds bar on. Use the **[MODE]** button on the speaker or remote to select Bluetooth mode. A tone will be heard and the Bluetooth indicator will quickly flash GREEN. The speaker is now in pairing mode.

2. Turn on your mobile device's Bluetooth function and make it discoverable. (Consult your mobile device's documentation to connect or setup a Bluetooth device).
3. In discoverable mode, your phone is searching for nearby Bluetooth devices. When your mobile device finds the speaker, select "SBT2014" from the list of discovered devices.

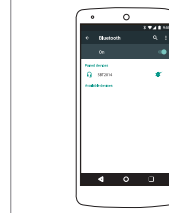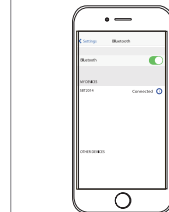

1. Connect one end of the optical audio cable (not included) to the **LINE IN 1** or **LINE IN 2** port on the left side of the speaker's control panel. The **LINE IN** LED indicator will illuminate BLUE for LINE IN 1. If there is a device connected to **LINE IN 2**, press the **[MODE]** button again on the speaker or the remote. The LED indicator will now turn RED.
2. Insert the other end of the 3.5mm auxiliary cable into the headphone port on your smartphone, tablet or MP3 player.
3. Open the media player on your mobile device and press "Play" to begin music playback.

NOTE: When a device is connected to the speaker's LINE IN jacks, you can use your device's media player to control the volume, repeat or skip music tracks. When disconnecting the auxiliary cable, use the **[MODE]** button to return to Bluetooth mode.

Some older mobile devices may ask for a password before connecting to a Bluetooth device. Type 0000 or 1234 and press YES or OK to pair the two units.

After a successful pairing, a tone will be heard and the LED indicator light will remain BLUE. When music is playing, the Bluetooth indicator light will flash GREEN slowly.

Use the **[○]** button on the remote to turn the speaker on. Quick pressing the **[MODE]** button until **OPTICAL** is selected.

Playing music

1. Quick press the **[POWER]** button on the speaker or the **[○]** button on the remote to turn the speaker on. Quick press either button again to turn off.

2. Controlling Volume From the Speaker:
 - Long press the **[VOL-]** button on the speaker to increase the volume.
 - Long press the **[VOL+]** button on the speaker to decrease the volume.
3. From the Remote:
 - Quick press the **[VOL-]** button to gradually decrease the volume. Long press to rapidly decrease the volume.
 - Quick press the **[VOL+]** button to gradually increase the volume. Long press to rapidly increase the volume.

4. **Playing Music:**
 - Quick press the **[▶|▶]** button on the speaker to replay the previous track in your playlist.
 - Quick press the **[▶|▶]** button to skip to the next track in your playlist.

5. Quick press the **[▶|▶]** button on the speaker or remote to pause the music. Press the **[▶|▶]** button again to resume music playback.


Using the Line-In Jacks

1. Connect one end of the 3.5mm auxiliary or the 3.5mm to RCA cable to the **LINE IN 1** or **LINE IN 2** port on the left side of the speaker's control panel. The **LINE IN** LED indicator will illuminate BLUE for LINE IN 1. If there is a device connected to **LINE IN 2**, press the **[MODE]** button again on the speaker or the remote. The LED indicator will now turn RED.
2. Insert the other end of the 3.5mm auxiliary cable into the headphone port on your smartphone, tablet or MP3 player.
3. Open the media player on your mobile device and press "Play" to begin music playback.

NOTE: When a device is connected to the speaker's LINE IN jacks, you can use your device's media player to control the volume, repeat or skip music tracks. When disconnecting the auxiliary cable, use the **[MODE]** button to return to Bluetooth mode.

Using an Audio Optical Cable

1. Connect one end of the optical audio cable (not included) to the **LINE IN 1** or **LINE IN 2** port on the left side of the speaker's control panel. The **LINE IN** LED indicator will illuminate BLUE for LINE IN 1. If there is a device connected to **LINE IN 2**, press the **[MODE]** button again on the speaker or the remote. The LED indicator will now turn RED.
2. Insert the other end of the optical cable to the **Optical/Digital Out** port on your TV or other external device.

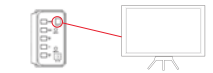

Quick press the **[POWER]** button on the speaker or the **[○]** button on the remote to turn the speaker on. Continue pressing the **[MODE]** button until **OPTICAL** is selected.

Safety instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not use this apparatus on any heat sensitive materials such as radiators, heat registers, stoves, or other appliances including amplifiers that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cord, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/appliance combination during lightning storms or when unused for long periods of time.



13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. **WARNING:** The main plug is used as a disconnect device; the disconnect device shall remain readily operable.
16. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall be protected from dripping or spraying, and objects filled with liquids, such as vases, shall not be placed on apparatus.
17. **WARNING:** The equipment is a Class B or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



Additional warnings and precautions

Battery shall not be exposed to excessive heat such as sunshine, fire or the like. Changes of ambient temperature may result in hazardous conditions. Replace only with the same or equivalent type.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: Do not place this unit directly onto furniture surfaces with any finish or on any other surface which may be damaged by the heat of the unit. Do not place this unit on any surface that may cause marks or staining where they make. We recommend using a protective barrier such as a cloth or a piece of foam between the unit and the surface to reduce the risk of damage and/or staining.

WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying error, be careful to move away from any fluorescent lighting, as it may be the cause.

WARNING: Shock hazard - Do Not Open.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Limited Warranty

90 Days Limited Warranty
In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:
• Call the Customer Support number located below, or go to our website portal to receive an RMA number.
• Provide proof of the date of purchase within the package (dated bill of sale).
• Prepay all shipping costs to the authorized service center, and reimburse to insure your return.
• Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
• Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:
Southern Telecom, Inc.
Attention: Customer Service (2nd Floor)
14-C 23rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
Phone: 1-877-768-6861
Monday-Friday 9AM-5PM (EST)
www.southerntelecom.com
Click on "Product Support"

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:
THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. NO VERBAL, OR WRITTEN INFORMATION GIVEN BY AT, INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THE WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THE WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitation on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Sharper Image® name and logo are registered trademarks. Manufactured and marketed by Southern Telecom Inc. © Sharper Image. All Rights Reserved.

SHARPER IMAGE