

## ALL RIGHTS RESERVED

---


©2014. All rights are reserved. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners.

While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause. We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the device, device features/specifications or any of its parts without prior notice.

Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are not affiliated with us, and we do not endorse or assume liability for them. If you access such sites, take precautions for security or content.

The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included/downloaded in the product, whether included during installment, assembly, shipping or any other time in the delivery chain or otherwise and in any way acquired by you. To the extent permitted by

applicable law(s), we do not warrant that any our software will meet your requirements, will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted or error free or that any defects in the software are correctable or will be corrected.

 *User's Manual is provided just to guide the user about the functionality of the device. This does not seem to be any certificate of technology. Some functions may vary due to modifications and up-gradations of software or due to printing mistake.*

## SAFETY PRECAUTIONS

---

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. People having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/ headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.

- Use cell phone when the signal quality is good.

### Notice:

- Do not dismantle the device or accessories otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.
- Use only original batteries and charging devices.
- Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to mis-operation, poor signal or power cut, etc.
- All the screens in this manual are for reference only, and some contents actually displayed may depend upon the presetting of the service provider or the network operator, or the SIM card. If any functions referred to in this manual are different from those of your device, please follow your device.
- Do not put use it in a place with flammable gas such as a petrol pumps. The temperature recommended for using the device is 5-35°C. Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.



***If your phone or any of its accessories do not function normally, then please visit your nearest authorized service facility. The qualified***

***personnel will assist you, and if necessary, will arrange for the service.***

# TABLE OF CONTENTS

---

<b>ALL RIGHTS RESERVED</b> .....	<b>1</b>
<b>SAFETY PRECAUTIONS</b> .....	<b>3</b>
<b>TABLE OF CONTENTS</b> .....	<b>6</b>
<b>1. UNDERSTANDING YOUR DEVICE</b> .....	<b>8</b>
1.1 GENERAL INFO .....	8
1.2 DEVICE OVERVIEW .....	9
2.1 INSTALLING CARDS & BATTERY .....	11
2.2 POWERING ON/OFF THE DEVICE.....	13
<b>3. BASIC OPERATIONS</b> .....	<b>15</b>
3.1 CALLING.....	15
3.2 MESSAGING .....	16
3.3 CONTACTS .....	18
3.4 EMAIL .....	19
3.5 BROWSER .....	19
<b>4. HOME SCREEN</b> .....	<b>21</b>
4.1 STATUS BAR .....	21
4.2 CUSTOMIZING SCREEN.....	22
<b>5. MULTIMEDIA</b> .....	<b>24</b>
5.1 FILE MANAGER .....	24
5.2 CAMERA.....	24
5.3 SOUND RECORDER .....	24
5.4 GALLERY .....	24
5.5 FM RADIO .....	25
<b>6. NETWORK</b> .....	<b>26</b>
6.1 WI-FI .....	26
6.2 3G .....	26

6.3 BLUETOOTH .....	27
<b>7. SETTINGS.....</b>	<b>28</b>
7.1 SIM MANAGEMENT .....	28
7.2 WIRELESS & NETWORKS.....	28
7.3 AUDIO PROFILES.....	28
7.4 DISPLAY .....	29
7.5 STORAGE .....	29
7.6 BATTERY .....	29
7.7 APPLICATIONS.....	29
7.8 LOCATION ACCESS.....	30
7.9 SECURITY.....	30
7.10 LANGUAGE AND INPUT .....	31
7.11 BACKUP & RESET .....	31
7.12 ACCOUNTS.....	31
7.13 DATE AND TIME .....	31
7.14 SCHEDULE POWER ON/OFF .....	32
7.15 ACCESSIBILITY .....	32
7.16 ABOUT PHONE.....	32
<b>8. APPLICATIONS &amp; UTILITIES .....</b>	<b>33</b>
8.1 CALCULATOR.....	33
8.2 CLOCK.....	33
8.3 GMAIL.....	33
8.4 PLAY STORE .....	34
<b>9. SPECIFICATIONS .....</b>	<b>35</b>
<b>ENVIRONMENTAL CONCERN .....</b>	<b>36</b>

# 1. UNDERSTANDING YOUR DEVICE

---

## 1.1 GENERAL INFO


---

SP4 is a multi SIM phone that encloses features, such as **Android version 4.4.2, Wi-Fi, 8 MP digital Camera**.etc. This phone is provided with two SIM slots for two different SIM cards. The SIM card inserted in the slot1 is called SIM1, and the other one in the slot2 is known as SIM2. You can select to operate SIMs as per your personal and professional needs.



## 1.2 DEVICE OVERVIEW

---

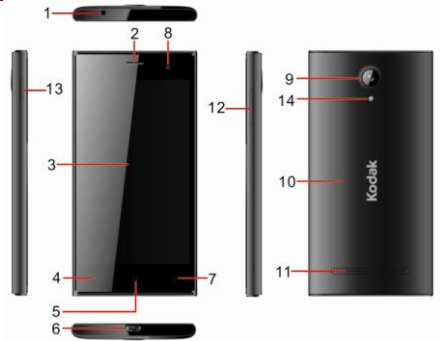

### Position of Keys

1. Earphone Jack	2. Earpiece
3. Touch Screen	4. Menu Key
5. Home Key	6. USB port
7. Back Key	8. Front camera lens
9. Camera lens	10. Battery cover

---

11. Speaker

12. Volume key

13. Power Key

14. Strobe

---

## 2. GETTING STARTED

---

### 2.1 INSTALLING CARDS & BATTERY


---

Please switch off your device before inserting or removing the battery/ SIM card or memory card.

#### **Installing SIM Card and Battery**

Your device is provided with two SIM slots for two different SIM cards. In order to install battery and SIM card in the device, please follow the steps mentioned below:

- Remove the back cover of the device.
- Hold the device with the front facing downwards and pull the battery cover.
- Insert the SIM cards in the device.
- Attach the battery.
- Push the battery cover until it clicks into place.

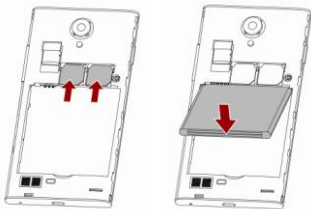

## Installing Memory Card

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage. Please follow the steps mentioned below to install the memory card in the device:

- Remove the battery cover.
- Slot the T-Flash memory card into the slot.
- Fix the battery cover until it mount properly into place.



Note: T-Flash card is hot-swappable.

### **Charging the Battery**

The device prompts a warning tone and message stating insufficient battery when the battery power is low. Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Charging.....  Fully Charged..... 

You should fully charge the battery before using the device for the first time.

## **2.2 POWERING ON/OFF THE DEVICE**

---

### **Turning On the Device**

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press and hold the Power Key to turn on the device.
- The first screen that appears is known as the home/idle Screen.
- Drag the lock icon sideways to unlock the screen.
- If the screen turns off, then short press the Power Key to turn on the display.

### **Turning Off the Device**

- Press and hold the Power Key for 3 seconds.
- A pop-up window appears, select Power off.
- Select OK to confirm.

## 3. BASIC OPERATIONS

---




### 3.1 CALLING

---

#### To Make Calls



If the icon  appears on the screen, then you can make or receive calls.

To make a call, please follow the steps mentioned below:

- Enter the Main Menu, select Phone.
- Enter the phone number using the on-screen keyboard.
- Tap  to delete a wrong number. Tap and hold it to erase the entire number.
- After entering phone number, tap .
- To end the call, tap .

#### Answer/Reject an Incoming Call

When you receive an incoming call, a notification message appears on the screen. In order to accept the

call, drag  towards right. If you wish to reject the call, drag  towards left.



#### Other Options during the call

##### To put a call on hold

If you are having a call conversation and there is another incoming call, accept the call and the first call will be held

on automatically.

### **To set up conference calls**



- You are already having a call conversation.
- Select  Add Call to make another call. .
- After connecting to the second call, select  merge calls to set up the conference call.

## **3.2 MESSAGING**

---

Your device features, sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service). Go to Main Menu and then select Messaging.

### **Creating a Message**

- Tap  Compose new message.
- In Type name or number field; enter the recipient's name or phone number.
- Type message in the Type text message field.
- Tap  to Send.


### **Receiving and Managing Messages**

When you send and receive messages to or from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.


### **To reply to a text message**

- Enter the Main Menu, select Messaging.



- Select a message thread to open it.
- Select Type text message to enter your message.
- Tap  to Send.

### **To forward a text message**

- Enter the Main Menu, select Messaging.
- Tap to view a message thread.
- Press and hold a message to view the message options.
- Select Forward.
- In the Type name or number field, enter the recipient's name or phone number.
- Tap  to Send.

### **To delete all text messages**

- Enter the Main Menu, select Messaging.
- Tap Menu > Delete all threads.
- All the messages will be deleted.

### **To copy message text**



You can use this function to copy the text from a message to a new message you are composing.

- Enter the Main Menu, select Messaging.
- Select a message thread to open it.
- Press and hold the message to view the submenu options.
- Select 'Select text', and then copy the message you want.
- Go to Compose new message.

- Press and hold Type text message.
- Select 'Paste' to paste the copied text to your new message.

## MULTIMEDIA MESSAGE

A Multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS, please follow the steps mentioned below:

- Enter the Main Menu, select Messaging.
- Tap  Compose new message.
- Select Menu > Add subject.
- In the Type name or number field, enter the recipient's name or phone number and enter the Subject.
- To insert a picture or video file, etc, tap .
- To insert text, tap Type text message, and then enter your message.

## 3.3 CONTACTS

---

Contacts refer to the phonebook that lets you store names, phone numbers, e-mail addresses and other information. You can save information such as name, picture, phone numbers, e-mail addresses, etc for each contact listed in your Contacts menu.

### To add a Contact

- Enter the Main Menu select Phone.
- Enter number > Tap Menu key > New contact.

- Select the storage
- You can enter contact information such as name, phone number, email address etc, if you select storage as “Phone contact”.
- Tap Done to save the contact.

**Tip:** Or enter the Main Menu and select Contacts,

tap  create New contact.

### To import contacts

- Enter the Main Menu select Contacts.
- Tap Menu key > Import/export.
- Select to import contacts from Phone contact/ Phone storage/ SIM Card/ SD Card.
- Select a particular source to import the contacts from.
- Select Next.
- Select the destination, such as Phone storage to copy contacts to.
- Select Next.
- Select “Select All” to import all contacts or mark the required contacts.
- Select OK.

## 3.4 EMAIL

---

Your device allows you to compose, read and send emails.

## 3.5 BROWSER

---

Browser is a tool which enables you to access the Internet.

## 4. HOME SCREEN










---

From Home screen, you can quickly access common features, view notifications of missed calls, received messages and check connection status.

### 4.1 STATUS BAR

---

The Status bar icons indicate different types of information. The table below lists various icons that might appear on the status bar of the device.

	Network intensity of SIM card 1 or SIM card 2
	Battery level of the device
	New short message
	Missed call notification
	Headset is plugged in
	USB connected
	Wi-Fi is connected.
	Bluetooth is activated
	GPRS network is in use.

## 4.2 CUSTOMIZING SCREEN

---

The device features a touch screen with idle displays and access to utilities at just one-touch. So you can swipe right or left to navigate through various screens accessing your favorite features without entering the main menu. Each screen can be customized by adding various widgets, shortcuts and folders.

### **Shortcuts**

In order to add a shortcut on the screen: Long press on the desired application to add on the screen.

### **Widgets**

Save time with live updates right on Home screen and get all of your personalized updates at one place.


### **Setting the wallpaper**

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.

- In the idle mode, tap Menu Key > WALLPAPER.
- Set up your home screen's wallpaper.

### **Rotating Your Mobile Phone Screen**

The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.

- On the Home screen, tap  > Settings > Display > Auto-rotate screen to disable this function.

## 5. MULTIMEDIA

---

Your device features various multimedia options, such as Music Player, Camera and Video Player.

### 5.1 FILE MANAGER

---

You can browse, open and manage the data saved in the Device and Memory card by accessing the File Manager sub-menu. The device provides a certain space for users to manage files and supports the T-Flash card. You can use the file browser to conveniently manage various directories and files on the T-Flash card.


### 5.2 CAMERA

---

Your device is equipped with camera and camcorder, which enables you to capture photos and videos.

### 5.3 SOUND RECORDER

---

You can use the sound recorder to record sounds and also select to save the recordings in your phone. Tap  select Application tab > Sound Recorder. When in the sound recorder interface, press menu key to select Recording mode.

### 5.4 GALLERY

---



You can view the captured images, recorded video clips, and downloaded images in the Gallery.




The picture folder and video folder will be displayed.

Select to view the camera pictures or camera videos. The images or videos will be displayed in thumbnails.

## 5.5 FM radio

---

You can use your phone to listen to FM radio stations once the original Headset is plugged into the connector. Please press the side key to adjust music volume.

Tap  to exit FM radio function. Tap the (   ) to search the channels.


## 6. NETWORK

---

### 6.1 WI-FI

---

Connect to a wireless network to browse Internet.

- Enter Main Menu and tap Settings.
- Tap to activate Wi-Fi.
- Tap  Wi-Fi > Network notification to start detecting networks. The available networks will then be listed.
- Tap Add Wi-Fi network to add a connection.

#### **Note:**

- If the device before the connection is successful, the equipment information will be saved in the pop-up window selected connection, select forget to remove device information.
- If the device does not encrypt, select connection in the pop-up window to connect.
- If the device is encrypted, the pop-up window will appear, enter the password.
- Network connection is successful; the status bar icon appears Wi-Fi connection.

### 6.2 3G

---

The device supports WCDMA protocol. Please make sure that you device is turned off, then insert or remove the SIM card.

## 6.3 BLUETOOTH

---

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

- Access Settings by entering the main menu
- Check Bluetooth to turn on Bluetooth
- To make your device discoverable, select bluetooth settings and check discoverable.

## 7. SETTINGS

---

Select Settings to view and adjust the settings of your device. The Settings menu is categorized into: Wireless & networks, Audio profiles, Display, Storage, Battery, Apps, Location, Security, Language & input, Backup & reset, Accounts and System.

### 7.1 SIM MANAGEMENT

---

Your device supports two SIM cards, which can be managed by accessing the SIM Management sub-menu. You can view/change the roaming settings of the cards using this menu.



### 7.2 WIRELESS & NETWORKS

---

Access this sub-menu to change/view the Wi-Fi, Bluetooth, Mobile Networks, VPN settings, etc. Please refer to network section for detailed information on Wi-Fi and bluetooth.

### 7.3 AUDIO PROFILES

---

Your device provides four pre-defined user profiles that allow the operations of the device to best suit the environment you are in. The profiles are General, Silent, Meeting and Outdoor. The Touch  icon adds a new profile; tap the  icon to select Reset to restore the

default settings.

## **7.4 DISPLAY**

---

With this function you can configure the display characteristics of the device including brightness, Auto-rotate screen, etc.

## **7.5 STORAGE**

---

View and manage the data storage of your device:

Total Space and Available Space: Lists the amount of space on the microSD card installed in your device and the amount you have used to store photos, videos, music, and other files.

Unmount SD Card: Un-mounts the microSD card from your device so that you can format the card or safely remove it when the device is on.

Available Space: The amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

## **7.6 BATTERY**

---

You can check the battery status of the device by accessing this sub-menu.

## **7.7 APPLICATIONS**

---

This sub-menu enables you to manage all the installed, running and applications saved in the device memory and

SD card. You can remove and manage installed applications, view and control running applications.

## 7.8 LOCATION ACCESS

---

Your device supports Global Positioning System.

## 7.9 SECURITY

---

You can protect your device from unauthorized users by setting the PIN code or entering a password.

### **Enable or Disable SIM card PIN**

When PIN code is enabled, you are required to enter the PIN code before using your phone.

- Go Main Menu> Settings > Security.
- On the SIM card lock tab, select Set up SIM card lock.
- Select a SIM card.
- Tap Lock SIM card to use PIN. Check to enable, uncheck to disable.
- Enter the current PIN code.
- To change the PIN code, select Change SIM PIN.
- Enter the old PIN code.
- Enter the new PIN code and confirm.

### **Setup Screen Lock**

You can set up a lock for your screen in form of Pattern, PIN code or password.

- Go to Settings > Security
- Set up Screen lock

- Select a desired form (None, Slide, Pattern, PIN or Password)

## **7.10 LANGUAGE AND INPUT**

---

Use the Language & Keyboard settings to select the language for the text on your device and for configuring the onscreen keyboard, including words that you've added to its dictionary.

## **7.11 BACKUP & RESET**

---

You can use the Privacy settings to manage your personal information, such as back up my data, automatic restore and factory data reset.

## **7.12 ACCOUNTS**

---

Use the Accounts to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules, and whether all applications can synchronize user data automatically.

## **7.13 DATE AND TIME**

---

You can select to set date, time and time zone using this sub-menu.

Use Automatic unless you need to override the network values.

Use 24-hour format: Select to set 24-hour formats on or off.

Choose Date format: Select from a variety of formats.

## **7.14 SCHEDULE POWER ON/OFF**

---

You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.

## **7.15 ACCESSIBILITY**

---

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your device.

## **7.16 ABOUT PHONE**

---

You can view system information Including Status, Legal information, Model number, Android version and so on.



## 8. APPLICATIONS & UTILITIES

---

For your entertainment purpose, your device is provided with several interesting games, applications and utilities. Please ensure that you have GPRS setting in your device to access the applications. Contact your operator for GPRS settings if you need it.

### 8.1 CALCULATOR

---

Calculator helps you perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

### 8.2 CLOCK

---

This function gives you an access to the alarm clock.

Go to Main Menu → Clock, Tap  to add alarm.

### 8.3 GMAIL

---

Gmail is Google's web-based email service. Google Mail is configured when you first set up your device. Depending on your synchronization settings, Google Mail on your device is automatically synchronized with your Google Mail account on the web.

- Go to Main Menu > Gmail.
- Select “Existing” or “New” start the Gmail.
- Follow the on screen instructions to login or create your Gmail username and password.

- Once logged in, you can begin reading and sending emails from your Gmail account.

## **8.4 PLAY STORE**

---

Play store allows you to find and download applications and fun games for your device.

- Go to Main Menu > Play Store and setup your Google account.
- Select Create to create a new account or Sign in to sign in your existing account.

Once you are signed in you can begin searching and downloading programs from the market. Tap Apps to view the list of applications available and tap Games to view the list of games available.

## 9. SPECIFICATIONS

---

Screen	4.5 inch (qHD)
Battery	1700 mAh
Dimensions	133X 68 X 8.9 mm
Sensor Pixel	QUXGA(8.0Mega)
Network	GSM: 850/900/1800/1900 MHz WCDMA: BAND1(2100)\BAND8(900)
Standby Time	350 hours
Maximum Talk Time	300 Minutes

\* The standby time and maximum talk time depend upon the network signals and settings.



## ENVIRONMENTAL CONCERN

---

Help us save Our Environment...GO GREEN..!!

All our endeavors are directed towards providing environment friendly products to you. The materials used in our devices are recyclable and can be reused to make new products. We strive to make products that are safe for our consumers as well as the environment. Come join hands with us and make world a better place to live.

Preserve natural resources for future generations by recycling your phone. The phone contains some metals, when recycled properly; these can be put back into circulation, decreasing the need for new metal mining. Recycling reduces the need for raw materials, saves energy, helps mitigate Global Warming and reduces pollution, reduces waste products in landfills; therefore preserving natural resources for the future and saving the planet.

Follow some simple steps and contribute towards saving the planet.

**DOs**

Recycle your handset and its accessories.

To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

**DONTs**

Do not dispose off your mobile and its battery in fire.

Do not dispose your mobile with the regular waste.  
Do not over charge your handset. Remove the charger when battery is full.

Don't trash your phone, instead RECYCLE it  
This logo signifies that this product and/or its constituents should not be disposed off with other household waste.

Hazards of Improper handling, accidental breakage, damage and /or improper recycling of hazardous elements

If this product is improperly handled, broken or damaged or carelessly recycled or disposed off in the fire, can result in environmental and data security concerns, including the following:

Affect nearly every system in the human body and result in birth defects, brain, heart, liver, kidney and skeletal system damage. They will also significantly affect the nervous and reproductive systems of the human body;  
When burned, create cancer-producing dioxins which are released into the air we breathe; If thrown in landfills, may



leach into groundwater affecting your local community;

In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are

known to be associated with ozone depletion; and Improper recycling additionally results in data security issues, as private electronic information remains on hard drive, if not properly removed before disposal.

### How to Recycle

Please get your electronics products recycled only through authorized recyclers, approved by Pollution Control Board. We provide facility of recycling of our products. For details of our collection centers, please visit our website or call our customer care. Help us to GO GREEN.

### Constitution of Hazardous Elements in your Device:

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder: maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers; and maximum concentration value of 0.01% by weight in homogenous materials for cadmium.

EU Regulatory Conformance Hereby, Bullitt Group declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

### **Safety Information and Notices**

Failure to comply with the following precautions may be dangerous or illegal.

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

The max. recommended temperature is 35°C.

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested). Please carefully read and observe the terms below:

### **Distance of operation**

This phone model has been tested and meets radiofrequency exposure guidelines when used as follows:

- Against the ear: Place or receive a phone call and hold the phone as you would a wire line telephone.
- Body worn: When transmitting, place the phone in a

carry accessory that contains no metal and positions the phone a minimum of 1.0 cm from your body. Use of other accessories may not ensure compliance with radiofrequency exposure guidelines. If you do not use a body worn accessory and are not holding the phone at the ear, position the phone a minimum of 1.0 cm from your body,

- Data operation: When using a data feature, position the phone a minimum of 1.0 cm from your body for the whole duration of the data transmission.

#### Adapter

Adapter shall be installed near the equipment and shall be easily accessible.

#### Sound pressure safety

Use carefully with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.

#### Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

#### Proper use

As described in this manual, your mobile phone can be used only in right location. If possible, please do not touch the antenna area on your phone.

**1g SAR(W/Kg):**

**Head:0.909 Body-worn:1.19**

**<sup>40</sup>Hotspot: 1.19**



FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This mobile phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Instamatic (FCC ID: ZL5SP4) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.909W/kg and when properly worn on the body is 1.19W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

### Body worn Operation

This device was tested for typical body-worn operations.

To comply with RF exposure requirements, a minimum separation distance of 1.0cm must be maintained between the user's body and the handset, including the antenna.

Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.