# **User Manual LEXI- Ambiance Light**

20029 Tear Drop, Small D11x20cm

# TROUBLESHOOTING

- Ensure your device is within 45 feet of the BLE Frequency: 2402-2480MHz Lexi Portable Hub without obstacles - Make sure the light is charged or has a good connection to the DC Adaptor (provided).

- Confirm your smart phone is paired with LEXI Portable Hub

- To un-pair the lights turn the light on/off 6 times in guick succession using the LEXI Mobile App. Afterwards, you'll see a cool white flashing. ( A warm white will be flashing at the 5th power cycle which is a warning signal for you. If you don't want to un-pair it, stop the power cycle. The light will go back to the last state). Then, re-pair this light in the User Guide section.

#### WELCOME TO LEXI

# USER GUIDE OPERATION

1. In order to add new devices to your Lexi Mobile App, first follow the instructions for connecting your Lexi Portable Hub to your wireless network. 2. Power on your light(s), you'll see the light(s) flashing with cool white color 3. Select "ADD NEW DEVICE" on the LEXI Mobile App and follow the instruction to complete adding the light(s). During this process you'll see the light transition to warm white flashing as it goes through the association process until it stops flashing and remains on warm white color.

4. Your light has been added to the LEXI Mobile App successfully and ready to use. 5. Remember to pair the Ambiance Light one by one to the LEXI Mobile App so that they can be individually controlled afterwards. 6. To learn more about detail function

and special effect, Please go to

### WIRELESS SPECIFICATION:

Wireless communication protocol: IEEE 802.15.4 Channel: 0 -39 channels

#### ENVIRONMENTAL SPECIFICATION:

Temperature (operation): -5...40°C Temperature (storage): -25...60°C Relative humidity: 5-90% non-condensing

#### **CLEANING AND MAINTENANCE:**

Do not clean when the product is on and connected to mains power. To avoid scratching, the product should only be cleaned with a soft dry cloth. Do not use cleaning agents.

# PLEASE KEEP THIS PACKAGING FOR FUTURE **REFERENCE AS IT CONTAINS IMPORTANT** INFORMATION.

#### CHARGING THE AMBIANCE LIGHT

1. Turn on the switch under the Ambiance light (You may see the light is flashing with white color, this is the normal state when the light has not been paired). 2. Connect the DC 5V 1A adapter (provided). Plug-in the 5.5mm connector to the socket at the bottom of Ambiance light. The LED indicator light on the bottom will turn red while its charging. 3. Charging will take approximately 6-8hours, once charged, indicator LED will turn green.

4. Battery will charge regardless of whether the Ambiance light is in the on or off position.

DISPOSAL OF YOUR OLD PRODUCT:

manufactured with high quality materials

removable Lithium-Ion battery, which can

Your product is designed and

and component, contains non-

be recycled and reused. When this

crossed-out wheeled bin symbol is

attached to a product it means the

product is covered by the European

Please find out for yourself about the

local separate collection system for

normal household waste. The correct

disposal of your old product will help

consequences for the environment and

prevent potential negative

human health.

Directive 2002/96/EC.

### WARNINGS AND CAUTIONS:

- Only use the adapter supplied: using a different adapter can damage the product.

- Keep away from liquids and humidity.

- The product is for indoor use only. Do not use in wet locations, directly exposed to water or outdoors.

- This product is not a toy designed to be played with by children.

- Do not place on hot surfaces.

- Do not be exposed to extreme temperatures, direct sunlight and moisture.

- For safety reasons and under the terms of the warranty, none of the enclosed devices should be opened.

#### WARRANTY:

LEXI provided one-year warranty is valid if the product is used in accordance with the instructions and for its intended purpose. Claims will only be accepted on submission of the original proof of purchase (invoice, sales slip or receipt) stating the purchase date, the name of the dealer and a description of the product with product ID labeled at the products.

The LEXI's warranty lapses if:

a. Anything has been changed, crossed out, deleted or rendered illegible on the purchase docket or product description. b. The failure is caused by damage, faulty connections or abuse.

c. A defect is caused by extreme circumstances not inherent to the product, for example, lighting, flooding, fire, incorrect use or negligence. d. The product has been opened or disassembled.

e. using a different adapter other than we provided

# FCC WARNING AND CAUTION:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

- Changes or modifications to this unit not turning the equipment off and on, the expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC ID : 2ATOT90010

- Shielded Cables must be used with this unit to ensure complaince with the Class **B** FCC limits

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.



