

Saving to Phone Book

Save names with phone numbers, mail addresses, etc. to Phone Book.

Phone Book Entry Items

Item	Description	Item	Description
Last Name:	Enter up to 32 characters. (Select Name: when saving to USIM Card.)	Note: ¹	Add personal details. Enter up to 256 characters.
First Name:		Birthday: ¹	Enter birth date
Reading:	Enter up to 64 characters	Picture: ^{1, 2}	Set an image to appear for incoming calls/mail
Add Phone Number:	Enter up to three numbers on handset/two on USIM Card (32 digits each)	Tone/Video for Voice Call: ¹	Set ringtone/ringvideo, Mobile Light or Vibration by caller/sender
Add Email Address:	Enter up to three addresses on handset/one on USIM Card (128 single-byte alphanumerics each)	Tone/Video for Video Call: ¹	
Category:	Sort entries into 16 Categories (11 on some USIM Cards). Category names can be changed. Set ringtone/ringvideo, Mobile Light and Vibration by Category (handset only).	Tone/Video for New Message: ¹	
		Light for Voice Call: ¹	
		Light for Video Call: ¹	
Address: ¹	Enter postal code (20 characters), country name (32 characters), state/province (64 characters), city name (64 characters) and street name/number (64 characters)	Light for New Message: ¹	
		Vibration for Incoming Call: ¹	
		Vibration for New Message: ¹	
Homepage: ¹	Save URLs. Enter up to 1,024 bytes.	Secret: ¹	Restrict access to Phone Book entries by saving them as Secret Mode entries

¹Not supported on USIM Card.

²Image may not appear while an S! Application is active, etc.

- Save up to 750 entries in handset Phone Book; USIM Card Phone Book entry limit varies according to card specifications. Depending on the USIM Card in use, some items may not be supported, and character entry limits or number of Categories may be lower. Also, the number of phone numbers or mail addresses per entry may be lower.

Note ► Back-up Important Information

When battery is exhausted/removed for long periods, Phone Book entries may be lost; handset damage may also affect handset information recovery. SoftBank is not liable for damages from lost/alterd data.

Creating Phone Book Entries

Enter a name, reading, phone number and mail address.

1 Press , select **Phone** and press 

2 Select **Add New Entry** and press 

3 Select **Last Name:** and press 

4 Enter last name and press 

5 Select **First Name:** and press 

6 Enter first name and press 
Characters entered for names appear under **Reading:**.



Tip ► **Correcting Reading**

Select **Reading:** and press .

Make corrections and press .

7 Select **Add Phone Number:** and press 

8 Enter a phone number and press 

9 Select an icon and press 

10 Select **Add Email Address:** and press 

11 Enter a mail address and press 

12 Press 

13 Select an icon and press 

14 Press  **Save**

Note ► To save an entry, enter at least one of the following:
a) last name; b) first name; c) phone number; or
d) mail address.

Tip ► **Setting Default Storage Media**

Press  ► Select **Phone** ► Press  ► Select **Ph.Book Settings** ► Press  ► Select **Save New Entry** ► Press  ► Select **Phone**. **USIM Memory** or **Ask Each Time** ► Press 

• For **Ask Each Time**, select storage media for each new entry.

Editing Phone Book Entries

1 Press  and select an entry

2 Press  **Options**

3 Select **Edit** and press 



4 Select an item and press 

5 Edit contents and press 

After numbers/mail addresses, select an icon and press .

6 Press  **Save**

Saving from Received Calls

- 1** Select a record (see P.19-23 "Calling from Received Calls")
- 2** Press **Options**, select **Save Number** and press
- 3** **New Entry**
 - 1** Select **As New Entry** and press
 - 2** Perform Steps 3 - 13 on P.19-29

Add to Existing Entry

 - 1** Select a Phone Book entry and press
 - 2** Press **Save**

Dialling from Phone Book

Changing Search Method

By Reading	Shows entries that start with specified Reading
By Category	Opens entries in the specified Category
By a-ka-sa-ta-na	Shows entries with Readings that start with katakana in the specified row

- 1** Press , select **Phone** and press
- 2** Select **Ph.Book Settings** and press
- 3** Select **Sort Entries** and press
- 4** Select **By Reading**, **By Category** or **By a-ka-sa-ta-na** and press

- Tip ▶** Switching Between Handset & USIM Card
 Press → Press **Options** → Select **Ph.Book Settings** → Press → Select **Select Phone Book** → Press → Select **Phone**, **USIM Memory** or **Both** → Press
- For **Both**, entries in both storage media appear.

Search by Reading

- 1** Set search method to **By Reading**
- 2** In Standby, press
- 3** Enter reading
- 4** Select a name and press

- Tip ▶** Multiple Numbers
 Use to select other numbers.

- 5** Press

S! Address Book (SAB)

Back up Phone Book via server; refresh SAB or Phone Book to reflect changes; add to/update SAB online via PC; restore lost/altered Phone Book entries via SAB. SAB requires a separate contract. For details, contact SoftBank Customer Centre, General Information (see P.19-48) or access the SOFTBANK MOBILE Corp. Website via PC:
<http://www.softbank.jp>

Mobile Camera

Before Using Camera

Select from two different shooting modes. Use Photo Camera for still images and Video Camera for video.

■ Photo Camera

Image Size	W 1200 × H 1600 dots W 960 × H 1280 dots W 480 × H 640 dots W 240 × H 320 dots W 120 × H 160 dots
File Format	JPEG (.jpg)
Save Location	Handset or Memory Card

■ Video Camera

Image Size	W 176 × H 144 dots W 128 × H 96 dots	W 480 × H 640 dots W 240 × H 320 dots W 240 × H 176 dots*	
File Format	MPEG-4 or H.263 (.3gp)	MPEG-4 (.3gp)	MPEG-4 (.ASF)
Save Location	Handset or Memory Card		Memory Card

*MPEG-4 (.3gp) only for W 240 × H 176 dots.

Camera Shake

Handset movement may blur images; hold handset firmly or place it on a stable surface and use Self-timer.

Note ► Lens Cover

Clean dust/smudges from lens cover (see P.19–13 ) with a soft cloth before use.

Mobile Camera

- Mobile camera is a precision instrument, however, some pixels may appear brighter/darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Subjecting the lens to direct sunlight will damage the camera's colour filter.

 
Capturing Still Images

- 1 Press , select **Camera** and press .
- 2 Frame image on Display
 - In Video Camera mode, press  (+ ) to switch to Photo Camera.
- 3 Press .
- 4 Press  to save
- 5 Press  to exit

Data Folder

Contents

Handset files are organised in folders by file format.

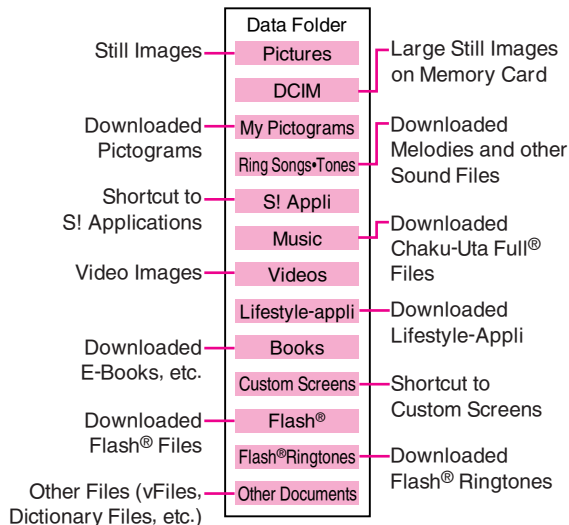

Opening Data Folder

- 1 Press , select **Data Folder** and press .
- 2 Select a folder and press 
 - To switch between handset and Memory Card, press , select **Change to Phone** or **Change to Memory Card**, then press .
- 3 Select a file and press .
- 4 Press  to return to file list.

S! Mail Attachments

Example: Attaching an image from Pictures folder to S! Mail

- 1 Press , select **Data Folder** and press .
- 2 Select **Pictures** and press .
- 3 Select a file and press  **Options**.
- 4 Select **Send** and press .
- 5 Select **As Message** and press .
- 6 Complete other fields and send S! Mail (perform from Step 3 on P.19-36)

Network Information

Retrieving Network Information

To use Messaging, Internet and other Network-related services, first retrieve Network information. Handset initiates information retrieval when [Envelope], [Y], or [Menu] is pressed for the first time. If handset is in Japanese mode, select **いいえ** and press [Menu], then change to English mode (see P.19-21).

1 Press [Envelope], [Y] or [Menu]

2 Choose **Yes** and press [Menu]

Handset connects to the Network and retrieves required information.

Yahoo! Keitai

Access Yahoo! Keitai Mobile Internet and PC sites.

Yahoo! Keitai

Access compatible Mobile Internet sites via Yahoo! Keitai Main Menu; download news/info as well as files for use on handset.

PC Sites

Activate PC Site Browser to view websites designed for PCs; only document files are downloadable and browsing PC sites may incur higher charges.

Opening Yahoo! Keitai Menu

1 Press [Menu], select **Yahoo! Keitai** and press [Menu]

2 Select **Yahoo! Keitai** and press [Menu]

3 Select **English** and press [Menu]

4 Highlight a menu item and press [Menu]

5 Repeat Step 4 to open additional links

6 To exit, press [Exit], choose **Yes** and press [Menu]

Note ▶ Yahoo! Keitai Main Menu is subject to change.

Yahoo! Keitai Options Menu

Open a page and press  **Options** to use the following functions.

Item	Description
Bookmark	Save new site links, access saved links (requires Network connection) or edit list
Saved Pages	Save page content; handset opens saved pages without connecting to the Network
Copy Text	Copy text
Reload	Update page content
Enter URL	Enter URL directly to access sites
Save Items	Save images, sounds, etc. to Data Folder
Convenient function	Send URL via SMS/S! Mail, open properties, search within site, etc.
Change to PC Browser	Activate PC Site Browser
History	Previously visited site links
Yahoo! Keitai	Return to Yahoo! Keitai Main Menu
Setting	Set font size, scroll unit, download parameters; select cookie acceptance; customise pointer settings, etc.
Open by New Tab/Tab Menu	Open link in new tab; switch/close tabs or open another via Tab Menu
Help	View a summary of key assignments
Exit	Exit Yahoo! Keitai

Messaging

Use SoftBank text communication services in Japan and overseas. Exchange text/multimedia messages with compatible handsets, PCs and other devices.

SMS

Use this basic messaging service to exchange short text messages of up to 160 alphanumeric characters with SoftBank handsets. This service is the ideal solution for fast and short text messaging!

S! Mail

Exchange text messages of up to 30,000 characters with e-mail compatible SoftBank handsets, other mobiles and PCs, etc. Attach image/sound files.

Note ▶ Handset is incompatible with Greeting, Coordinator, Relay Mail, Hotline and Polling service messages.

Tip ▶

- An additional contract is required to use S! Mail and receive e-mail from PCs, etc.
- The Centre resends undeliverable messages at regular intervals until delivered. Messages not received by specified expiry are deleted.

Opening Messages

- 1** Press , select *Messaging* and press 
- 2** Select *Received Msg.*, *Drafts*, *Templates*, *Sent Messages* or *Unsent Messages* and press 
- 3** Select a message and press 

Editing Messages

- 1** Select a draft, sent or unsent message and press  **Options**
- 2** Select *Edit & Send* or *Edit* and press 
- 3** Edit the message

Customising Handset Address

Change alphanumerics before @ of the default handset mail address. Customising handset mail address helps reduce spam.

- 1** Press , select *Messaging* and press 
- 2** Select *Settings* and press 
- 3** Select *Address Setting* and press 
Handset connects to the Network.
- 4** Select *English* and press 
Follow onscreen instructions.

Note ► This procedure may change without prior notice.
For further information, contact SoftBank Customer Centre, General Information (see P.19–48).

Messaging Menu

Press **[F1]**, select **Messaging** and press **[F2]** to open Messaging menu.

Item	Description
Received Msgs.	List of received messages
Create Message	Create and send new message
Retrieve New Msg.	Receive newly arrived messages
Drafts	List of incomplete/unsent messages
Templates	Created or downloaded Arrange Mail messages
Sent Messages	List of sent messages
Unsent Messages	Undelivered/cancelled/failed mail
Server Mail Box	Request Centre message list and then select messages to retrieve
Create New SMS	Compose SMS messages
Settings	Customise SMS/S! Mail settings, sort messages into folders or save frequently used numbers/addresses to Speed Mail List to send from Standby
Memory Status	Memory usage of Messaging Folders (except Templates)

Sending Text Messages

1 Press **[F1]**, select **Messaging** and press **[F2]**

2 Select **Create Message** (for S! Mail) or **Create New SMS** and press **[F2]**

3 Select recipient field and press **[F2]**

4 Enter a recipient

Phone Book

1 Select **Phone Book** and press **[F2]**

2 Select a recipient and press **[F2]**

- When multiple items are saved, select one and press **[F2]**.

Contact Groups

1 Select **Select Group** and press **[F2]**

2 Select a Group and press **[F2]**

- Press **[CLEAR]** to return. Omit this step when only one member is saved.

 
Sent Mail Records

1 Select a recipient and press **[F2]**

Speed Mail List

1 Select **Speed Mail List** and press **[F2]**

2 Select a recipient and press **[F2]**

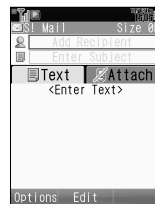

Mail Composition Window (S! Mail)

Direct Entry

- 1** Select *Enter Number* or *Enter Address* and press 
 - *Enter Address* is not available for SMS.
- 2** Enter recipient's SoftBank handset number or mail address and press 

5 Enter subject and press  (S! Mail only)

- 6** Select  and press  then enter a message
- For SMS, press  or a key then enter a message.

7 Press 

- 8** Attach files (S! Mail only)
Use  to select  and press 

Image Files

- 1** Select *Picture* and press 
- 2** Select a folder and press 
- 3** Select a file and press 

Melody Files

- 1** Select *Sound* and press 
- 2** Select a folder and press 
- 3** Select a file and press 

Video Files

- 1** Select *Video* and press 
- 2** Select *Saved Videos* and press 
- 3** Select a file and press 

9 When finished, press  **Send** to send

Incoming Text Messages

Receiving Messages

Delivery Notice appears and Information window opens (✉ appears) for new mail. Press  to open Received Msg. folder.

Opening Received Text Messages

- 1** Press , select *Messaging* and press 
- 2** Select *Received Msg.* and press 
- 3** Select a message and press 

Retrieving Complete S! Mail Messages

Centre sends initial portion of S! Mail message when:

- The message was sent to multiple recipients
- Files are attached to the message

- 1** Perform Steps 1 - 2 above
- 2** Select a message with  and press 
- 3** Press  **More**

Replying & Forwarding

Replying to Messages

- 1** Open a received message (see P.19-37)
- 2** Press **Options**
- 3** Select **Reply** or **Reply All** and press
- 4** *Replying to SoftBank Handset*
 - 1** To send as SMS, select **Reply (SMS)** or **Reply with Hist. (SMS)** and press
 - 2** To send as S! Mail, select **Reply (S! Mail)** or **Reply with Hist. (S!)** and press
- Replying to E-mail*
 - 1** Select **Reply (S! Mail)** or **Reply with Hist. (S!)** and press
 - Select **Reply with Hist. (SMS)** or **Reply with Hist. (S!)** to quote the original message text.
- 5** Complete and send message (perform from Step 5 or 6 on P.19-37)

Forwarding Messages

- 1** Open a received message (see P.19-37)
- 2** Press **Options**
- 3** Select **Forward** and press
 - To forward SMS, then select **S! Mail** or **SMS** and press .
- 4** Enter a recipient (see P.19-36) and press
- 5** Press **Send**

S! Appli

Enjoy a variety of compatible S! Applications.

- Download S! Applications via Yahoo! Keitai.
- Enjoy network gaming or access real-time news/info.
- Set an S! Application that activates in Standby.

S! Appli Menu

Press , select **S! Appli** and press to open S! Appli menu.

Item	Description
S! Appli	Download, start or delete S! Applications
Settings	Adjust S! Application settings
Information	Open Java™ and JBlend™ licence information

Downloading S! Applications

- 1** Press , select **S! Appli** and press
- 2** Select **S! Appli** and press
- 3** Select **Download** and press
- 4** Open a Mobile Internet site offering S! Applications
- 5** Select an S! Application and press
- 6** Press

Downloaded S! Application is automatically saved and a confirmation appears.
- 7** Choose **Yes** and press

S! FeliCa (Japanese Only)

Basics

S! FeliCa encompasses a range of IC Card-based services available via FeliCa-compatible SoftBank handsets. Handset supports S! FeliCa. To use services such as e-money, e-ticketing and reward point systems, simply hold handset over a compatible reader/writer at a shop or restaurant, etc.

FeliCa

- A contactless IC card technology enabling wireless data transmissions with compatible reader/writer terminals

IC Card

- The FeliCa chip embedded in FeliCa-compatible handsets
- Holds information required to use S! FeliCa

Lifestyle-Appli

- S! Applications required to use S! FeliCa
 - Edy e-money Lifestyle-Appli is preloaded on handset.
 - Edy is a prepaid e-money service run by bitWallet Inc.

Note ▶ IC Card data content varies by service and usage history. Procedures to delete IC Card data vary by Lifestyle-Appli; contact service providers for details.

Service Usage Outline

Download Lifestyle-Appli

Download Lifestyle-Appli via Mobile Internet site.

- Lifestyle-Appli is saved to Lifestyle-appli folder.



Complete Registration/Set Up

Activate Lifestyle-Appli, complete registration/customise settings.

- Charge accounts, check balance or payment records, etc.



Use Service

To use S! FeliCa at shops, restaurants, and locations, place  logo over reader/writer.

- Use e-money/e-tickets to shop/travel; earn reward points.

- Note** ▶
- Lifestyle-Appli registration and usage vary; contact the service provider for details.
 - SoftBank is not liable for damages resulting from accidental loss/alteration of IC Card data/settings.
 - Keep service passwords/customer service contact information, etc. in a separate place.

Starting Lifestyle-Appli

To use S! FeliCa, activate a service Lifestyle-Appli and complete service registration, setup, charge, balance check, etc.

Main Menu ▶ **Lifestyle-appli**

- 1 Select **Lifestyle-appli** and press 
 - To download a Lifestyle-Appli, select **Download** ▶
Press 

- 2 Select an application and press 
 - Lifestyle-Appli starts.
 - To end the Lifestyle-Appli, press .

Note ▶ Lifestyle-Appli cannot be started during calls or when another S! Application is active.

Tip ▶ Lifestyle-Appli settings and usage patterns resemble those of other S! Applications (see P.19-38). However, Lifestyle-Appli cannot be set as Screensaver.

 
Using S! FeliCa

Follow these steps to conduct a transaction.

Example: making an electronic payment:

- Complete registration, setup and charge in advance.
- Complete transactions without activating a Lifestyle-Appli.

- 1 Place  logo over reader/writer

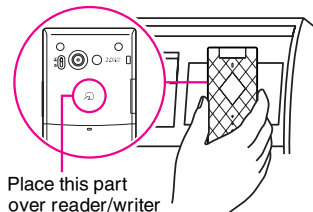

- Confirm scan results on reader/writer display.
- If recognition is slow, move handset around slightly.

Note ▶

- Align handset parallel to reader/writer.
- Foreign articles can block/hamper recognition.

Tip ▶

- When placed over sensor, handset may display a message, vibrate or activate mail, Internet or an S! Application for some services.
- Reader/writer will scan FeliCa IC Card even during calls or Internet transmissions. (It may take some time.)

When Handset Power is Off

- Transactions possible; Lifestyle-Appli does not start automatically.
 - After installing/reinstalling battery, always turn on handset power to use S! FeliCa.

When Battery is Low

- S! FeliCa is not available. Charge it beforehand.

IC Card Lock

Use this function to restrict access to/prevent unauthorised use of S! FeliCa on handset.
IC Card Lock is **Off** by default.

Main Menu ► Lifestyle-appli ► IC Card Settings ► IC Card Lock

- 1 Choose **On** and press .
■ To cancel, choose **Off** ► Press .
- 2 Enter Handset Code and press .
- 3 To activate IC Card Lock, choose **Yes** and press .

Tip ► For more information on S! FeliCa settings, please see the full English manual.

S! Cast (Japanese Only)

Subscribe to Japanese mobile periodicals that download to handset automatically overnight.

- A separate subscription and registration are required.
- Only available within Japan on compatible 3G handsets.
- Retrieve Network information (see P.19-33) beforehand.

Service Registration & Content Subscription

- 1 Press , select **Entertainment** and press .
 - 2 Select **CAST** and press .
 - 3 Select **Join/Cancel Service** and press .
- Handset connects to the Network and service registration page opens. Follow onscreen instructions.

Note ► Registration and subscription require Mobile Internet use (connection fees apply). Confirm signal strength beforehand.

Newly Arrived Information

- 1 Delivery Notice appears and Information window opens (appears) for new information
- 2 Select **CAST** and press .
- 3 Press to exit

S! Town (Japanese Only)

S! Town is an online communication application. Select an avatar to enter this 3D virtual town, where you can participate in events and meet other users.

- Usage requires the pre-installed S! Town S! Application.
- S! Town S! Application cannot be deleted.
- Network connection is required; may incur high charges.

Using S! Town

When using S! Town for the first time, agree to the terms of service then complete free user registration.

1 Press ☐, select **Communication** and press ☐

2 Select **S! Town** and press ☐
S! Town starts.

- For operations, read the instructions on the application.

S! Loop (Japanese Only)

S! Loop is a communication service.

1 Press ☐, select **Communication** and press ☐

2 Select **S! Loop** and press ☐
Handset connects to the Network and S! Loop Main Menu opens.

- For operations, read the S! Loop instructions.

Near Chat (Japanese Only)

Exchange real-time text messages wirelessly with compatible Bluetooth® devices within ten metres.

- Because this application employs Bluetooth® wireless technology transmission/connection fees do not apply.
- Usage requires the pre-installed Near Chat S! Application.

Note ▶

- Near Chat range may vary by ambient conditions.
- Near Chat S! Application cannot be deleted.

Software Update

Check for firmware updates and download as required.

Precautions

Before updating software, turn power off to end all active functions/applications, then restart handset.

- Choose to begin update or schedule update.
- Handset is disabled until update is complete. Update may take up to approximately 30 minutes.
- Connection fees do not apply to updates (including checking for updates, downloading and rewriting).
- Keep handset in a place where signal is strong and stable.
- Charge battery (🔋 appears) beforehand; a low battery may cause update to fail.
- Do not remove battery during update; update may fail.
- To reduce risk of failure, disconnect USB Cable from handset beforehand.

Updating Software

 
Read previous Software Update Precautions (left) beforehand.

Main Menu → Settings → Phone Settings (📞) → Software Update

1 Select **Software Update** and press

Confirmation appears.

- Follow onscreen instructions. (🔋 appears during update.)
- Update may take up to approximately 30 minutes.
- Confirmation appears and Information window opens (📞 appears) for successful update.
- While confirmation appears, press  to acknowledge update completion and cancel Information window.

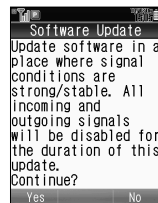

Confirmation



Update Complete

Note ▶ Update failure may disable handset. Contact SoftBank Customer Centre, Customer Assistance (see P.19-48).



Update Failure

Update Result

- While Information window appears, select **Update Result** ▶ Press ☐
 - Press ☐ again to exit.
- In Standby, press ☐ ▶ Select **Settings** ▶ Press ☐ ▶ Use to select **Phone Settings** ▶ Select **Software Update** ▶ Press ☐ ▶ Select **Update Result** ▶ Press ☐
 - Press ☐ again to exit.



Update Result

Scheduled Update

- Confirmation appears at scheduled update time. Press ☐ or wait about ten seconds for update to start.
 - Update will not start while handset is in use. When the current operation ends, confirmation appears. After ten minutes, scheduled update is automatically cancelled.
 - Update automatically cancels Keypad Lock.



Confirmation

- Note** ▶
- Handset Phone Book entries, media files, and other content are not affected by firmware updates, but users should always back-up important information (note that some files cannot be copied). SoftBank is not liable for damages from lost information, etc.
 - If handset does not return to Standby after update, turn power off, reinsert battery, then restart handset.

Function List

Main Menu	Sub Menu
Communication	S! Town
	S! Loop
Yahoo! Keitai	Near chat
	Yahoo! Keitai
	Bookmarks
	Saved Pages
	Enter URL
	History
	Live Monitor
	PC Site Browser
Media Player	Common Settings
	Music
	Videos
Messaging	Streaming
	Received Msg.
	Create Message
	Retrieve New Msg.
	Drafts
	Templates
	Sent Messages
	Unsent Messages
	Server Mail Box
	Create New SMS
Camera	Settings
	Memory Status
Data Folder	—
	Pictures
	DCIM
	My Pictograms
	Ring Songs•Tones
	S! Appli
	Music
	Videos
	Lifestyle-appli
	Books
	Custom Screens
	Flash®
	Flash®Ringtones
	Other Documents
	Memory Status

Main Menu		Sub Menu
Tools	Tools 1	Calendar
		Alarms
		Calculator
		Tasks
	Tools 2	World Clock
		Voice Recorder
		Document Viewer
		Stopwatch
	Tools 3	Countdown Timer
		Expenses Memo
		Text Templates
		Barcode
		Phone Help
Entertainment	ComicSurfing	
	E-Book	
	CAST	
S! Appli	S! Appli	
	Settings	
	Information	
Lifestyle-appli	Lifestyle-appli	
	IC Card Settings	
Phone	Phone Book List	
	Add New Entry	
	Information	
	Call Log	
	Play Messages	
	Call Voicemail	
	Category Control	
	My Details	
	Speed Dial List	
	Contact Groups	
	S! Address Book	
	Ph.Book Settings	
	Manage Entries	
	Service Dial No.	

Main Menu		Sub Menu
Settings	Phone Settings	Mode Settings
		Display
		Custom Screens
		Sounds & Alerts
		Date & Time
		言語選択 (Language)
		User Dictionary
		Ringier Output
		Earpiece Volume
		Simple Menu
	Connectivity	Locks
		Software Update
		Master Reset
		Bluetooth
	Call/Video Call	Infrared/IrSS
		Mass Storage
		Memory Card
		Call Time & Cost
		Answer Phone
		Voicemail/Divert
		Video Call
		Show My Number
		out Missed Calls
Int'l Calling		
Disp. Time/Call		
Call Barring		
Network Settings	Minute Minder	
	Auto Answer	
	Call Waiting	
	Select Network	
	Select Service	
	Offline Mode	
	Retrieve NW Info	
	Location Info	
	Network Info	

Specifications

■ 810SH

Weight	Approximately 117 g (with battery)
Continuous Talk Time	Approximately ●● minutes (3G) Approximately ●● minutes (GSM)
Continuous Standby Time (handset closed)	Approximately ●● hours (3G) Approximately ●● hours (GSM)
Video Call Continuous Talk Time	Approximately ●● minutes (with Internal Camera in use) Approximately ●● minutes (with External Camera in use)
Charging Time (power off)	AC Charger: Approximately ●● minutes In-Car Charger: Approximately ●● minutes
Dimensions (W × H × D)	Approximately 49.8 × 100 × 21.3 mm (handset closed, 21.3 mm at thickest point)
Maximum Output	0.25 W (3G) 2.0 W (GSM)

- Values above were calculated with battery installed.
- Continuous Talk Time is an average measured with a new, fully charged battery, with stable signals. Continuous Talk Time may be less than half this value if signal is weak.

■ 811SH

Weight	Approximately 117 g (with battery)
Continuous Talk Time	Approximately ●● minutes (3G) Approximately ●● minutes (GSM)
Continuous Standby Time (handset closed)	Approximately ●● hours (3G) Approximately ●● hours (GSM)
Video Call Continuous Talk Time	Approximately ●● minutes (with Internal Camera in use) Approximately ●● minutes (with External Camera in use)
Charging Time (power off)	AC Charger: Approximately ●● minutes In-Car Charger: Approximately ●● minutes
Dimensions (W × H × D)	Approximately 49.8 × 100 × 21.3 mm (handset closed, 21.3 mm at thickest point)
Maximum Output	0.25 W (3G) 2.0 W (GSM)

- Values above were calculated with battery installed.
- Continuous Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals. Standby Time may be less than half this value if handset is out-of-range/signal is weak. Standby Time may vary by environment (battery status, ambient temperature, etc.).

- Talk Time/Standby Time decrease with frequent use of Display/Keypad backlights.
- Talk Time/Standby Time may decrease when an S! Application is active.
- Talk Time/Standby Time decrease with handset use in poor signal conditions.
- Display employs precision technology, however, some pixels may appear brighter/darker.

■ AC Charger

Power Source	AC 100V-240V, 50/60 Hz
Power Consumption	12VA
Output Voltage/Current	DC 5.2V/650 mA
Charging Temperature	5°C to 35°C
Dimensions (W × H × D)	Approximately 55 × 45 × 22 mm (without protruding parts, cord)
Cord Length	Approximately 1.5 m

■ Battery

Voltage	3.7V
Battery Type	Lithium-ion
Capacity	810 mAh
Dimensions (W × H × D)	Approximately 37.8 × 5.8 × 36.9 mm (without protruding parts)

■ Video Cable

Weight	Approximately ●● g
Cord Length	Approximately ●● cm

Customer Service

If you have questions about SoftBank handsets or services, please call General Information. For repairs, please call Customer Assistance.

SoftBank Customer Centres

From a SoftBank handset, dial toll free at **157** for General Information or **113** for Customer Assistance

SoftBank International Call Centre

From outside Japan, dial **+81-3-5351-3491**
(International charges will apply to this call.)

Call these numbers toll free from landlines.

Subscription Area	Service Centre	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎ 0088-240-157
	Customer Assistance	☎ 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎ 0088-241-157
	Customer Assistance	☎ 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎ 0088-242-157
	Customer Assistance	☎ 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎ 0088-250-157
	Customer Assistance	☎ 0088-250-113