

Digital Security Code Information

=====

262144 Digital Security Code

This cordless telephone system automatically selects a different security code from 262144 possible discrete digital codes each time the cordless telephone is used.

Furthermore, the security code can be changed randomly by pressing 'find handset' button on the base unit when the handset is placed in the base unit.