

# *UNIQCELL*



## **10.1 inch Tablet Space 10 User Manual**

UNIQ0222

## Read Before Use

---

Your tablet is manufactured and designed for mobile use. As the tablet software is updated regularly, this User Manual may not cover all aspects of new features. Please read the following instructions carefully:

- Do not place objects on top of the tablet, as objects may scratch the screen.
- Protect the device from moisture, dust or smoky environments, as these may harm the tablet. The tablet is not resistant to water or moisture. Avoid using the tablet in a humid environment. Do not expose the device to direct sunlight or heat sources.
- Do not place the tablet on uneven or unstable surfaces.
- Avoid using this device in strong magnetic and static environments as much as possible.
- Do not drop the tablet or impact it against a hard surface. Dropping the tablet can damage the LCD screen, which is not covered by warranty.
- Operating Temperature: This tablet should only be used in environments with ambient temperatures between 32°F (0°C) and 113°F (45°C).
- Do not force or attempt to insert items with different ports/plugs into the tablet.
- Do not use your tablet while driving.
- Use only manufacturer approved chargers.
- The device and adapter may produce some heat during normal operation or charging. Avoid placing them on soft surfaces or other locations/conditions that may prevent normal dispersion of heat, which can

## **Read Before Use (continued)**


---

cause device overheating. To prevent discomfort or injury from heat exposure, do not leave the tablet on your lap or other parts of the body.

- Once charged, disconnect the tablet from the outlet. Do not use a pen or any sharp object to tap the screen.
- Clean only with a dry, soft cloth.
- Do not disassemble with tablet. Refer to a certified service technician for repairs.
- Do not disconnect the tablet during formatting, installing or removing external devices.

## Tablet Overview

---

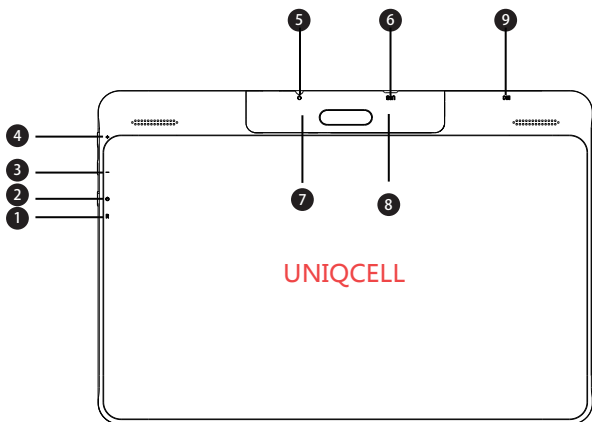

- 1.Reset
- 2.Power
- 3.Volume down
- 4.Volume up
- 5.Earphone
- 6.Micro USB Port
- 7.Micro SD Card Slot (Request open the back cover)
- 8.Dual SIM Card Slot (Request open the back cover)
9. MIC

## Touchscreen Basics

---



### **Tap**

Tap the screen once to activate an item.



### **Touch & Hold**

Touch and hold to move an item by dragging. In many apps, touch and hold can offer more options.



### **Swipe**

Quickly swipe your finger vertically or horizontally across the screen to move to other home pages or scroll through documents.



### **Zoom in**

Touch the screen with two fingers and pinch them together.



### **Zoom out**

Touch the screen with two fingers and spread them apart.



### **Flick**

Flick the screen with your finger to quickly scroll through a long list, such as a library of music.

## **Initial Setup**

---

### **Charging**

Fully charge your tablet for at least six hours before initial use. The battery icon at the upper right corner of the screen indicates the battery level or charging status.

1. Plug the small end of the USB cable into the micro USB port on the side of the device, and then plug the larger USB end into the power adapter.
2. Once fully charged, disconnect the device from the charger. Unplug the charger from the device first, and then unplug it from the electric outlet.

NOTE: Use the included charging accessories to optimize your battery performance.

### **Powering On**

To turn on your tablet, press and hold the power key for approximately two seconds. The Core Innovations logo indicates that the tablet is loading.

1. When you turn on your tablet for the first time, the Installer Wizard appears. Select the apps you wish to install on your tablet and follow the on-screen instructions.
2. It may take several minutes for your tablet to install the apps; please be patient.

To turn off your tablet, press and hold the power button, and then tap Power off on the pop-up screen.

NOTE: If you choose not to install the apps provided by

the Installer Wizard, you may install them at a later time by tapping on the home screen.

## Home Screen

---

When you turn on your tablet for the first time, you will see the main home screen panel. This panel is typically centered; you can access additional panels on either side of the main one by swiping your finger left or right.

The menu, home and back keys help you navigate your tablet. You can adjust volume using the VOL+ and VOL- buttons.

Swipe up to reveal more apps.



## Homescreen Icons

---



**Battery Level:** The white battery level indicator will decrease and change to red as the battery is drained.



**Wi-Fi® Signal:** As the Wi-Fi® signal strength decreases, the blue bands will change to grey.



**All Apps:** Tap to view all apps.



**Back:** Go back to the previous screen.



**Recent apps:** Open a list of recent apps. Tap an app to open or swipe left/right to remove the thumbnail.



**Home:** Go back to the home screen. Hold and slide up to open Google Now™.



**Increase Volume**



**Decrease Volume**

## Downloading Apps in Google Play™ Store

---




Google Play™ Store brings together all of your favorite content in one place. Access movies, TV shows, music, books, magazines, apps, and more when you sign in with your Google™ Account.



## Connecting to Wi-Fi®

---

1. On the home screen or menu list, tap the Settings icon  and then tap Wi-Fi® to turn it on.
2. The Wi-Fi® section will show the list of networks detected.
3. Tap the desired Wi-Fi® network you want to connect to. When connected, the wireless indicator appears in the status bar. The white lines indicate connection strength.


Note: If you select a secured network, you will be asked to enter the network key or password.

The next time your tablet connects to a previously accessed wireless network, you will not be asked to enter the key or other security information again.

Note: This tablet supports 2.4GHz Wi-Fi® networks only.

## Creating a Google™ Account

---

1. From your home screen, tap on the Settings app .
2. Tap on User & Accounts > Add Account.
3. You will be asked to choose the type of account you would like to add. Tap on Google™.
4. The screen will ask you to sign in to an existing Google™ account. If you don't have one yet, you can create a new one by tapping on "Create Account" on the bottom of the screen.

## **Camera**

---

Tap the camera app to take pictures and videos to share with your friends and family.

### **Taking Photos**

- Make sure the icon bar on the left shows the camera icon.
- Tap the camera icon to take a photo.
- Pinch two fingers together on the screen to zoom.
- Tap the menu icon in the top right corner for camera settings.

To switch to video record mode, swipe right from the left icon bar. Select the video icon. You can also change the resolution settings and try advanced features.

### **Recording Video**

- Make sure the icon bar on the left shows the video icon.
- Tap the video icon to start recording.
- Tap the video icon again to stop recording.
- Pinch two fingers together or spread them apart on the screen to zoom.
- While recording you can tap anywhere on the screen to take a picture.
- Tap the menu icon in the top right corner for video settings.

### **Calling and connecting with 3G.**

- Insert a valid SIM card into the Dual SIM Card Slot on the device (Request open the back cover). Before installing the SIM card, make sure the device is turned off. Only insert the SIM card into the correct position,

and then you can make a call by the right APP.

- It supports full frequency of 2G, and it supports 3G bands as below: 900/1900/2100. And it support Dual Card and Dual Standby.

## **Specifications**

---

- 10.1" 800x1280 IPS Screen
- Android 11
- 2GB RAM
- 32GB Built-in Storage
- USB Input
- Support 3G band ( 900/1900/2100 )
- Dual card and Dual Standby
- 3.5mm Headphone Jack
- Front and Back Cameras
- 5000mAh Battery
- Built-in G Sensor

## **IN THE BOX**

---

- 10.1" Tablet
- Micro USB Cable
- Wall Charger
- User Manual
- Screen protect film
- Transparent protect Cover

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This 10.1 inch Tablet Space 10 meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement

the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: 10.1 inch Tablet Space 10 has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the phone kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

*UNIQCELL*

**Space 10**