

 
Wireless Doorbell

ORIGINALITY DESIGN SMART - AND BEAUTIFUL

.....




QUICK GUIDE

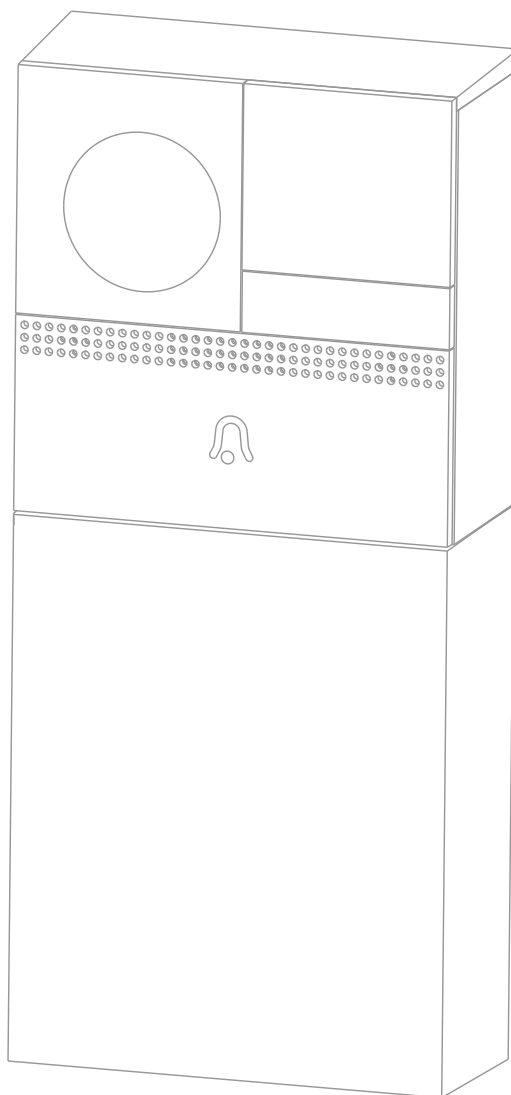


What's in the box

 
Please consult this checklist for all parts.

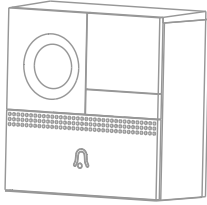


Wireless Doorbell

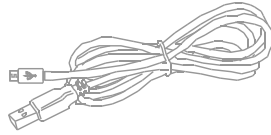 


USB cable

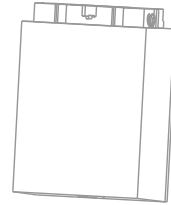 


Battery box

 


Power adapter

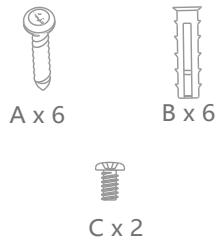 


Screws(3 kinds)

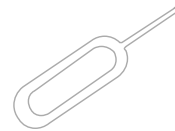 


Pin

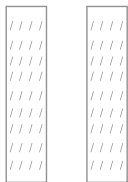 

Double-sided tape

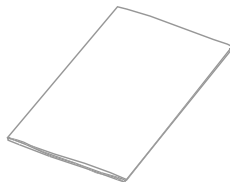 

Manual

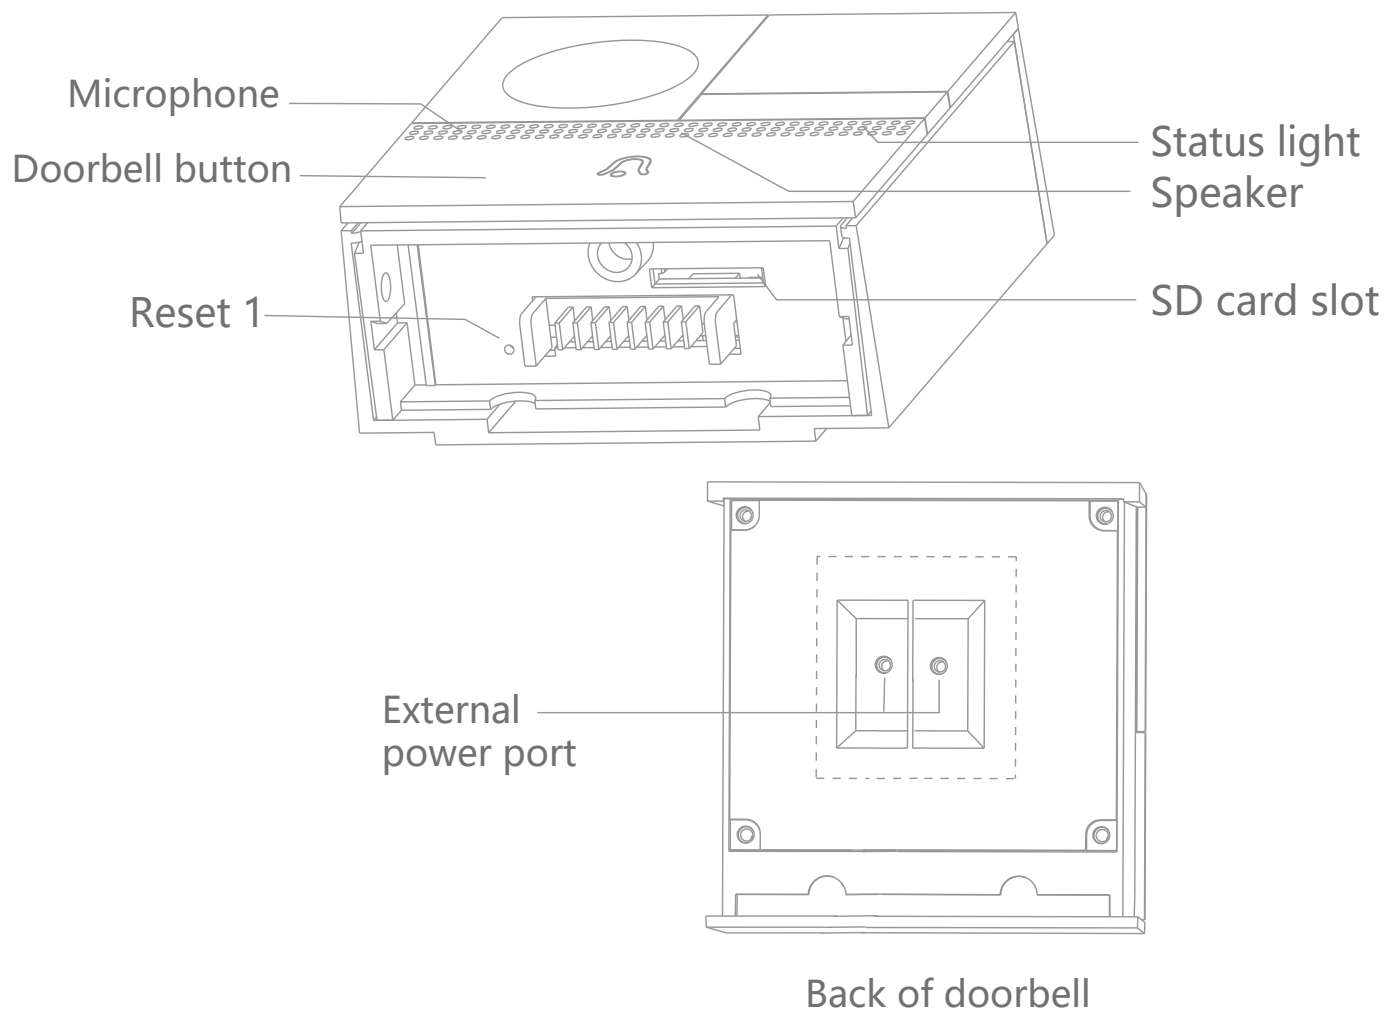 

Power Port	AC12~24V
------------	----------


Doorbell button	Press the button to activate the doorbell
-----------------	---

Status light	<ul style="list-style-type: none"> • Red light solids on: the camera network is abnormal • Red light blinking: awaiting WiFi connection, or currently connecting (faster blinking) • Blue light solids on: camera running correctly
--------------	--

Microphone	Captures sound for your video
------------	-------------------------------

SD card slot	Supports local SD Card storage (Max.128G)
--------------	---


Reset1	Press and hold on for 5 seconds with pin to reset the doorbell
--------	--

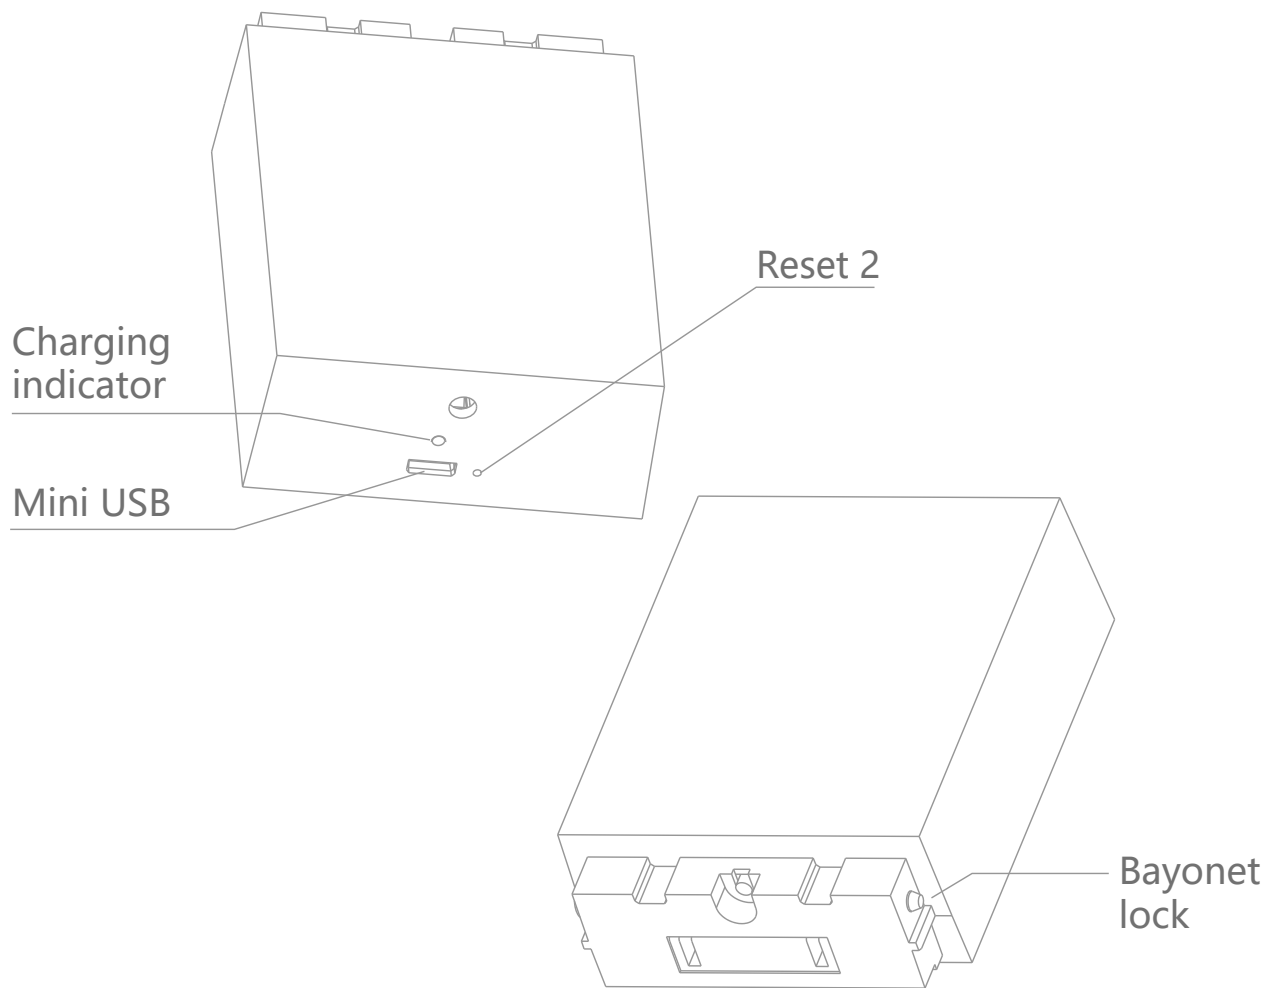 


Mini USB	DC5V±10%,USB power supply
Charging indicator	<ul style="list-style-type: none"> • Red indicator solids on: battery is charging • Blue indicator solids on: charging completed
Reset 2	Tap reset button for 5 seconds to factory reset
Bayonet lock	Lock the battery box through bayonet lock
Battery capacity	6700mAh (Two 18650 lithium-ion batteries)

Battery Power supply mode


 
Step 1 Remove the bracket from Bell 1S.

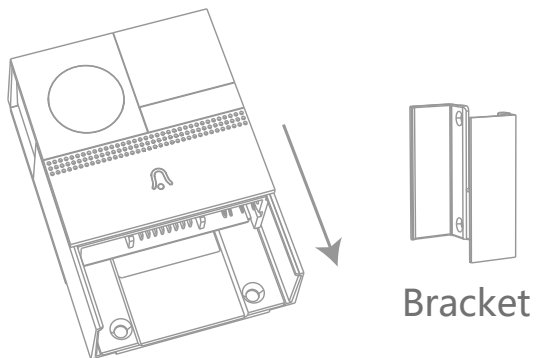

 Step 2 Fix the bracket on the wall with screws and install the doorbell into the bracket.

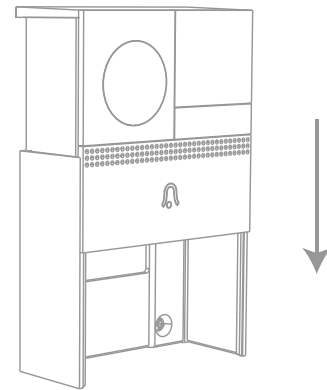


  Step 3 Insert the battery compartment into the doorbell.

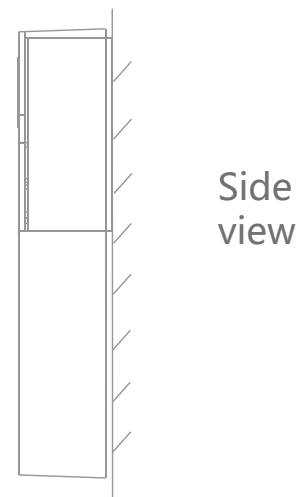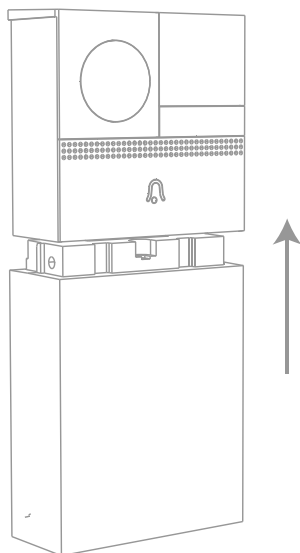


AC Power supply mode

 
Step 1 Remove the bracket from Bell 1S.

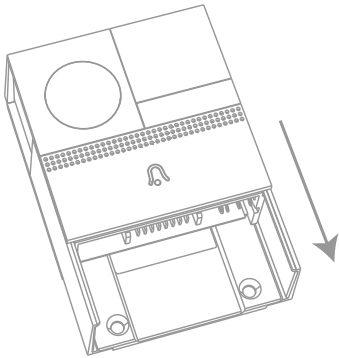

 Step 2 Connect the AC power with your wires.

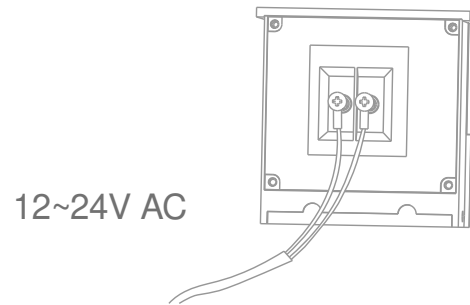

 Step 3 Fix the bracket on the wall with screws and install the doorbell into the bracket.


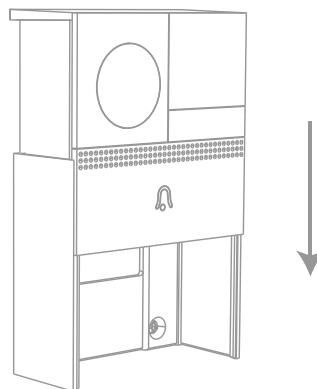


Double-sided tape mode

Step 1 Attach the double-sided adhesive tape to both sides of the bracket

Step 2 Keep the doorbell close to a clean flat.

  tape

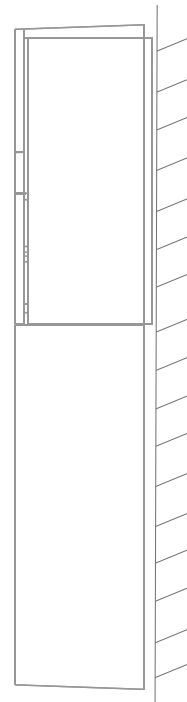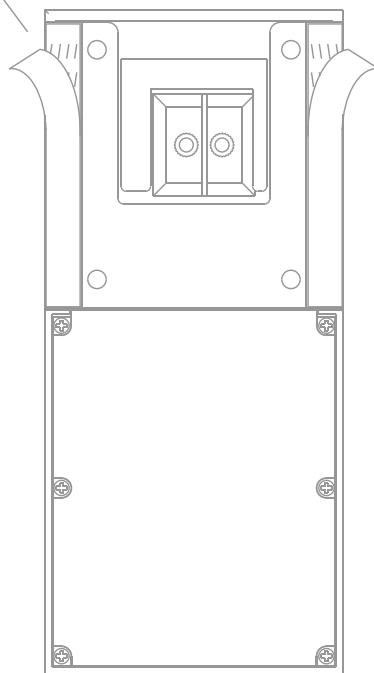

Side
view

Download

Smart Life is available for both iOS and Android OS. Search the name 'Smart Life' in App Store or Android Market, or scan the QR-Code to download the App.

·Support



iOS



 
Android




Download App(iOS&android)

Set up router

The router supports the 2.4GHz WiFi (doesn't support the 5GHz), and is connected to the WiFi network. Please set the parameters of the router before connecting the WiFi network, and record the SSID and password of your WiFi.

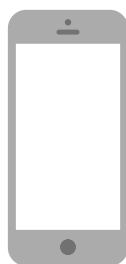

Please keep network available

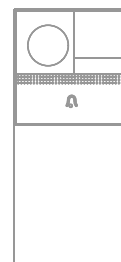 

2.4GHz

 


5GHz



Registration process

- Step 1 Open the Smart Life App, click "Register", read the "Privacy Policy" and click "Agree" .

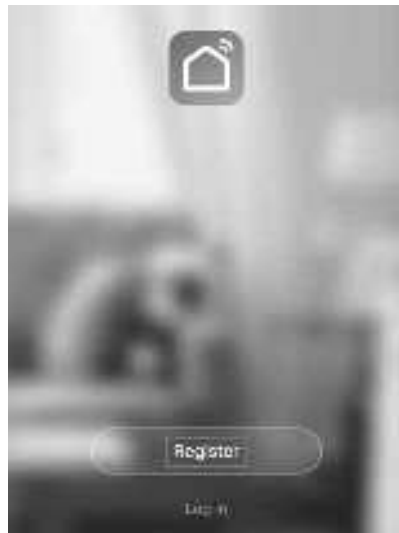


- Step 2 Input a legal and valid Mobile number or Email address and click "Continue". Input Verification Code, then log in the app.




QR Code Configuration

 - 1 Open the Smart Life App, click "Create family", and you can customize the Family name and related settings .

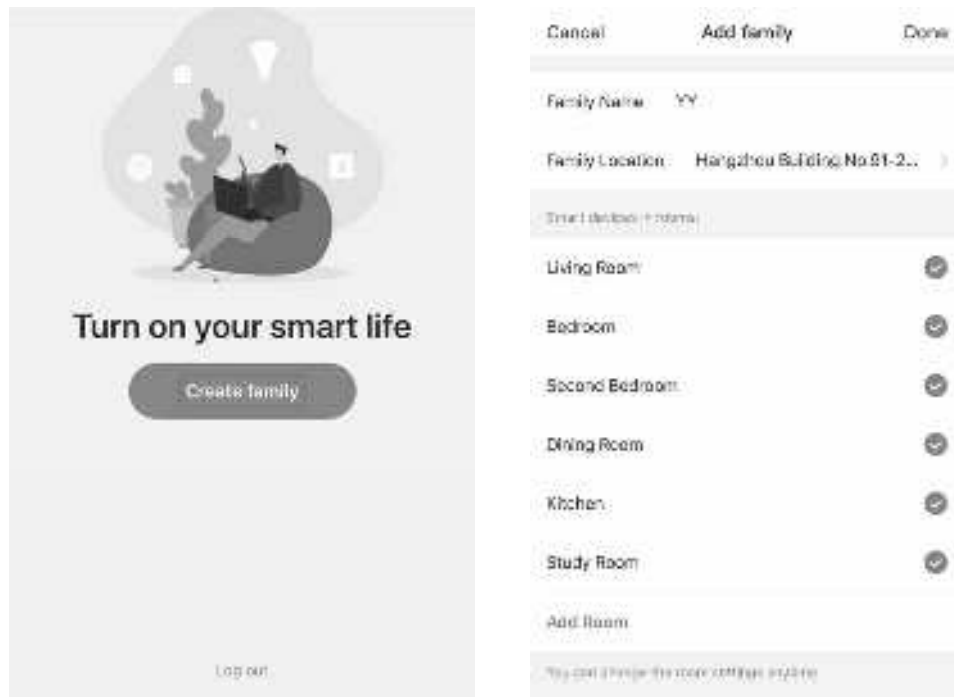

 - 2 Continue to click "Security & Sensor" >> "Smart Camera", and then choose "Add Device" or "+", ready to add camera.

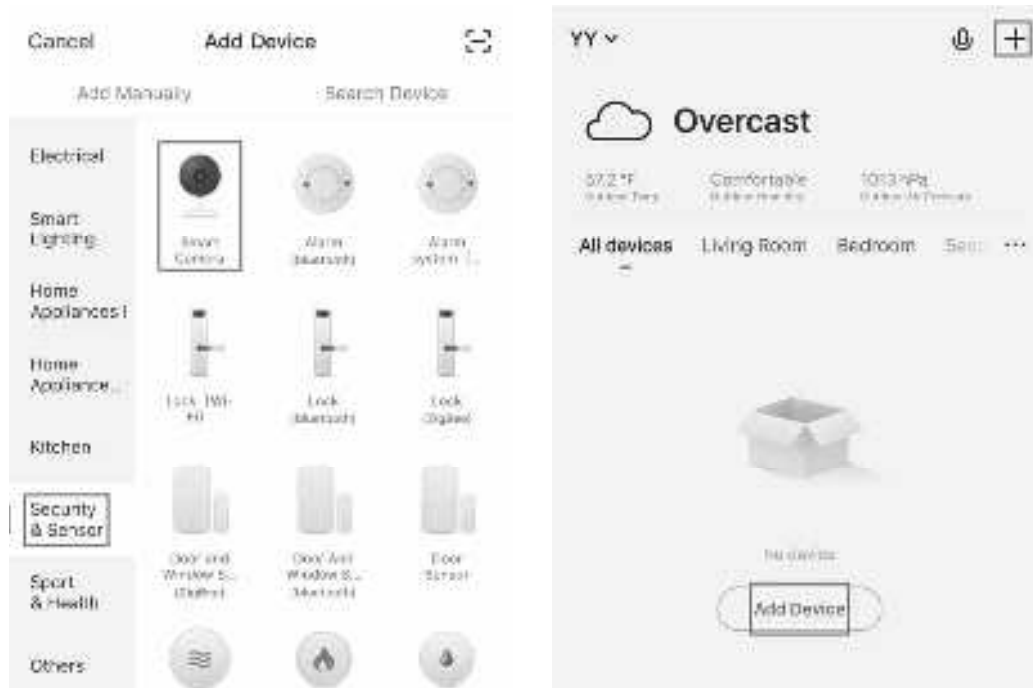

QR Code Configuration

- 3 In "Add Device" this interface, continue to click "next step", and then you should input your WiFi's passwords.

Add Device

Power the device on and make sure the indicator is flashing quickly or a prompt tone is heard



Help

next step

Enter Wi-Fi Password

Only support 2.4GHz Wi-Fi network



OK

Note:

- 1) Camera only supports 2.4GHz WiFi network.
- 2) The number of bits in the ssid and passwords of the router should not exceed 24 digits.
- 3) The bell management after the doorbell detects the button event, it sends the visitor button message to the indoor bell device through 915MHz frequency, and the bell device will ring automatically after receiving the message. This event can be triggered multiple times. Bell devices offer several different ring tones to choose from. Factory use default ring tone, support user Settings

- 4 In this interface, you should scan the QR code in your phone with the camera, when the camera comes out "dong dong dong". And you can complete the configuration about 30s.

Scan with the camera

When you tap CONTINUE, the mobile phone displays a QR code. Hold the camera 15 to 20 cm in front of the mobile phone for the camera to scan the QR code.



Continue



 
Heard nothing at all

Heard the beep


- 5 When connecting, you should make sure your router, mobile, and camera are as close as possible. When camera added successfully, click "✓" you could also DIY the camera's name.





In "Smart Camera" interface,click "",you can set the camera common functions.

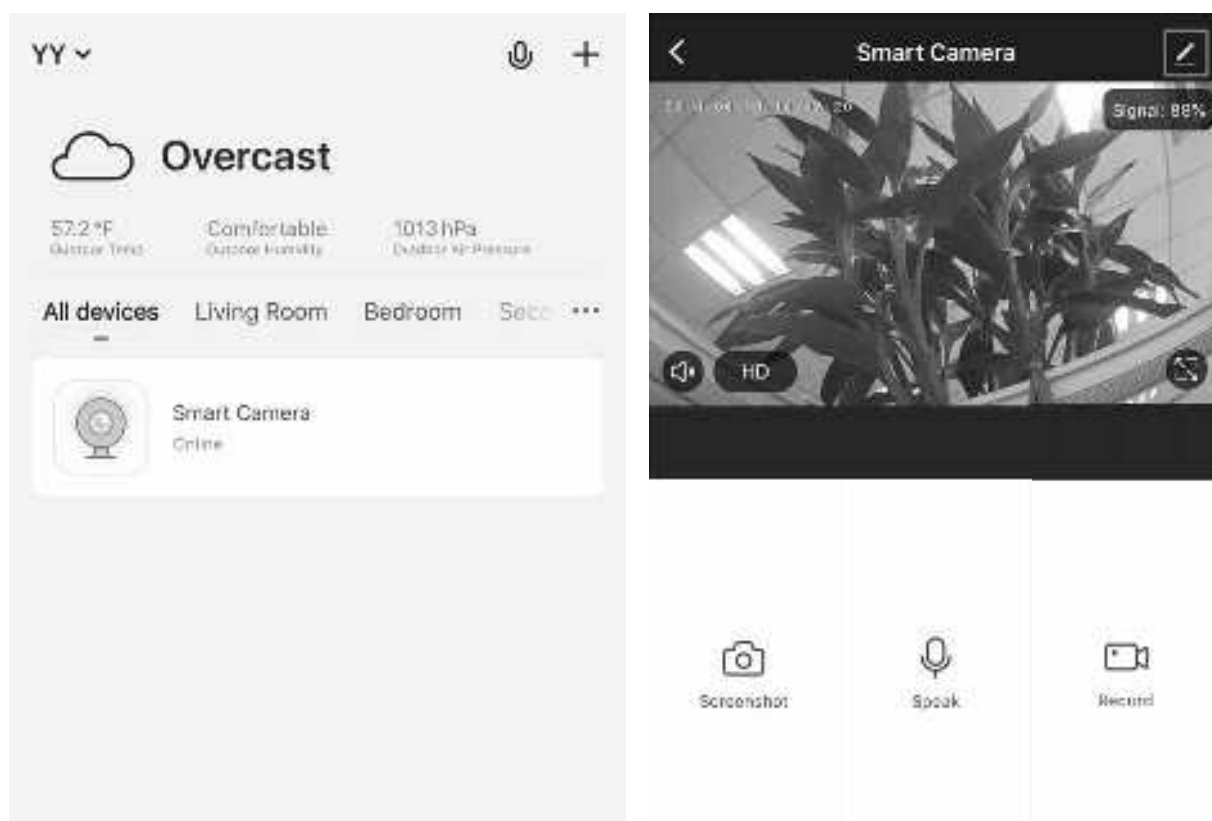

 Step 1 Click "...", enter the "Setting" page and click "Basic Feature Settings".

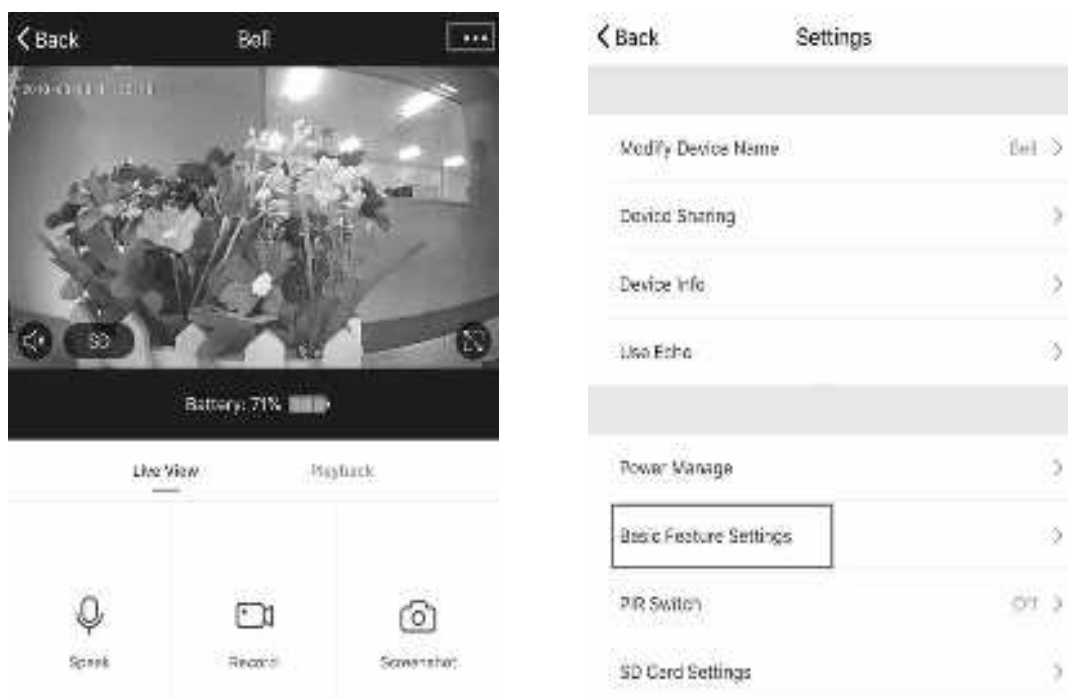

  Step 2 Enter the "Basic Feature Settings" setting page and click "Unlock the Battery" to unlock it automatically. When the motor is finished, the battery box can be pulled out.

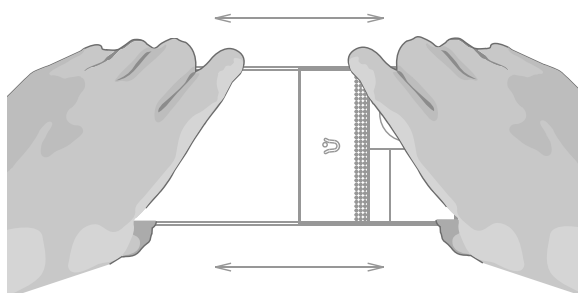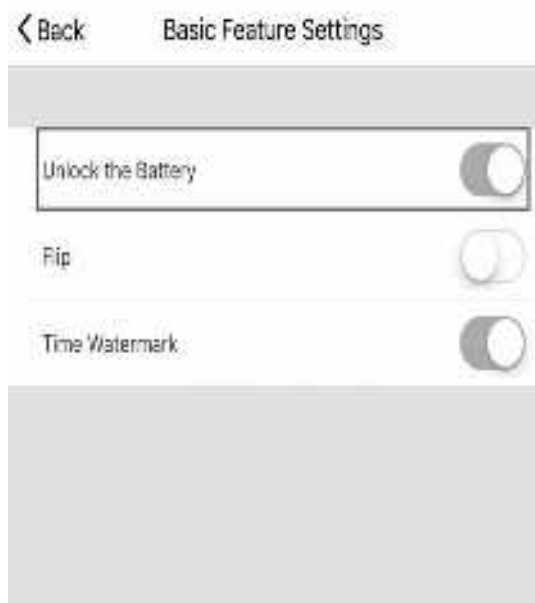

Functions

Full-duplex audio

When the visitor push the doorbell button, you will get a call. You can see and hear the vistor in your App from the doorbell if you answer.

PIR

When the doorbell detects someone stopping by, it sends an alarm message to your cell phone.

Shared device

The doorbell device can be shared with friends, and friends can also preview online. There is no limit to the number of sharing devices, but only 6 accounts are supported for online preview at the same time.

Record

Record every moment by using high capacity SD card storage.

Day & Night

Powerful night vision means no interruptions, even in complete darkness.



Daytime



Night

Q: In the network process, the process bar is always not 100%, add failure?

A: This camera only supports 2.4GHz WiFi router, please make sure you are using a 2.4GHz WiFi router. And confirm the WiFi password again.

Q: Repeated additions are failures?

A: After adding a failure, it is recommended to restart the device or power off, and then try to add again.

Q: The device cannot be previewed properly?

A: Check whether the network is normal, you can place the camera close to the router, and if not, it is recommended to reset the device and add it again.

Q: How to cut the camera network to another router?

A: First remove and reset the device on the App and then configure the device again by the App.

Q: Why I can't get the notifications with my cell phone App?

A: Please confirm that the App has been running on the phone, and the relevant reminder function has been opened; Message notification and authority confirmation in the mobile phone system have been opened.

Q: Why doesn't the device identify the SD card?

A: It is recommended to plug in SD card after power cut. Confirm whether the SD card is normally available and the format is FAT32. And the TF card can't be identified when the internet environment is not good.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.