



EUT Internal Photo 1

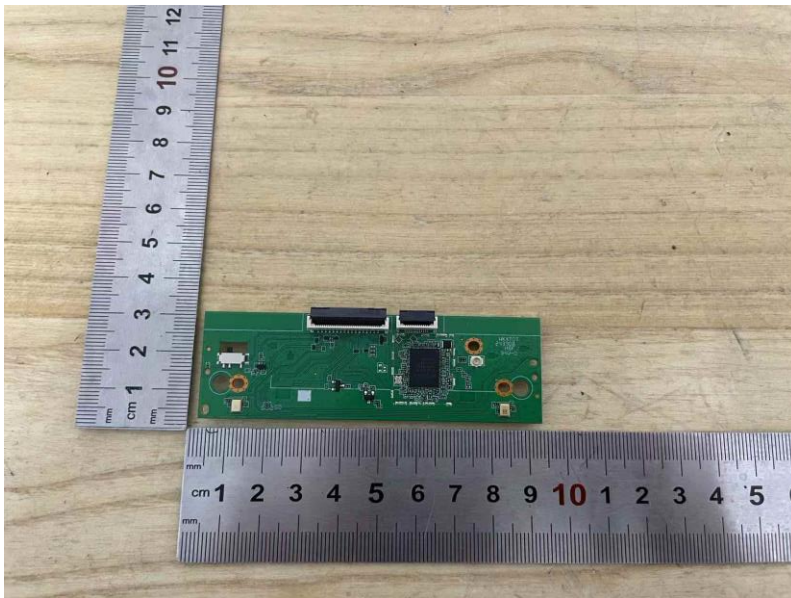


The Connector in the photo is no use , there are only three PIFA antennas from this module, for the antenna location, please refer to EUT Internal photo 2

EUT Internal Photo 2

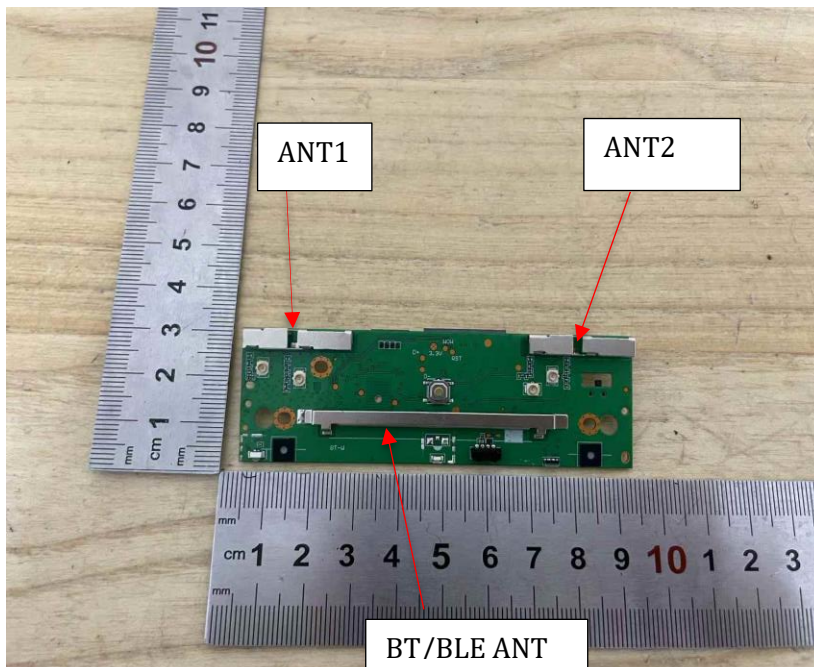

The four Connector in the photo are no use, there are only three PIFA antennas from this module

EUT Internal Photo 3

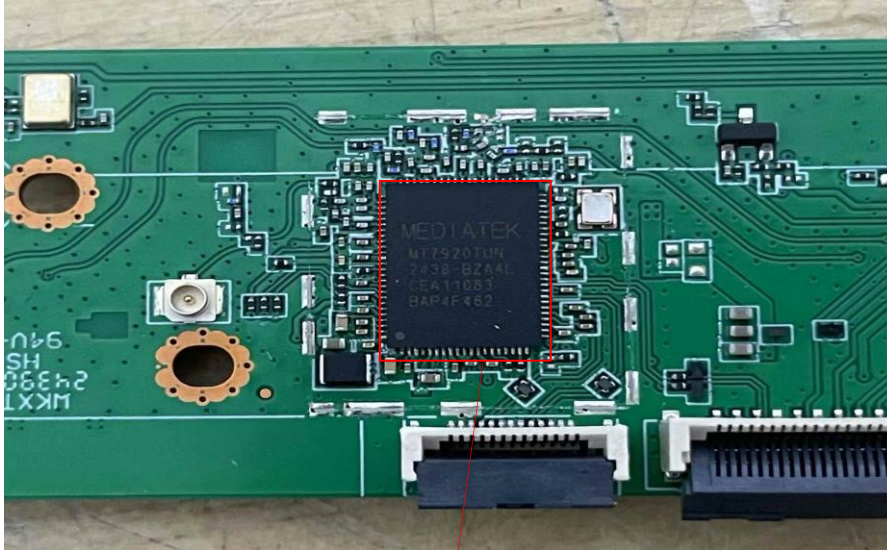

RF Chip