



Index


Power Failure

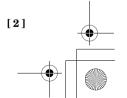





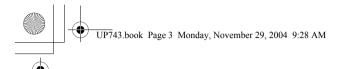

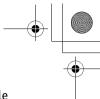

Welcome

Thank you for purchasing a Uniden Multi-Handset phone. This phone is compatible with Bluetooth enabled headsets. The USB connection lets you use your PC to edit your phonebook, download pictures and ringtones, and even import contacts from MicroSoft Outlook.

Note: Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit.




As an Energy Star[®] Partner, Uniden has determined that this product or product models meets the Energy Star[®] guidelines for energy efficiency.


Energy Star[®] is a U.S. registered mark.

Features

- 5.8GHz Direct Spread Spectrum
- Compatible with Bluetooth Enabled Headsets
- Integrated Answering Device
- Caller ID/Call Waiting Deluxe Options
- Customize Phone/Personal Profiles Using Computer (USB Cable and CD-Rom included)
- 100 Phonebook Names w/400 Numbers
- Downloadable Images
- Recordable Ringer Tones
- Text Messaging
- Calendar w/Reminders
- Battery Backup During Power Failure



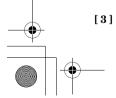


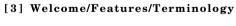







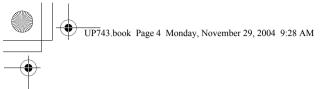

Uniden[®] is a registered trademark of Uniden America Corporation. AutoStandby, DirectLink, IntegriSound and Random Code are trademarks of Uniden America.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Uniden is under license. Other trademarks and trade names are those of their respective owners.

Terminology

•Standby mode: The handset is not in use. If it is off the cradle, no line has been activated. No dial

tone is present.

•Talk mode: A telephone line has been activated on the handset, enabling a dial tone.


Accessibility

Uniden provides a customer service hotline for accessibility questions. If you have a disability and need customer service assistance or if you have any questions about how Uniden's products can accommodate persons with disabilities, please call the accessibility voice/TTY line: 1-800-874-9314

A representative is available to talk to you M-F, 8:00 am to 5:00 pm, CST. After hours, you can leave us a message, and we will call you back. Information is also available on our website, www.uniden.com, under the "Accessibility" link.





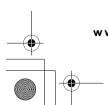




lcome/Features/Terminology












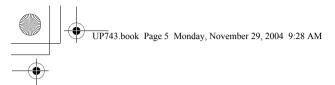


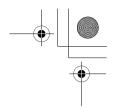


Controls & Functions

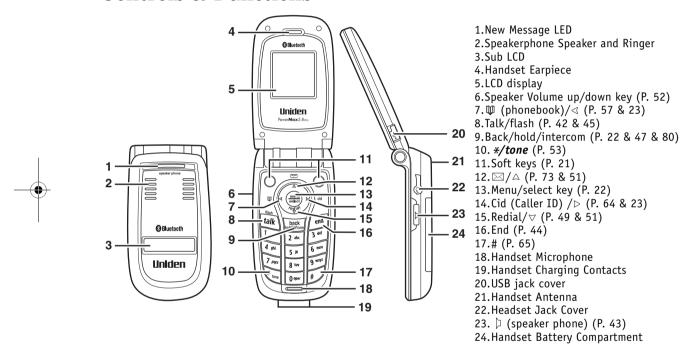

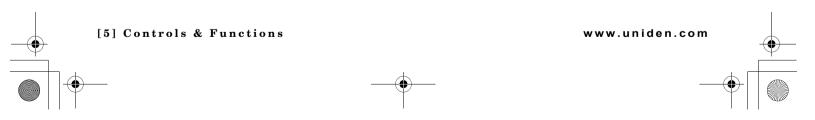

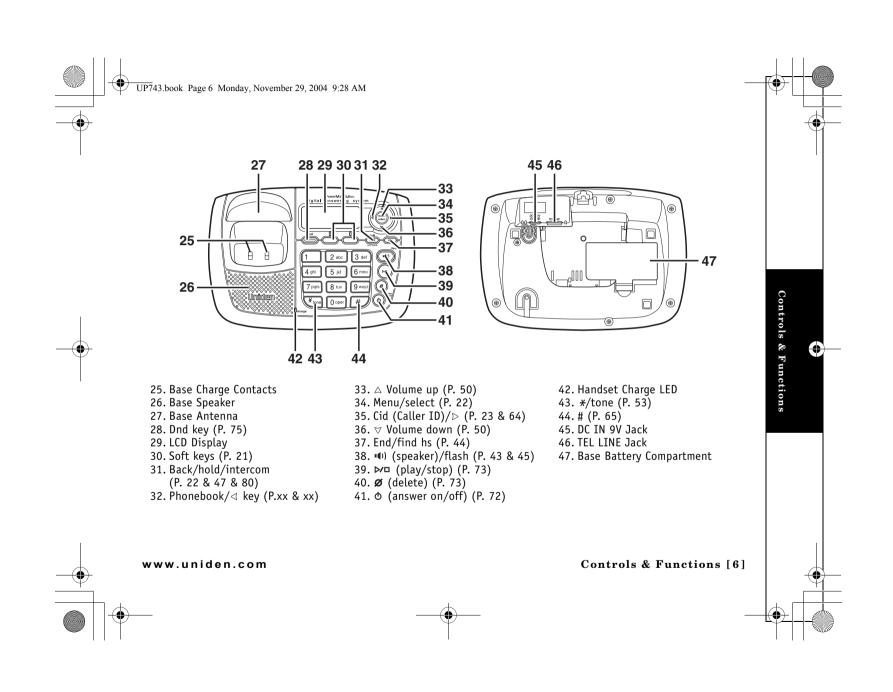




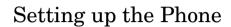

Choose the best location

When choosing a location for your new phone, here are some important guidelines vou should consider:

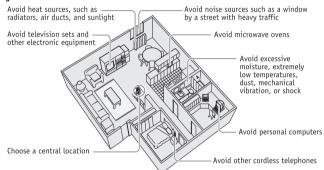

- The location should be close to both a phone jack and a continuous power outlet (one which is not connected to a switch).
- The base and handset should be kept away from sources of electrical noise such as motors, Microwave ovens, and fluorescent lighting.
- For better reception, place the base as high as possible.
- The base should be placed in an open area for optimum range and reception.
- If your home has specially wired alarm equipment connected to phone line, be sure that installing the system does not disable your alarm equipment.
- If you have questions about what will disable alarm equipment, contact your telephone company or a qualified installer.
- The base should be placed in an open area for optimum range and reception.



For maximum range:


 Do not hold the handset where you would block the signal.







 Metal and reinforced concrete may affect cordless telephone performance.



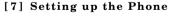



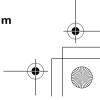

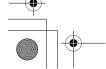








- tx appear if the battery pack is not installed in the base.
- •To use power backup feature, you need to connect the AC adapter to the base, and charge the base battery at least for 24 hours.
- •To make or receive a call, you must connect the AC adapter when setting up the phone.


Power Backup Feature

The phone uses the power backup feature to provide power backup for a power failure or outage.


Install the power backup battery in the base

- 1) Open the battery case cover by pressing the release button on the bottom of the base as shown.
- 2) Plug the battery connector (red and black wires) into the jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one way). Match the wire colors to the polarity label in the battery compartment, connect the battery and listen for a click to insure connection.
- 3) Make sure you have a good connection by gently pulling on the battery wires. If the connection is secure, the battery jack will remain in place.
- 4) Place the battery case cover back on the base.
- 5) Align the tabs on the cover with the grooves on the base, and press down the cover until it clicks into place.

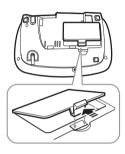

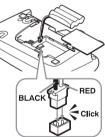


Setting up the Phone [8]

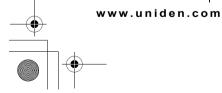





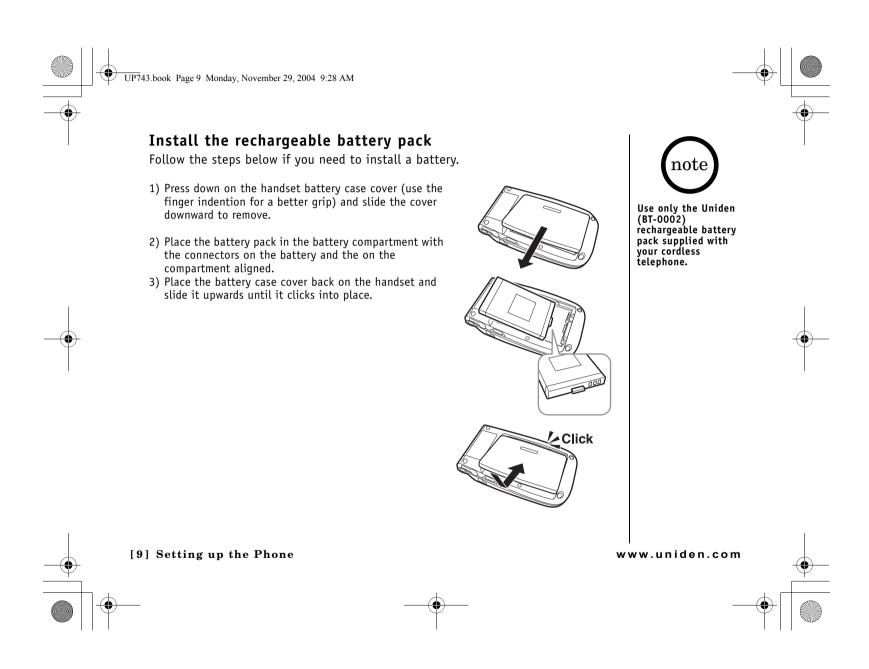


cradle.


www.uniden.com


alcohol, or other chemical products. Doing so

may discolor the surface of the telephone and

damage the finish.

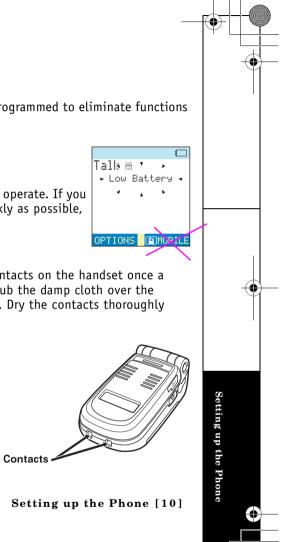

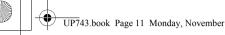

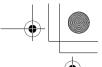



Connect the base unit and charge the handset


1) Connect the AC adapter to the DC IN 9V jack and to a standard 120V AC wall outlet. Connect the AC adapter to a continuous power supply (i.e., an outlet that is not controlled by a switch).


Place the base unit close to the AC outlet to avoid long extension cords.

2) Place the handset in the base unit with the top panel facing forward. (supplied) Connect the AC adapter to a continuous power supply (i.e., an outlet that is not controlled by a switch).

Place the base unit close to the AC outlet to avoid long extension cords.

- 3) Make sure that the **charge** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and the handset makes good contact with the base charging contacts.
- 4) Charge your handset at least 10 hours before plugging into the phone line.
- 5) Once the handset battery pack is fully charged, connect the telephone line cords to the **TEL** LINE jack and to a telephone outlets.

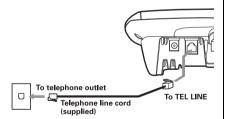

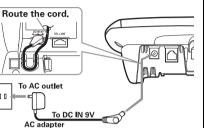



- Use only the supplied AD-0009 AC adapter. Do not use any other AC adapter.
- Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
- Don't place the base in direct sunlight or subject it to high temperatures. The battery may not charge properly.

for assistance.





If your telephone outlet isn't modular. contact your telephone company.








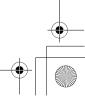


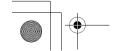



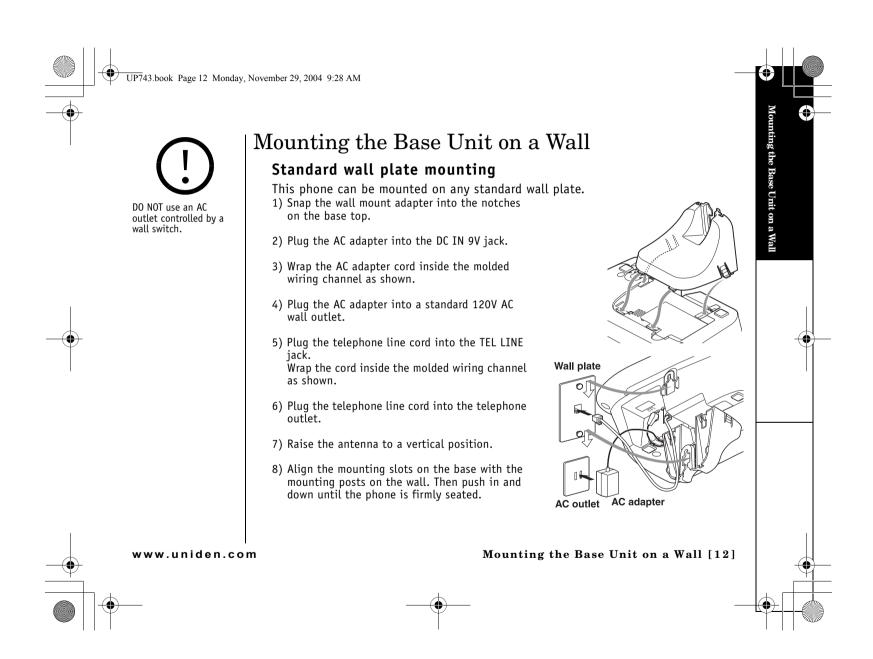



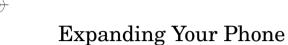

Your phone can support a total of ten handsets. Expansion handsets do not need to be connected to a phone jack. Expansion handsets allow you to use additional features such as DirectLink Mode and up to 5-way conference calling. Expansion handsets need to be registered to the base before they will operate.






- Advanced features may not be supported by older handsets (such as the TCX800/860).
- •If you have any trouble with your phone or if you need a part or accessory, call our Customer Hotline at 1-800-297-1023 (Mon-Fri 7 am to 7pm, Sat/Sun/holidays -- except US Thanksgiving and Christmas --9 am to 5 pm, CST) or visit our web site at www.uniden.com.





Your phone is compatible with other Uniden 5.8GHz Digital Expandable Handsets. Compatible models include the TCX860 and ELX500. Visit our website for updated model listings and feature compatibility information.





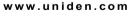

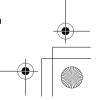

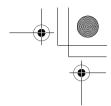

Register handsets

Before registering the extra handset, the battery pack MUST be charged for 10 hours.

Place the ELX500 handset in the main base unit to begin registration. You can also register the handset manually.

TCX860 Handsets Registering ELX500 handse

- 1) From the base, press menu/select and select System Setup menu.
- 2) Select Register Handset, and press menu/select.
- 3) On the handset, press and hold # until you hear beep.


Registering TCX860 Handsets


- 1) Press and hold the *Registration* button on the back of the base.
- 2) Keep pressing the **Registration** button on the base until the handset charge on main base start to blink.
- 3) On the handset, press and hold # until you hear beep.

While the handset is registering, Handset Registering will appear in the LCD. When Registration Complete is displayed, the handset has been registered to the base. If Registration Failed appears, please try these steps again.






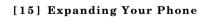

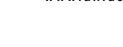




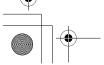




- Line up the groove on the back of the handset with the groove on the holster. It fits in the holster only one way.
- Use the spring clip to attach the holster to your belt or pocket.

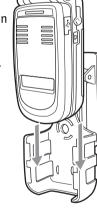



Changing the Digital Security Code [16]

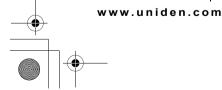







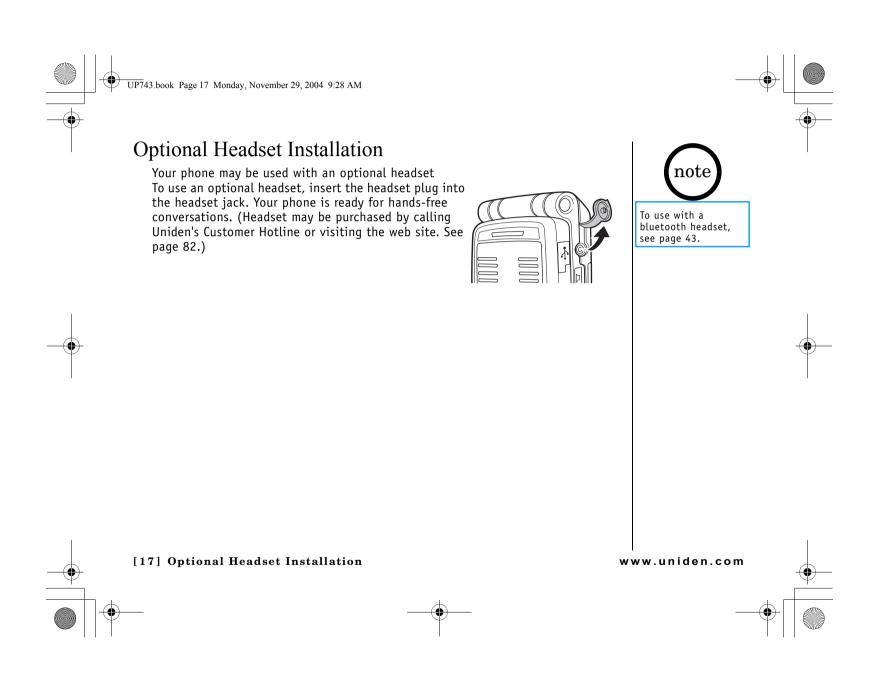

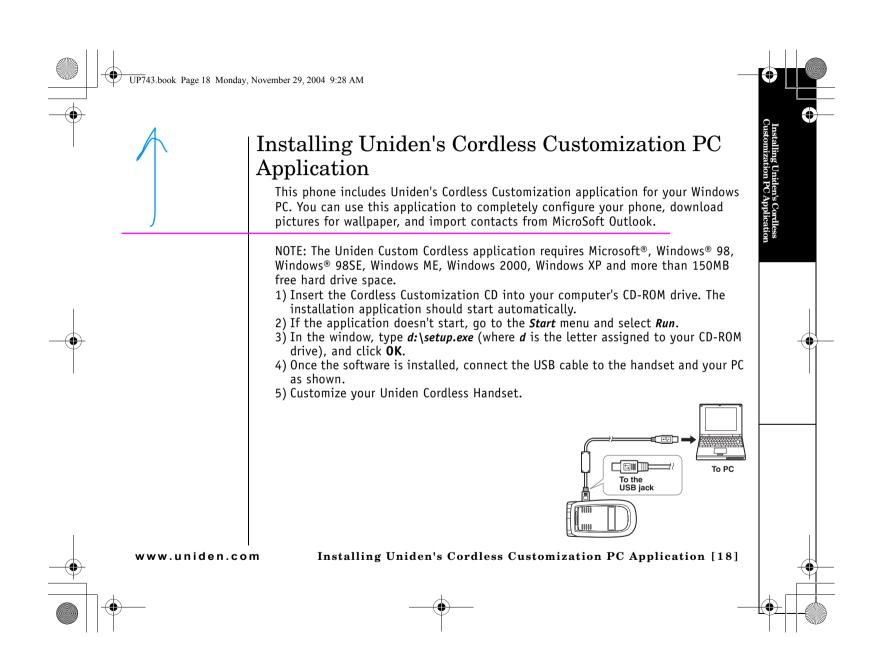

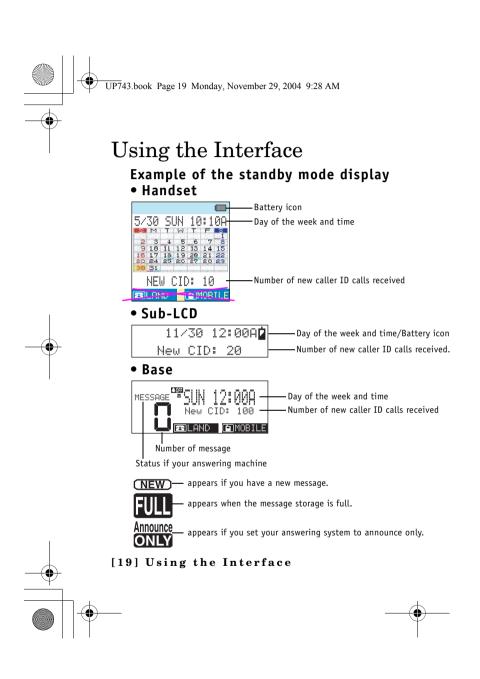

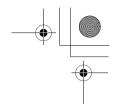






Display Icons

ICON			DESCRIPTION		
ICON			DESCRIFTION		
Handset	Base	Sub-LCD			
	-		Battery icons indicate the handset battery status. This icon cycles depending on the battery status (full, medium, low, and empty).		
₩ (₩ b ₩ %	AOFF AOFF AOFF RING	♣ :0FF	Ringer off icon indicates that ringer is turned off.		
* *	*	-	Bluetooth icon appear when you are using bluetooth features		
×	M	М	Mute icon appears when you mute the handset.		
())	-	())	Speaker icon appears when the handset speaker phone is used.		
\bowtie	-	-	When a new message is received, an envelope icon is displayed on the LCD screen		
P	P	P	Privacy icon appears when the Privacy Mode is turned on.		
0_0	00	R	Call record icon appears while recording a conversation.		

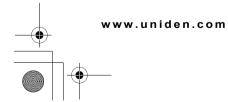


Using the Interface [20]










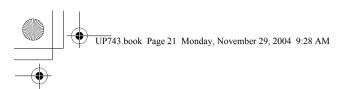

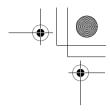

Soft Key Function


"Soft" keys are keys that change function during the operation of the phone. There are two soft keys on the handset and base.

The text right above the soft key indicates that key's current function. For example, when the phone is in standby mode, pressing soft key 1 on the handset make a selection. When the phone is in talk mode, pressing soft key 1 brings up up the options menu. Complete information on the features controlled by the soft keys can be found under each feature.

In standby mode Handset



In talk mode

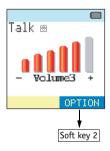



Base




[21] Using the Interface


SP-Phone 🖀 MESSAGE Volume OPTIONS Soft key 2






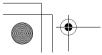




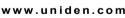

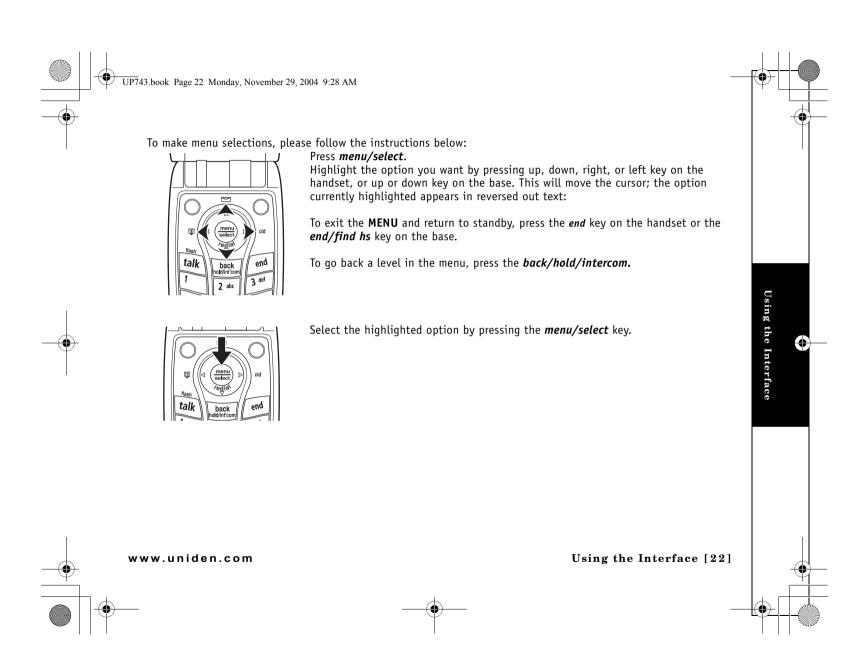



UP743.book Page 23 Monday, November 29, 2004 9:28 AM

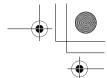



You can use the number keypad on your phone to enter text by referring to the letters printed on each number key. When you press the number key in a text entry field, the phone displays the first letter printed on the number key. Press the number key twice to display the second letter and three times to display the third. Capital letters are displayed first, then lower case letters, then the number on the key.

If two letters in a row use the same number key, enter the first letter, then use the right and left key to move the cursor to the next position to enter the second letter. For example, to enter Movies:


1	Press	6	once	to	enter	Μ.
	, , , , , , ,	v	Ulicc	LU	CIICCI	1.1.

- 2) Use right or left key to move the cursor to the right.
- 3) Press 6 six times to enter o.
- 4) Press 8 six times to enter v.
- 5) Press 4 six times to enter i.
 6) Press 3 five times to enter e.
- 7) Press 7 eight times to enter s.
- 8) Press right or left key to end your text entry.

	Number of times key is pressed								
keys	1	2	3	4	5	6	7	8	9
1	1								
2 abc	А	В	С	а	Ь	С	2		
3 def	D	E	F	d	е	f	3		
4 ghi	G	Н	I	9	h	i	4		
5 jkl	J	К	L	j	k	1	5		
6 mno	M	N	0	m	n	0	6		
7 pqrs	Р	0	R	S	Р	q	Ph.	S	7
(8 tuv)	Т	U	U	t	u	V	8		
9 wxyz	W	X	γ	Z	W	×	У	z	9
	8.	()	<	>	/	(blank)	_	_
0 oper		9	:	?	!	a	3	11	96
	#	0							


C)

If you make a mistake while entering a name, use right or left key to move the cursor to the incorrect character. Press the **DELETE** soft key to erase the incorrect character, and then enter the correct character. To delete all characters in the text entry field, press and hold the **DELETE** soft key.

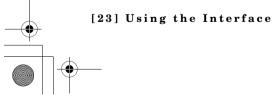






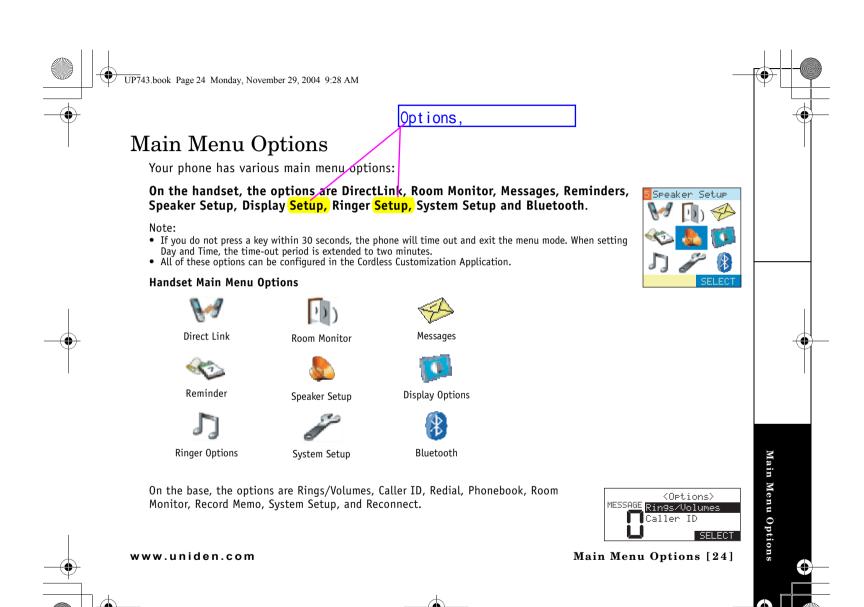





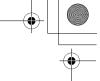

System Setup Menu

System Setup

The following submenu options must be set separately for each handset and the base.






Through this section we use handset display images for explanation.

LCD Contrast (For Base)

You can change the contrast of your base display to make it easier to read. You might want to adjust the contrast whenever you change the display color. Your phone gives you 10 levels of contrast to choose from. To adjust the contrast, go to LCD Contrast. Use up or right key to

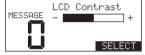


increase the contrast and down or left key to decrease the contrast. When you like the level of contrast, press menu/select to select it.


Open to Answer (Handset only)

Open to Answer lets you answer the phone by opening flip cover of the handset. To turn on Open to Answer, go to Open to Answer and select On. A confirmation tone tells you that Open to Answer is active.



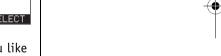

[25] System Setup Menu

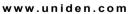











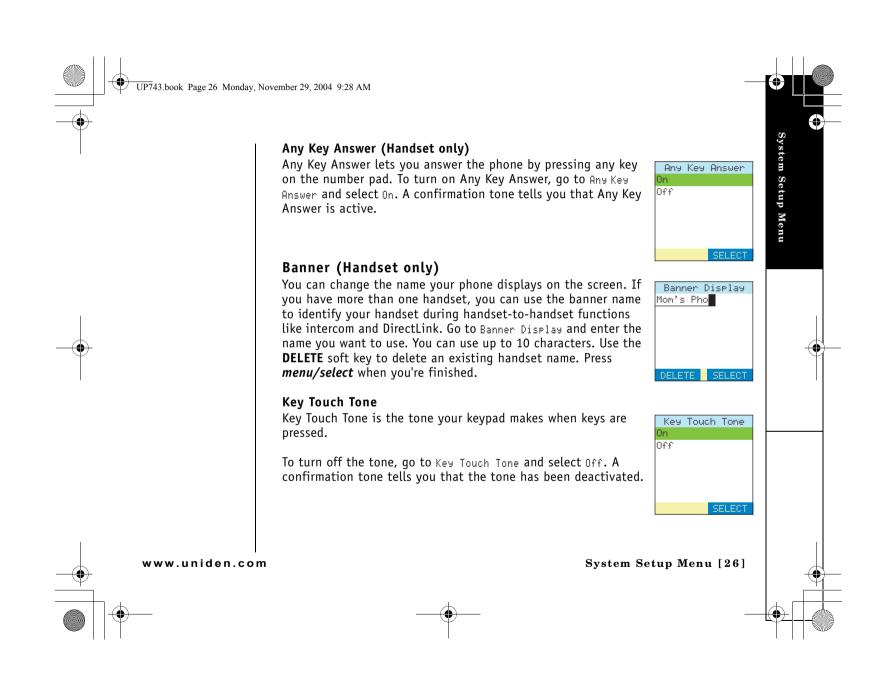

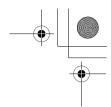

Call Privacy

If you don't want other registered handsets and the base to interrupt you on a call, you can turn on privacy mode. As long as your handset or the base is in privacy mode, other handsets won't be able to join your call or make any calls of their own. To turn on privacy mode, go to Call Privacy and select On. You can turn on privacy mode when the phone is in standby or when you're already on a call.



Language (For Base)


You can change the language the menu display will use. Choose from English, French, or Spanish. To change the language, go to Language and select English, Français (French), or Español (Spanish). You'll hear a confirmation tone, and the display will use the selected language.



Unique ID (Handset only)

You can assign special ringer tones to anyone in your phonebook. When your phone gets a call, it looks up the Caller ID information in your phonebook; if you've assigned a distinctive ringer and pictures to that number, the phone uses it so you know who's calling. To turn on distinctive ringing, go to Unique ID and select On. A confirmation tone tells you that distinctive ringing is active.




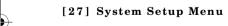











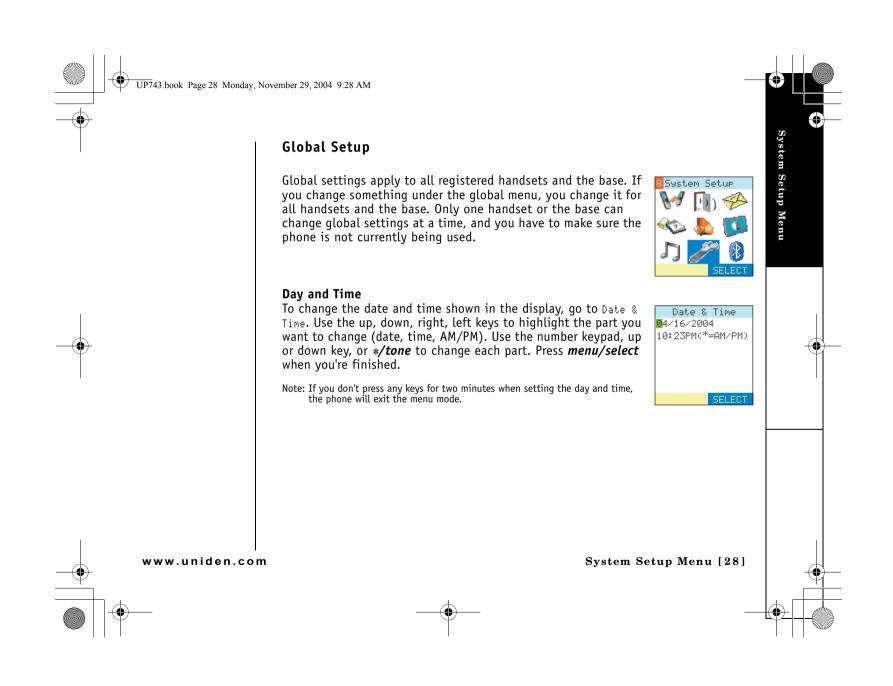


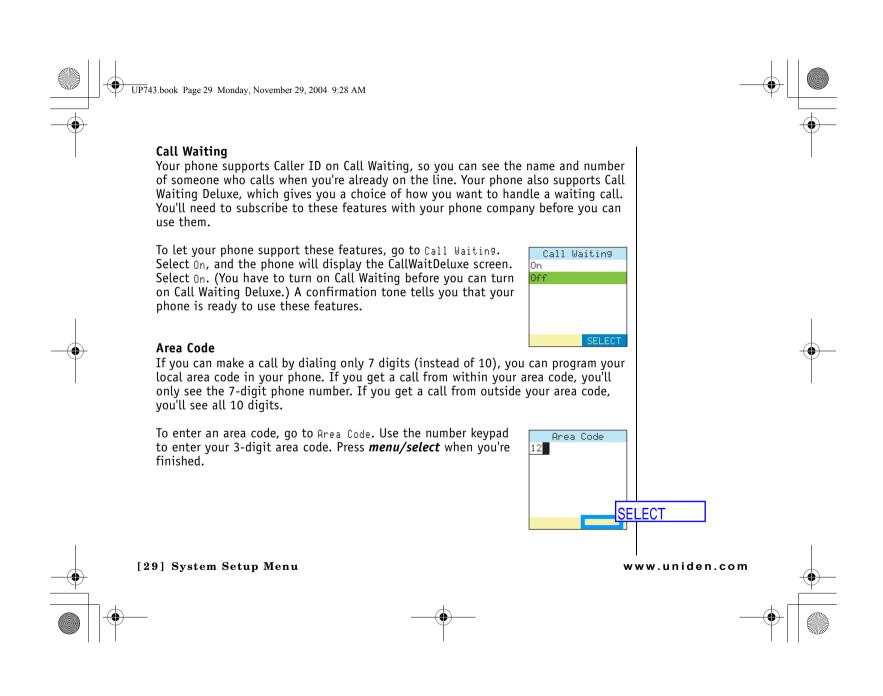


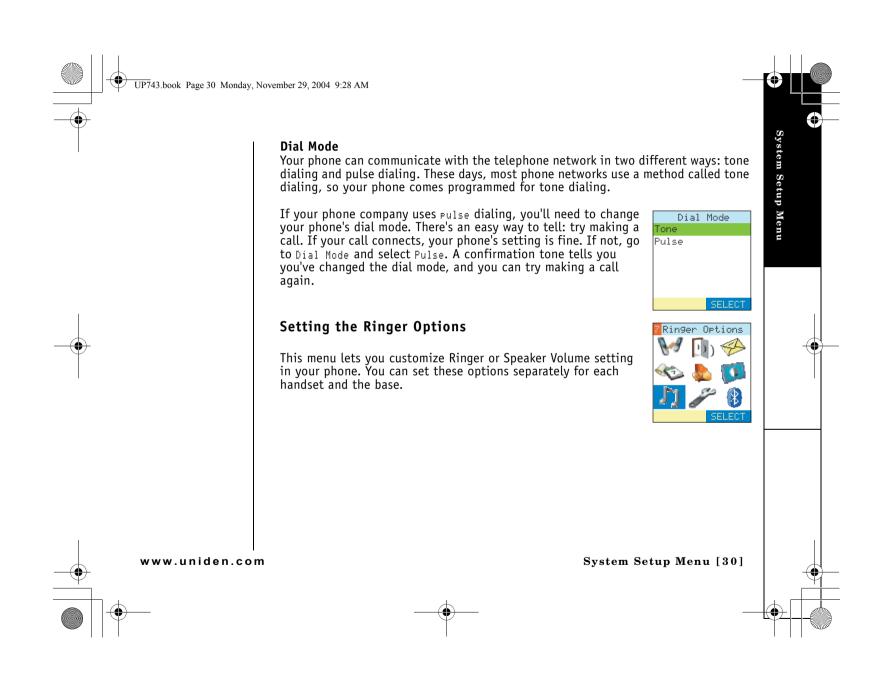

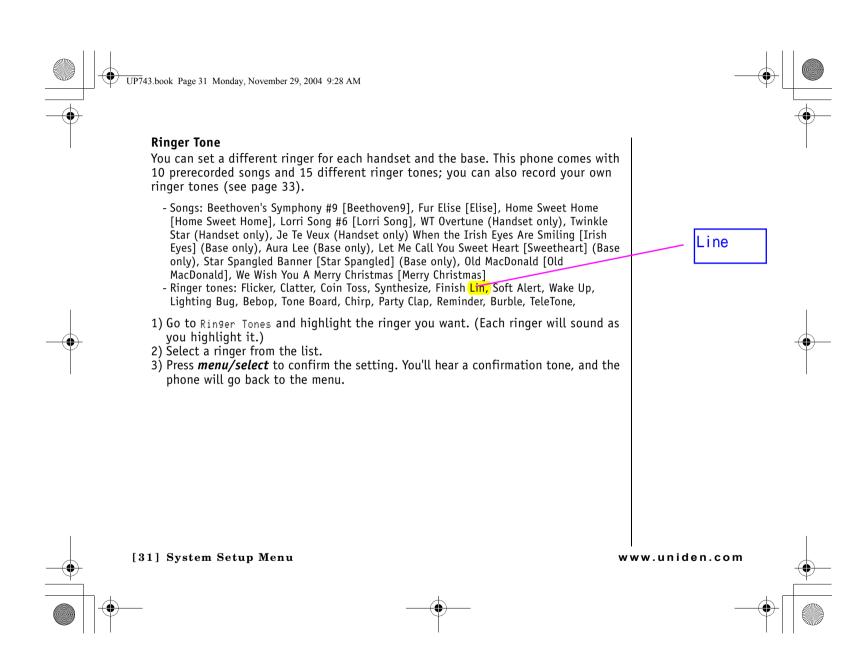

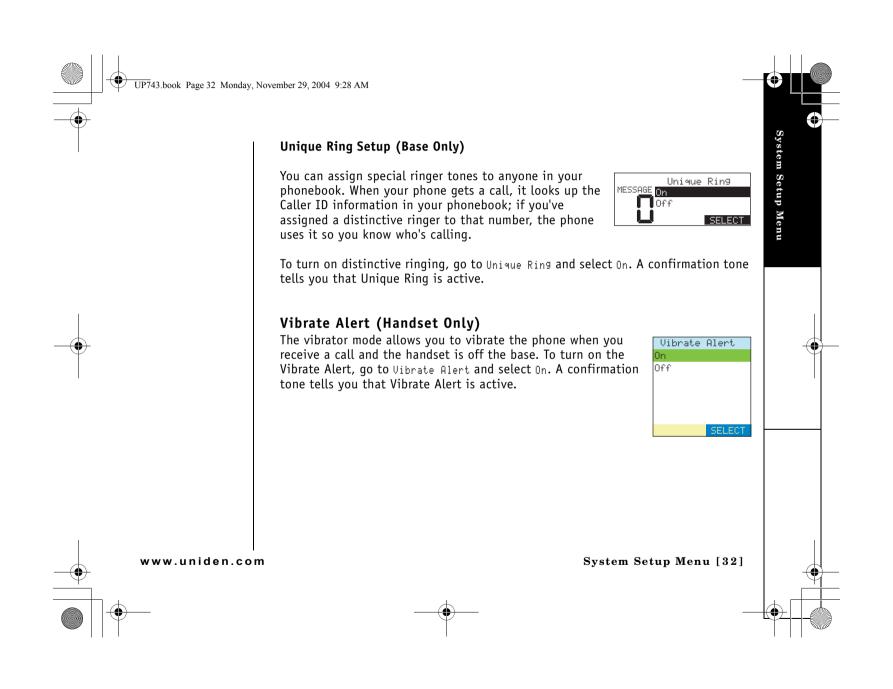

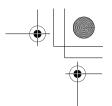


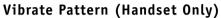

You can choose a vibrate pattern (4 patterns (1-4) and Off). To set Vibrate Alert, go to Vibrate Pettern and then select the pattern. A confirmation tone tells you that Vibrate Pattern is active.

Customize Your Own Distinctive Ringer Tones


Your phone can store up to 5 different recordings to use as ringer tones (a total of 100 seconds). Each recording must be less than 20 seconds long.

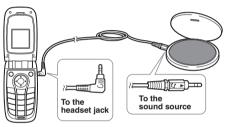

Storing Ringer Tones

- 1) Connect the audio recording cable to the handset and sound source (e.g. stereo or cd player). Insert one end of the audio recording cable into the handset's headset jack and the other end into the sound source. You can also simply use the handset's microphone by holding the handset close to the sound source.
- 2) Go to Rec/Edit Rings.
- 3) Select a location from 1-5, and press the **OPTIONS** soft key.
- 4) Use the up/down key to select Record. To start recording, press the **RECORD** soft key. The messag <mark>jer</mark> displays 20 and then begins to count down.



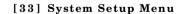










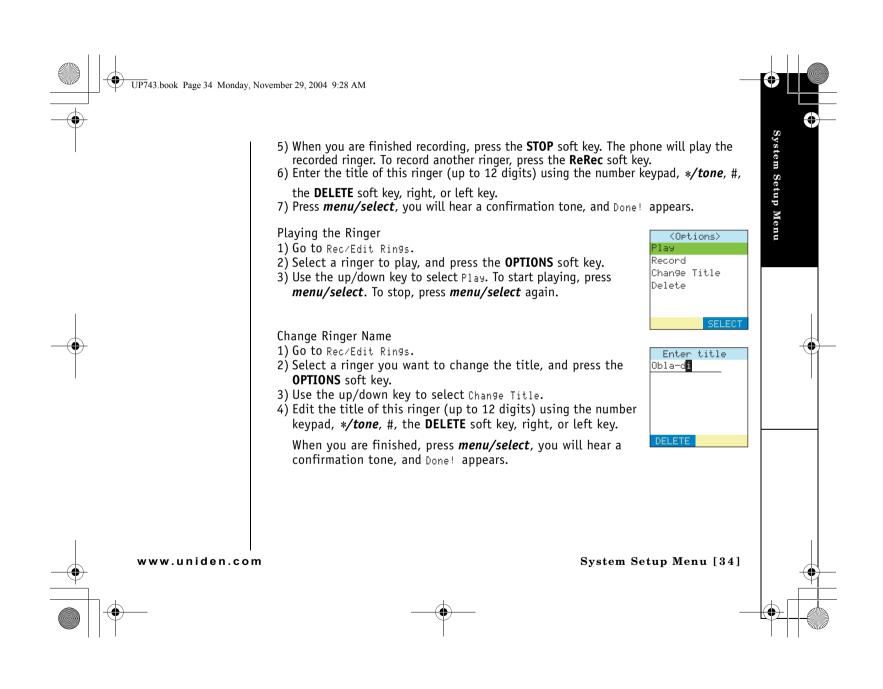

UP743.book Page 35 Monday, November 29, 2004 9:28 AM





To delete a ringer tone, go to Rec/Edit Rings, and select the ringer you want to delete. Press **OPTIONS** soft key. Use up/down key to select Delete. Select Yes. You will hear a confirmation tone, and Deleted! appears. The ringer is deleted from the list, and the phone stays on the ringer list.






You can not delete the ringer used for ringer tone, Unique ring, or Reminder.

Display Setting (Handset Only)

The following submenu options must be set separately for each handset.



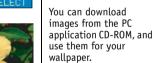

Themes (wallpaper)

Your phone has 30 different wall papers themes (example is Yellow flower). The wall paper will displays on the handset's LCD during standby mode:

To turn on the wallpaper, go to Wall Paper and highlight the wallpaper you want. Press the **VIEW** soft key to see the wallpaper or menu/select to activate it.





[35] System Setup Menu



















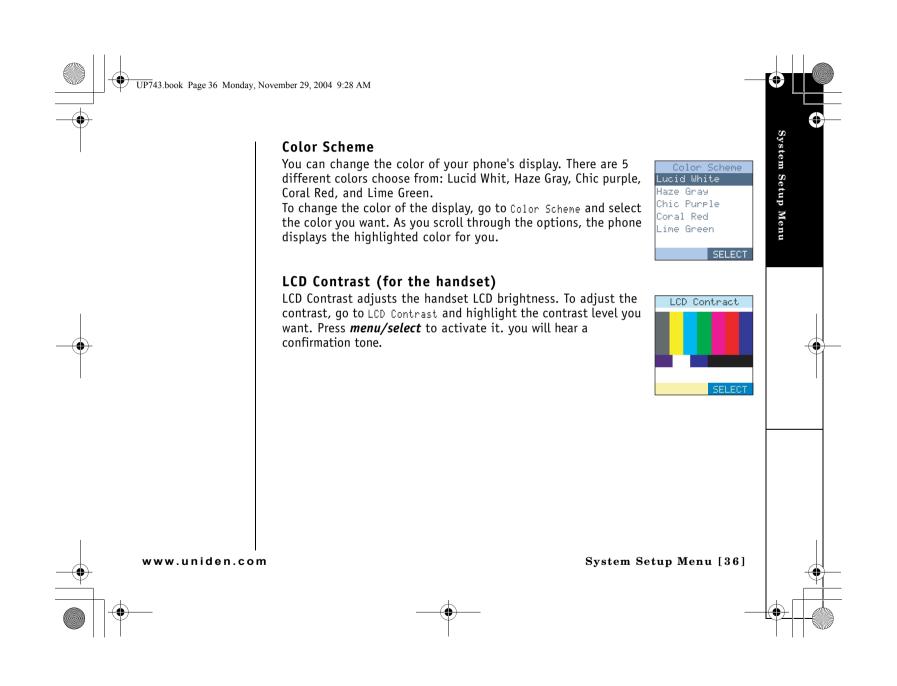

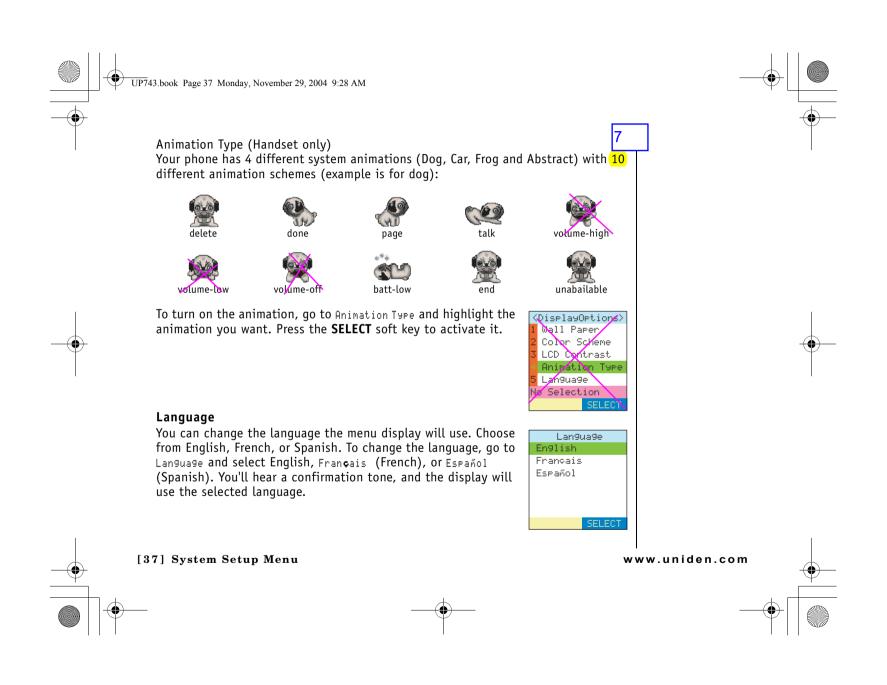

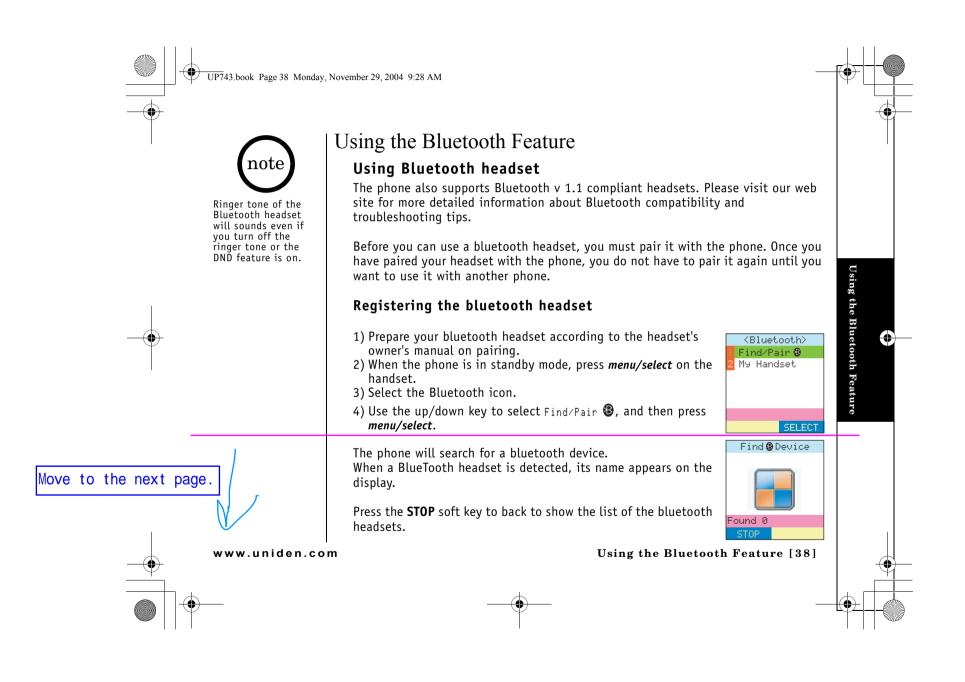

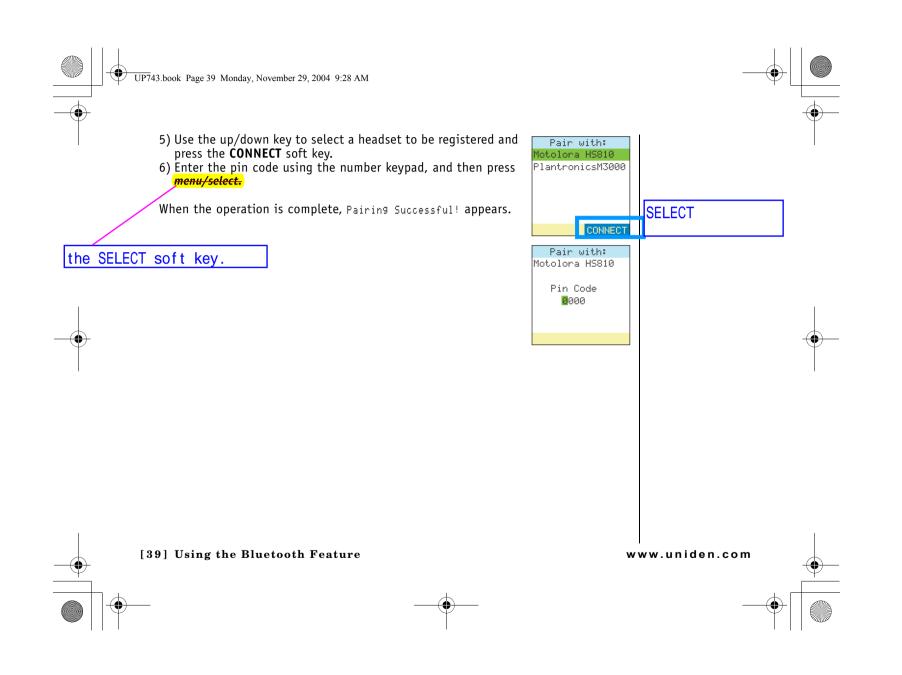

detected, Bluetooth

appears, the phone

goes back to the

Bluetooth setup

menu.

Device was not found.

Turning On or Off the Bluetooth Set Up

This feature allows you to save the power of the phone. When you do not use the Bluetooth feature for a long period, turn the Bluetooth Set Up to off.

- 1) When the phone is in standby mode, press *menu/select* on the handset.
- 2) Select the Bluetooth icon.
- 3) Use the up/down key to select **3** On/Off, and then press *menu/select*.
- 4) Use the up/down key to select <code>On</code> or <code>Off</code>, and then press <code>menu/select</code>.

Viewing Paired Headsets

To see all headsets that are paired to this handset, follow the steps below:

- 1) When the phone is in standby mode, press *menu/select* on the handset.
- 2) Select the Bluetooth icon.
- 3) Use the up/down key to select My Handset, and then press *menu/select*.


The handset name and serial number are displayed. To back to the Bluetooth setting display, press **back/hold/intercom**.




Using the Bluetooth Feature

www.uniden.com

Using the Bluetooth Feature [40]

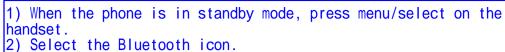

3) Use the up/down key to select {bluetooth icon} Headset, and then press <i > menu/select </i > .

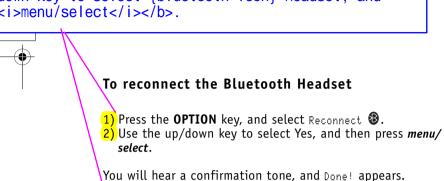


De-register the Bluetooth Headset


- 1) Press the **OPTION** key, and select Deregister **3**.
 2) Use the up/down key to select Yes, and then press *menu/* select.

You will hear a confirmation tone, and Deregistration Successful! appears.





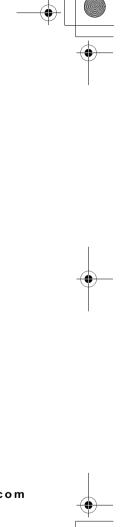

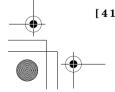

[41] Using the Bluetooth Feature









- •When you dial the number, hyphens are inserted between numbers.
- If the line is already in use, all registered handsets and the base that are not currently in use will display "In Use."
- For best performance, use the speaker phone in a quiet room and let the caller finish speaking before you speak. If you or the other party has difficulty hearing, adjust the speaker volume.


Using Your Phone

Making Calls

From the Handset

- 1) Remove the handset from the charging cradle.
- 2) Flip the top panel up.
- 3) Press talk/flash.
- 4) Listen for the dial tone.
- 5) Dial the number.

OR

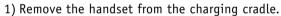

- 2) Flip the top panel up.
- 3) Dial the number.

If you need the phone to pause before dialing more digits (for example, to enter an access code or extension), press menu/select, and select Pause Entry from the list. P appears in the display, which represents a 2-second pause.


4) Press talk/flash.












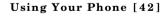


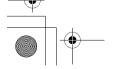




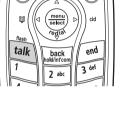

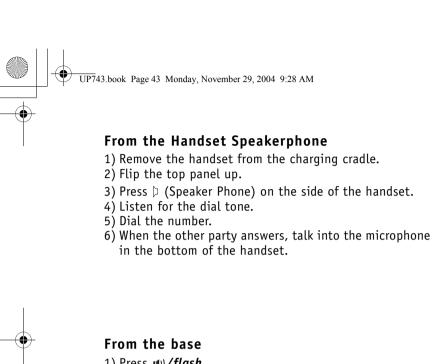

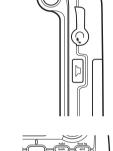



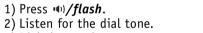


3) Dial the number.

OR

1) Dial the number. If pause is required, press menu/select, and select Pause Entry from the list.

2) Press • /flash or the LAND soft key for the Land line.

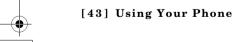







- •To set Open to Answer see page 25 or to set "Any Key Answer" see page 26.
- •If you plug a headset, or use the handset speaker phone, you can not hang up the call when you close the top panel.
- While using the handset speaker phone or a headset, closing the top panel will not hang up the call.
- •To scroll through the help, press the ▶ soft key.
- You must subscribe through your local telephone company to receive Call Waiting or Caller ID on call waiting service.

Receiving a call/AutoTalk set to OFF

	Handset is in the cradle	Handset is off the cradle
	1) Remove the handset from the	1) Flip the top panel up.
	charging cradle.	2) Press talk/flash.
	2) Flip the top panel up.	If Any Key Answer is set to On, you can
	3) Press talk/flash.	also press any number key on the
Г	If Open to Answer is ON, the phone will	· ·
	automatically answer the call when you	
	flip the top panel up.	
	_ (Se	e pagexx)

From the hase

Press • / /flash.

Hanging Up

From the handset or handset speakerphone, press **end** or return the handset to the cradle (AutoStandby). Or close the top panel. From the base, **end/find hs**.

Switching to the Handset Speakerphone During a Call

To switch a normal call to the speakerphone, press \triangleright (speaker phone) on the side of the handset. To switch from a speakerphone call to a normal call, press \triangleright (speaker phone).

www.uniden.com


Using Your Phone [44]










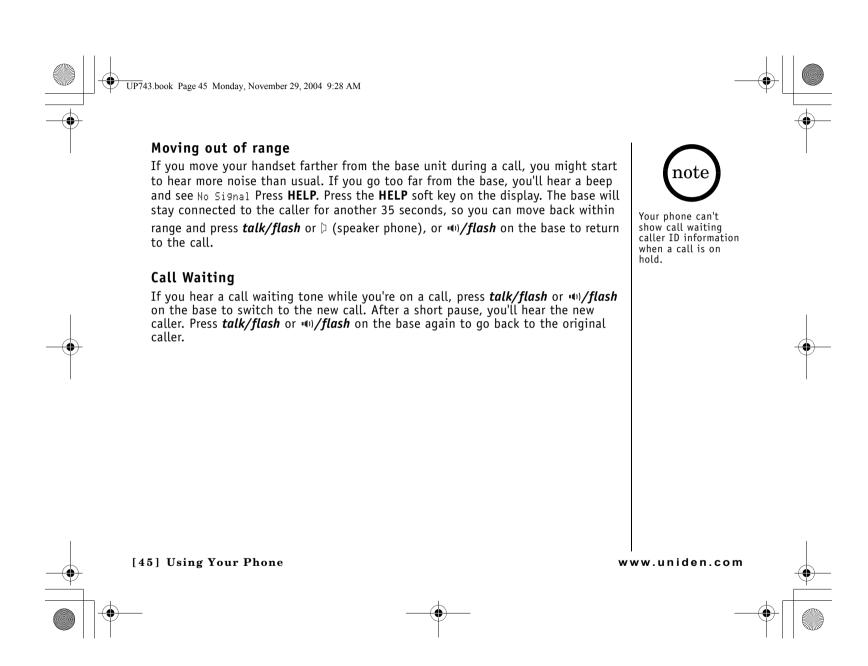

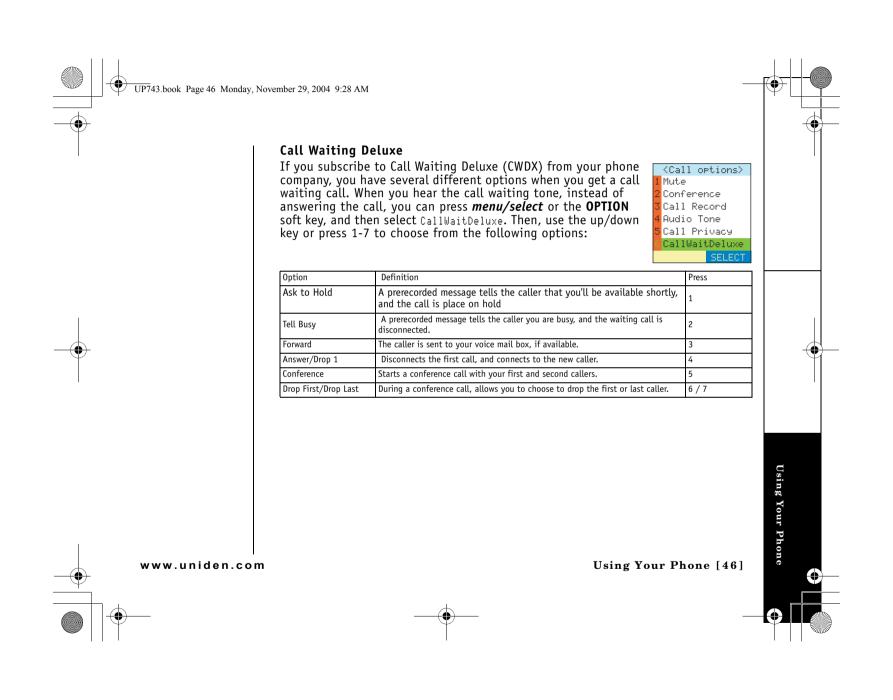

UP743.book Page 47 Monday, November 29, 2004 9:28 AM





Placing a Call on Hold

During a call, press. Press back/hold/intercom, end, or end/find hs on the base to put the call on hold. Press talk/flash or •0)/flash on the base to go back to the call.







Conferencing

If you have more than one handset, up to four people can participate in a conference call.

- 3-Way Conferencing
- Outside line + Handset + Base (or Handset)
- 4-Way Conferencing
- Outside line + Handset + Handset + Base

Joining a Conference Call

You can easily join a call already in progress.



- •If you leave a call on hold for more than 5 minutes, warning tone sounds and Hold Reminder! Answer held line appears, and the line will disconnect in 15 seconds.
- •If someone is using another handset or base in Privacy Mode, Unavailable appears in the display and you cannot join the call.






[47] Using Your Phone



www.uniden.com



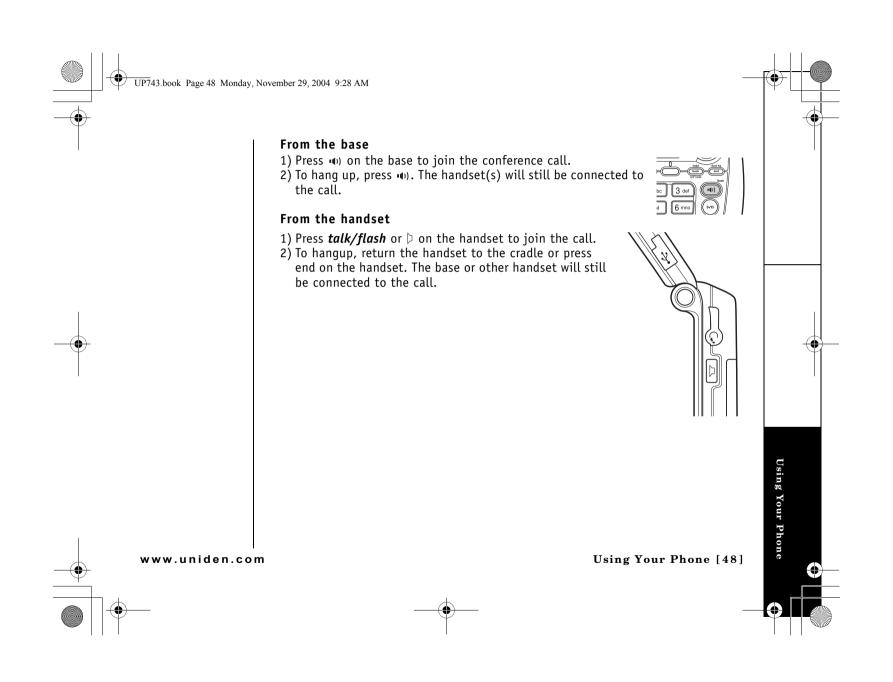

UP743.book Page 49 Monday, November 29, 2004 9:28 AM










You can quickly redial the last 20 phone numbers for each handset and 10 numbers for the base.

With the phone in standby mode, press *redial*/∨ on the handset (or press menu/select, and then select Redial on the base). This brings up the redial list. Use the up/down key to scroll through the numbers, and select the number you want to dial.

Press *talk/flash* (or) or • */flash* on the base to dial the selected number.

You can also display the list for redial number with the phone in talk mode. After select the redial number, press the **DIAL** soft key to redial the number.

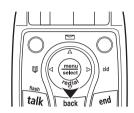







- •Each redial record can store up to 32 digits.
- To store redial numbers in the Phonebook, see page 60.



Deleting Redial Records

If you want to delete a phone number from the redial list, go to the redial list in standby mode, and select the number you want to delete. Press the OPTIONS soft key, and select Delete Selection, and then Yes. If you want to delete all the redial records, select Delete All, and then Yes.

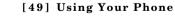


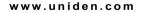









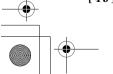

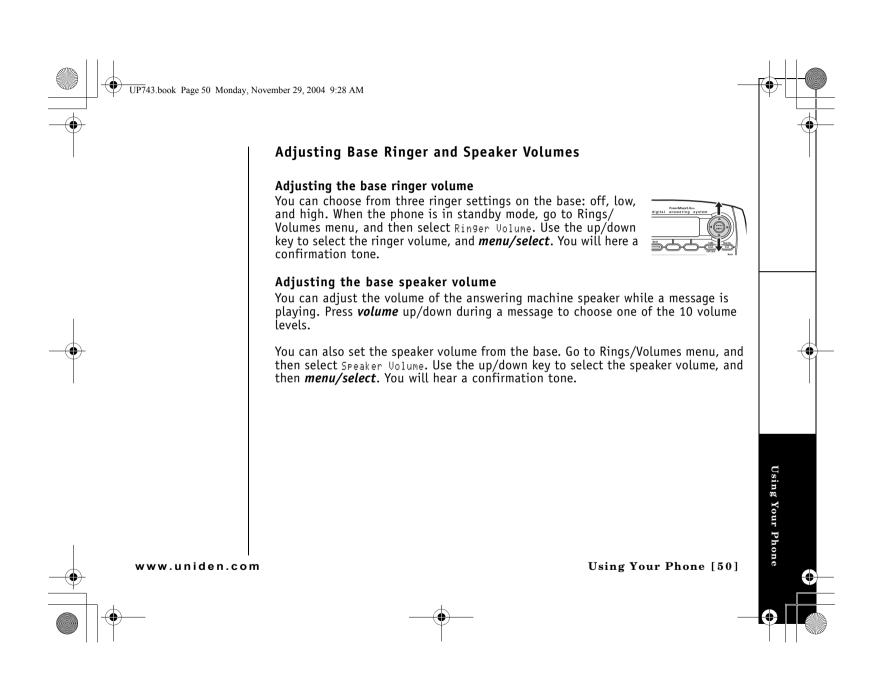

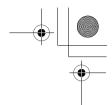


Using the Handset Volume Setting Menu

Ringer: Adjust the handset ringer volume


You can choose from three different ringer volume settings on your handset: off, low, and high. When the phone is in standby mode, go to the Rings/Volumes menu, and then select Ringer Options. Use the up/down key to select the ringer volume, and *menu/select*. You will here a confirmation tone.



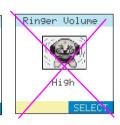

Ear speaker: Adjust the handset earpiece volume During a call.

You can choose from six volume levels for the earpiece speaker. To adjust the earpiece volume, go to Speaker Setup menu, and select Earpiece Volume and select the volume level you want to use.

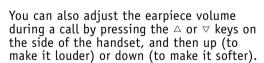



Ringer Options







[51] Using Your Phone







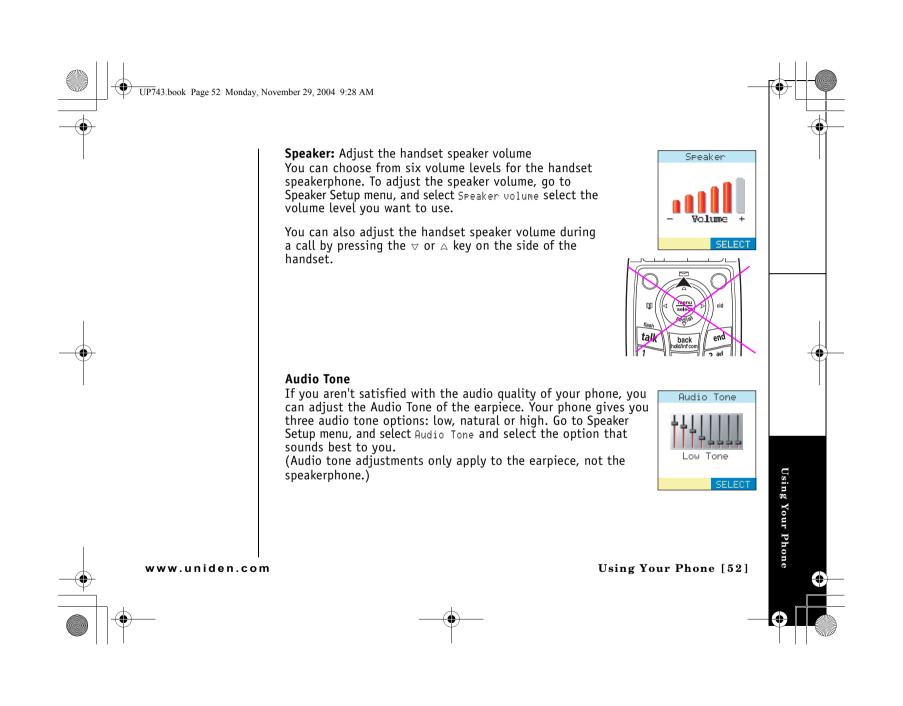

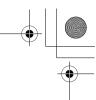

Mute

While the handset is ringing, you can mute the handset ringer for this call by pressing *end* on the handset. To mute the base ringer, press ⋈□ on the base. The phone will ring again on the next call.



You can only mute the handset ringer if the handset is off the base when the phone starts ringing.

Mute the Handset Microphone


When you're on the phone, press the **OPTIONS** key and select Mute to turn off the microphone so the caller can't hear you. The display shows Min while the microphone is muted. To turn off muting, repeat the above storagain.

Tone Dialing Switch Over

If your telephone company uses pulse dialing, you can switch over to tone dialing after the call connects. This feature is useful when you need tone dialing to use any automated menu systems, such as telephone bank tellers, telephone prescription refills, customer support menus, etc.



If your phone is set to pulse dialing mode, make your call normally. Once your call connects, press the */tone key. Any digits you enter from then on will be sent as tone digits. When this particular call ends, the phone automatically returns to pulse dialing mode.

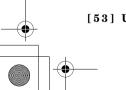


[53] Using Your Phone



www.uniden.com



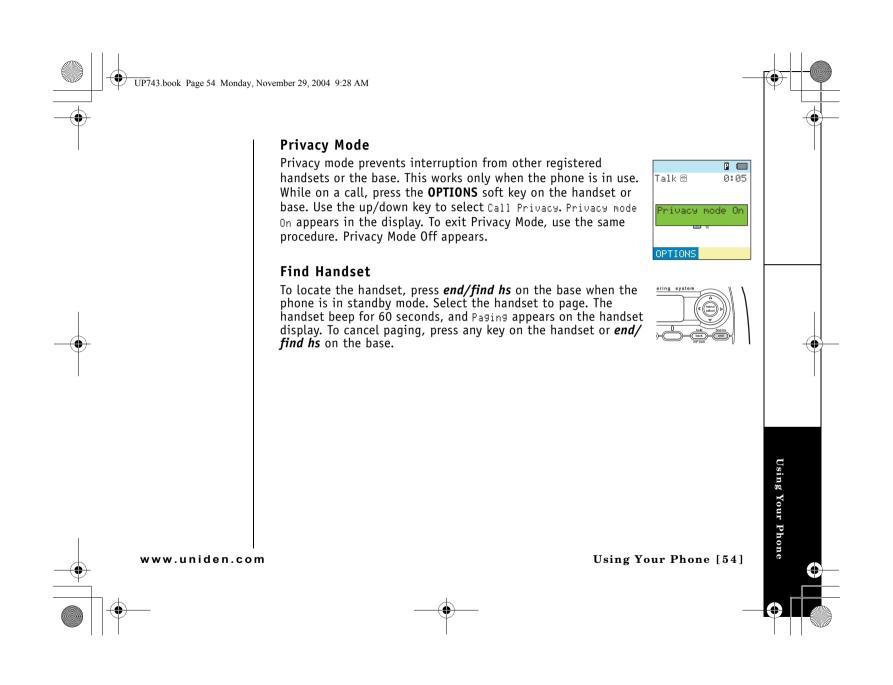



UP743.book Page 55 Monday, November 29, 2004 9:28 AM

Date & Time must be set to access Calendar menu option. To set Date & Time, scroll to Global System Setup options.



Your phone has a built-in calendar that you can use to schedule reminders and appointments (all the way through December 31, 2099). You can set alarms for up to 30 different events. A pop-up screen appears and reminder tone sounds when the scheduled time & date comes. To show detailed info on the reminder, press *menu/select*. To mute the reminder tone, press the **MUTE** kev.




To reset the reminder and clear the screen, press **end** when reminder tone stops. To dismiss Reminder display press DISMISS appears. Press the **DIMISS** soft key. The phone return to standby mode.

Scheduling a reminder


Select the reminder option to show Reminder (Calendar). Today is highlighted. If the reminder is set for the morning, a bar appears lower left of the date number; if the reminder is set for the afternoon or evening, a bar appears lower right of the date number. Use up, down, right or left key to move the cursor to the date.



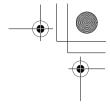


Inote


Before using this feature, vou must set date and time (see page 24).

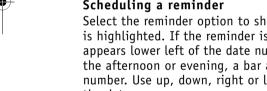

[55] Reminder (Handset only)




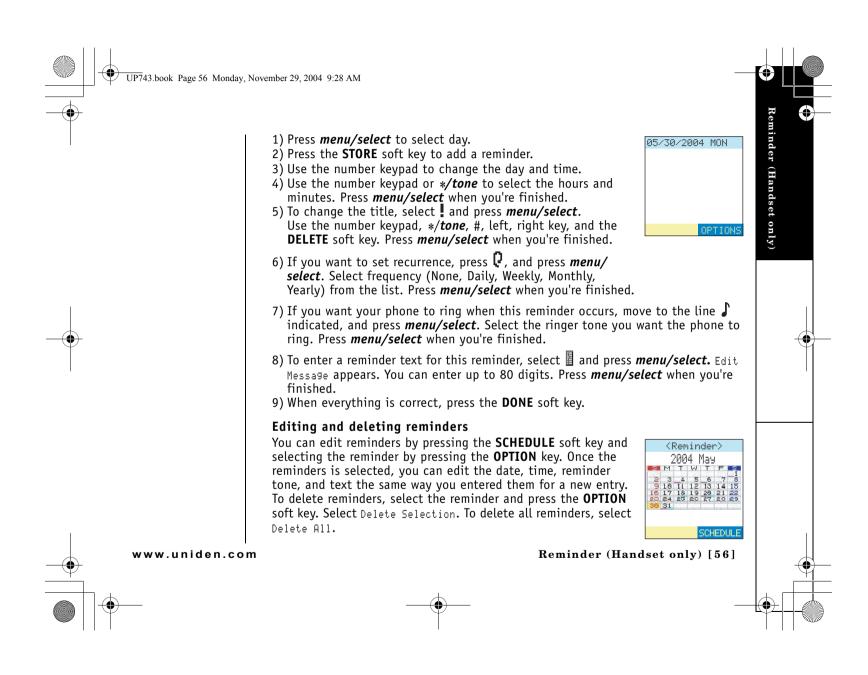

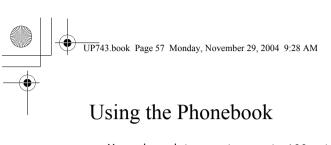

Your phone lets you store up to 100 entries in each handset and base. You can store up to 4 phone numbers for each name in your phonebook (for a total of 400 numbers), and you assign names to groups for easy searching. You can store a distinctive ringer tone, picture display, and backlight color to your each or group.


You can enter your phonebook by Pressing the phonebook key on the handset or base.

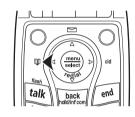

Creating and Editing Phonebook Entries

Press the phonebook key and press the **OPTIONS** soft key. Select New Entry to store, or Edit Selection to edit the location. Enter as much of the following information as you want. Press *menu/select* to enter each entry and confirm the selection. When you're finished, press the **DONE** soft key to save this phonebook entry.



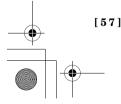



[57] Using the Phonebook







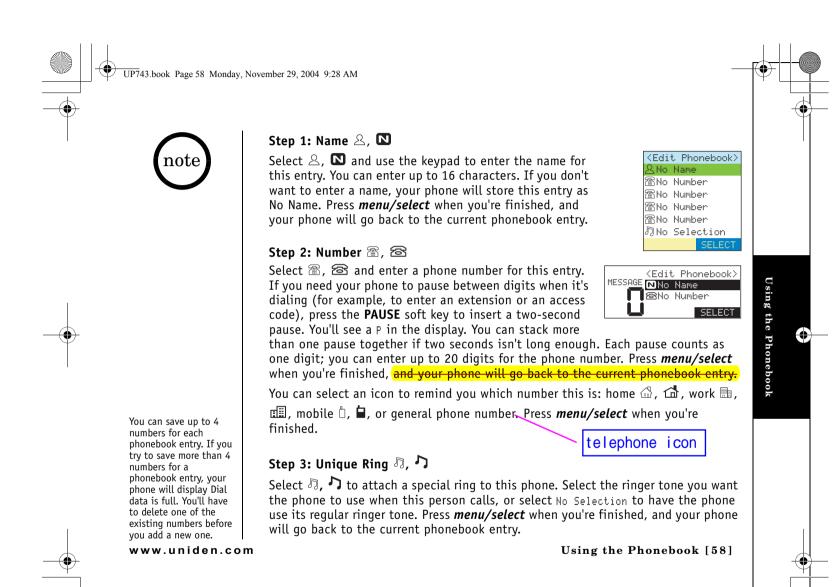

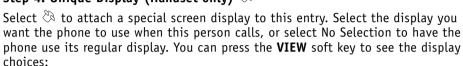

Press *menu/select* when you're finished, and your phone will go back to the current phonebook entry.


Step 5: Phonebook Group 🕾 , 🔼

Select &, A to place this entry into a phonebook group. Select the group (0-9) you want this entry to belong to, or select No Selection to leave the entry outside of any group. Press *menu/select* when you're finished, and your phone will go back to the current phonebook entry. See page 62 for information on creating and editing groups. To select a group, see page 62.

Step 6: Speed Dial A, 🕰

Select **0-9** to save this number to one of the 10 speed dial numbers or No Selection if you don't want to save it to a speed dial number. If there's already a phone number saved to the speed dial number you select, your phone will ask if you want to overwrite the number. Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry.



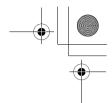



Go to the phonebook and select the entry you want to delete. Press the **OPTIONS** soft key and select Delete. Use the up/down key to select Delete Selection. Your phone will ask you to confirm select Yes.

To delete all the entries from your phonebook, go to the phonebook and press the **OPTIONS** soft key without selecting an entry. Select Delete, and then Delete All. Your phone will ask you to confirm select Yes.

Copying phonebook entries to another handset

When you copy entries to another handset or base, the group and speed dial information won't be transferred. Your phone will cancel the copying process if any one of the following things occurs:

- -- If the handset you are copying to doesn't have enough memory (the phone will show "Not enough memory in receiving unit").
- -- If the handset you are copying to already has that phone number in its phonebook.
- -- A call comes in during the copying process.

To copy a single entry, go to the Phonebook and select the entry you want to copy. Press the **OPTIONS** soft key and then Copy Selection. Select the handset or base you want to copy to the entry to.

To copy all the phonebook entries, go to the phonebook and press the **OPTIONS** soft key without selecting an entry. Select then Copy All. Select the handset or base you want to copy to the entry to.



