

2

4


6

6

Hisense


If there is no sound output in Optical and Coaxial mode, ensure the audio setting of the input source (e.g. TV, games console, DVD player, etc) is set to PCM or Dolby Digital Signal with Optical and Coaxial output.
 The eco-friendly technology will switch this device to Standby mode automatically when the input device volume is too low or muted for 15 minutes. The device can be reactivated by pressing Standby button and turning up the input device volume. Except for Optical and Coaxial mode, the eco-friendly control will switch the device to standby mode automatically when there is no input signal for 15 minutes.
 The EQ has been set to fit most occasion. However, you may press the EQ button on the remote control to adjust the EQ setting for optimal sound output effect for different video programs.



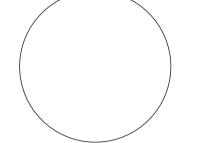

CAUTION AVIS
RISK OF ELECTRIC SHOCK PRODULE DE CHOC ÉLECTRIQUE
OF NOTO TOPEN
RISK OF ELECTRIC SHOCK PRODULE DE CHOC ÉLECTRIQUE
PER SOLOMBRI

Rear View\_Unit

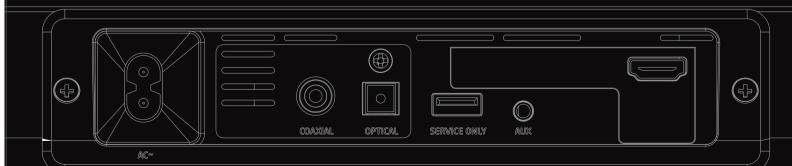

Hisense

If there is no sound output in Optical and Coaxial mode, ensure the audio setting of the input source (e.g. TV, games console, DVD player, etc) is set to PCM or Dolby Digital Signal with Optical and Coaxial output.

The eco-friendly technology will switch this device to Standby mode automatically when the input device volume is too low or muted for 15 minutes. The device can be reactivated by pressing Standby button and turning up the input device volume. Except for Optical and Coaxial mode, the eco-friendly control will switch the device to standby mode automatically when there is no input signal for 15 minutes.

The EQ has been set to fit most occasion. However, you may press the EQ button on the remote control to adjust the EQ setting for optimal sound output effect for different video programs.

