

EE2928FBLKPRIFOBUK – Wireless Tower Speaker Black

Instruction manual

Please read all of the instructions carefully and retain for future reference.

[3 MM CAPS] Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Keep the product and its accessories out of the reach of children.

Keep small parts away from children as these may present a choking hazard.

Children under 8 years should be supervised to ensure that they do not play with the product.

This product is not a toy.

This product contains no user serviceable parts. If the product and any of its accessories are malfunctioning or damaged; the product should be recycled.

Keep the product and its accessories away from heat sources, direct sunlight, humidity, water and any other liquid, or sharp edges that could cause damage.

Ensure the product is well-ventilated.

Do not leave any objects susceptible to magnetism (cash cards etc.) near the product.

Do not operate the product with wet hands.

Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product.

Do not use the product for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not put objects into any of the openings.

This product is intended for domestic use only. It should not be used for commercial purposes.



To prevent possible hearing damage, do not listen at high volume levels for long periods of time – this may also damage the product.

Note: It is advised that the product is not used whilst charging, as this could reduce the life of the battery.

[3 MM CAPS] Battery Safety

The supply terminals are not to be short-circuited.

In the event of a battery and cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Do not use any cell or battery which is not designed for use with the product.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Keep batteries out of the reach of children.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not expose batteries to heat or fire as they may explode.

Do not subject batteries to mechanical shock.

Do not dispose of exhausted batteries in household waste.

Once the batteries have been exhausted, dispose of the product at a local recycling station. Contact the local government offices for further details.

This product is fitted with a 3.7 V 1200 mAh rechargeable battery (non-removable).

UP Global Sourcing UK Ltd. hereby declares that this product is in compliance with the essential requirements and other provisions of directive 2014/53/EU.

The declaration of conformity may be consulted at UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK. or online at <https://www.intempo.co.uk/declaration-letters.html>. Model No. EE2928

[3 MM CAPS] Care and Maintenance

Wipe the speaker with a soft, lint-free cloth and allow to dry thoroughly.

Do not:

Use any abrasive cleaning solvents to clean the speaker.
Expose the speaker to extremely high or low temperatures.
Drop the speaker.
Attempt to disassemble the speaker.

Description of Parts

1. Wireless Tower Speaker
2. Speaker
3. Play/Pause/Hands-free (I>II)
4. Mode Button (**M**)
5. Volume/Skip – Button (–/I<I<I)
6. Volume/Skip + Button (+/I>I>I)
7. Built-in Hands-free Microphone
8. LED Indicator Light
9. On/Off Switch
10. 5 V **[INSERT DC SYMBOL HERE]** Charging Port
11. Aux. Input Port
12. USB Port
13. Micro SD Card Slot
14. USB Charging Cable
15. Line-In Aux. Cable

Instructions for Use

Charging the Battery

The speaker is fitted with a 3.7 V 1200 mAh rechargeable battery (non-removable). It is recommended that the battery is fully charged before first use; this will take approx. **2 hours**. Connect the micro USB end of the USB charging cable into the 5 V **[INSERT DC SYMBOL HERE]** charging port on the speaker and the other end to a compatible USB port. Whilst charging, the LED indicator light will illuminate red. Carefully disconnect both ends of the USB charging cable and store it safely for future use.

*** Maximum playtime based on 20 % volume.**

Using the Wireless Tower Speaker

Basic Functionality

Turn on the speaker by sliding the on/off switch to the 'On' position.
Pause a track by pressing 'PLAY/PAUSE/HANDS-FREE'; push it again to resume the track.
Adjust the volume of the speaker using '+' and '–'. Press and hold '+' to increase the volume; decrease the volume by pressing and holding '–'.
To switch to the next track, press '+'; play the previous track by pressing '–'.
Cycle between functions by pressing '**M**' until the desired operation is selected (Bluetooth, Aux., USB, Micro SD).
Slide the on/off switch to the 'Off' position to turn off the speaker.

Modes

The speaker must be turned on before using any of the following modes.

Bluetooth Mode

Pairing with a Bluetooth Compatible Device

STEP 1: Once the speaker has been turned on, it will play a tune to signal that it is ready to be paired with a Bluetooth compatible device.

STEP 2: Search for the speaker using a Bluetooth compatible device. Select 'PMK TOWER SPEAKER' to connect and pair. Once a connection has been made, the speaker will play a tune to signal that it is now paired with the Bluetooth compatible device.

[3 MM CAP HEIGHT, KEY LINE BOX]

Note: Once connected, sound can be controlled using either the speaker or the relevant controls on the Bluetooth compatible device.

Making Phone Calls via a Bluetooth Compatible Device

Once the Bluetooth compatible device has been paired with the speaker, phone calls can be made.

STEP 1: Using the Bluetooth compatible device, dial the number to be called and select the Bluetooth/hands-free option. The speaker and its built-in microphone will now act as a hands-free device.

STEP 2: To connect or disconnect a call using the speaker, press 'PLAY/PAUSE/HANDS-FREE'.

STEP 3: The volume of the phone call can be controlled using either the speaker or the Bluetooth compatible device.

STEP 4: To reject an incoming phone call, press and hold 'PLAY/PAUSE/HANDS-FREE' for approx. 2–3 seconds.

Aux. Mode

STEP 1: To use Aux. mode, connect one end of the line-in Aux. cable to the Aux. input port on the speaker and the other end to an MP3 player or other compatible audio source.

STEP 2: If the speaker does not automatically change to Aux. mode, press 'M' until it is selected.

[3 MM CAP HEIGHT, KEY LINE BOX]

Note: Once connected, sound can be controlled using the relevant controls on the compatible audio source.

The speaker cannot be used to skip tracks during Aux. mode.

Micro SD Card/USB Mode

STEP 1: To use micro SD card mode, insert a micro SD card (not included) into the micro SD card slot. The speaker will automatically change to micro SD card mode.

STEP 2: To use USB mode, insert a compatible USB drive into the USB port. The speaker will automatically change to USB mode.

STEP 3: If the speaker does not automatically change to micro SD card or USB mode, press 'M' until the desired operation is selected.

Note: Once connected, sound can be controlled using the speaker.

No USB drive should be inserted whilst using micro SD card mode or vice versa, as this could interfere with playback.

The speaker will only recognise MP3 audio files; if other files are present on the micro SD card or USB drive, this may prevent the speaker from playing.

Troubleshooting

The speaker has no power.

The speaker has run out of charge. Charge the speaker following the instructions in the section entitled 'Charging the Battery'.

The speaker has no sound.

The volume level is set too low. Check that the volume level is set at an audible level and adjust accordingly with the connected device.

The speaker is not paired with a Bluetooth compatible device. Follow the instructions in the section entitled 'Bluetooth Mode'.

The speaker is not connected to a compatible audio source. Follow the instructions in the section entitled 'Aux. Mode'.

Unable to pair a device with the speaker.

The Bluetooth device is not compatible with the speaker. Check that the Bluetooth device is compatible with the speaker and that the Bluetooth function is switched on.

The charge of the speaker depletes quickly.

The volume level is set too high. Excessive use of the speaker at high volumes will drain the battery quickly. Charge the speaker following the instructions in the section entitled 'Charging the Battery' and listen at a lower volume for better results.

The battery may be reaching the end of its service life and the speaker will need to be disposed of. See the section entitled 'Battery Safety'.

Specifications

Product Code: EE2928
Bluetooth Version: 5.0
Wireless Range: Up to 25 m*
Speaker Output: 2 x 3 W
Power Supply: 5 V [DC SYMBOL]
Working Voltage: 3.7 V
Rechargeable Battery: 1200 mAh
Frequency Range: 80 Hz–18 kHz
Operating Frequency: 2.4 GHz
Max RF output: <6 dBm

* Effective range may be reduced due to the presence of obstacles between connected devices.

FCC ID: EE2AAR2EE2928

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

FCC Caution:

"Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

FCC Statement:

"This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."