

105x145MM

us

Woksun

Suitcase Record Player

with Bluetooth and USB Encoding


Model C200



BEFORE USE

1. Choose a safe location and avoid placing the unit in direct sunlight or near any heat source.
2. Avoid locations subject to vibrations, excessive dust, cold or moisture.
3. Do not open the cabinet as this may result in electrical shock. A foreign object inserted or accidentally contacted your dealer.
4. Do not attempt to clean the unit with chemical solvents as this might damage the finishing. A clean, dry cloth is recommended for cleaning.
5. Keep this manual for future reference.

TURNTABLE PARTS

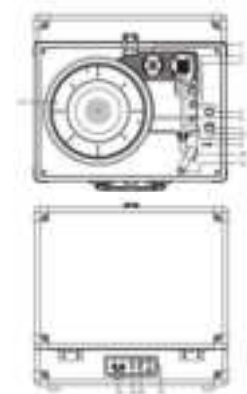

1. 45RPM adaptor
2. Iq lever
3. PRESET/NEXT/Stop/Mode switching (which mode to RPT/ALX/USB when status time more than 1 second)
4. Volume + / switch / volume -
5. Status indicator
6. Headphone port-to connect the adaphone or headphone to enjoy music
7. AUTO-STOP/ON/OFF switch
8. Speed switch
9. Bass arm
10. Bass wheel
11. Cartridge with needle
12. Platter
13. DC Nipck-to connect to the power adaptor
14. USB port
15. Line IN/ALX IN port
16. RCA out port-to connect external speaker system with built-in amplifier

Getting Started

Insert the adapter's AC plug into a power outlet.

Bluetooth Mode

1. Turn on the power switch knob. Device enters into Bluetooth mode automatically (USB, AUX/N ports are not occupied). The status indicator will become blue with flashing.
2. Turn on the Bluetooth function on your mobile phone or tablet PC and search device name VOKREN. After pairing and connection, the indicator will become blue without flashing, then you can play your music from your mobile phone or tablet PC through this turntable player.

Turn the **VOLUME CONTROL KNOB** to adjust the volume. The mobile phone

orbital PC's volume controls also impact the overall volume level. Please adjust that as well if necessary.

PHONO Model

- [illegible]

Press the **PREV/PAUSE/NEXT** button till the status indicator stops flashing when you want to stop the recording. An audio file is created. Then power off the second player and remove the USB drive.

Notice: PHONO mode is the highest precedence, must stop PHONO mode to switch into BT/AUX, USB mode.

USB Playback Mode

Insert your USB drive into the USB port. Device enter into USB mode automatically.

The status indicator will become blue

The USB playback mode is on and it will automatically start to play the audio files in your USB drive. Press the **PREV/PAUSE/NEXT** button to pause or restart the playing.

Switch the PREV/PAUSE/NEXT button to wand: NEXT position for next song, and to wand: the PREV position for previous song.

Line-in Mode

AUX IN mode is precedence after plug in, plug 3.5mm Audio cable, Device enter into AUX IN mode automatically.

You can enjoy the music from iPod, MP3 player, mobile phones etc. through the record player.

Turn the **VOLUME CONTROL** knob to adjust the volume. The iPod, MP3 player, mobile phones' volume controls also impact the overall volume level. Please adjust that as well if necessary.

AMPLIFIER CONNECTION (if required)

What you can listen to your new turntable using the built in speakers you may wish to connect it to your existing Hi-Fi system. Connect the audio plugs to the Line input on your mixer or amplifier using an RCA cable (not supplied).

- Red plug into R/H channel input.
- White plug into L/H channel input.

HOW TO REPLACE THE NEEDLE

To replace the needle, please refer to the instructions below.

1. Place a screwdriver at the tip of the stylus and push downward as shown in direction "A".
2. Remove the stylus by pulling the stylus forward and pushing downward installing the Stylus.

direction "B"

2. Push the stylus upward as in direction "C" until the stylus locks into the tip position.



NOTES

We advise you to clean your records with an anti-static cloth to gain maximum enjoyment from them.

We would also point out that for the same reason your stylus should be replaced periodically (approximately every 250 playback hours).

TIPS FOR BETTER TURNTABLE PERFORMANCE

1. When opening or closing the tumbler cover, handle it gently, gripping it either at the centre or at each side.
2. Do not touch the needle tip with your fingers; avoid bumping the needle against the tumbler platform or cord edge.
3. Frequently clean the needle tip—use a soft brush in a “back-to-front” motion only.
4. If you must use a needle cleaning dish, use very sparingly.
5. Gently wipe the tumbler plunger using with a soft cloth. Use only a small amount of mild detergent to clean the tumbler plunger.
6. Never apply harsh chemicals or solvents to any part of the tumbler system.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.