


Chromeo - Wireless Earbuds and Wireless Charger Case

Instruction Manual

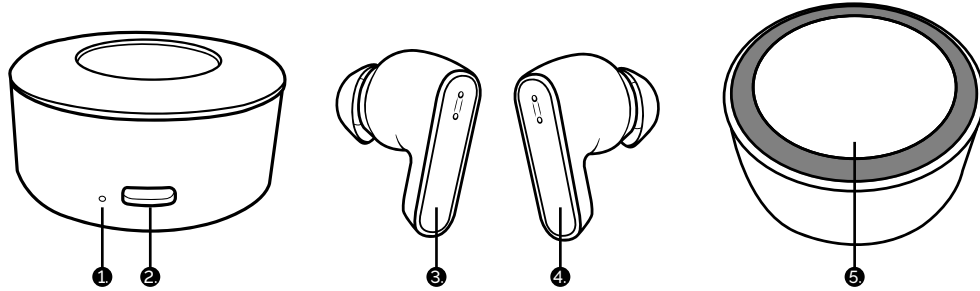

Product Overview:

1. Charging case indicator light
2. USB-C Input port
3. Left earbud touch button
4. Right earbud touch button
5. Magnetic Wireless phone charger

Specs:

Battery Capacity: 40mAh*2 & 250 mAh
Wireless Charger Output: 15W max
USB-C Input 5V/1A
Total Play Time: Approx. 6H
Material: Aluminum, ABS

Operating Instructions:

- **Power On:** Remove the earbuds from the charging case, this will automatically turn on the earbuds. Or long-press the touch button (3 or 4 in the diagram above) for 3 seconds. If there is no wireless connection between the earbuds and your listening device within 5 minutes, the earbuds will automatically shut off.
- **Power Off:** Place the earbuds back in the charging case or long-press the touch button (3 or 4 in the diagram above) for 3 seconds.
- **Pairing:** To pair the Chromeo earbuds with your listening device, select "Chromeo" from your listening devices list of available pairing devices. Once successfully connected, the earbuds will automatically connect to your listening device for future use.
- **Play/Pause:** When playing music, press the earbud touch button once on the left or right earbud.
- **Incoming Call Function:** Single press the touch button of the left or right earbud to answer the call. Single press the touch button to hang up. Long press (approx. 2 seconds) touch button to reject the incoming call. Double press the touch button to redial the last call.
- **Next Track:** Long press (approx. 2 seconds) the left earbud touch button.
- **Previous Track:** Long press (approx. 2 seconds) the right earbud touch button.
- **Phone's Voice Assistant:** Triple press the left or right earbud touch button.
- **Charging the Earbuds:** Place the earbuds in the corresponding slots of the charging case. The light on the earbuds will remain on to indicate that they are charging. The light will turn off when the earbuds are fully charged.
- **Charging the Case:** Connect the included charging cable with the USB-C end to the port (2) on the bottom of the charging case and the USB-A end to an appropriate power source. When charging, the white indicator light on the charging case will flash. The light will stop flashing but will remain illuminated when the case is fully charged.
- **Low Power Indicator:** Earbuds will play a warning tone every 60 seconds and the white indicator light will flash every few seconds.

Wireless Charging

- Connect the included charging cable with the USB-C end to the port (2) on the bottom of the charging case and the USB-A end to an appropriate power source. The earbud case can now function as a magnetic wireless charger for compatible devices. Indicator light will turn red to show that wireless charger is active once connected to a compatible wireless charging device.
- Indicator light will *flash* red if metal or foreign object is disrupting the wireless charge.

Troubleshooting

- Make sure your device is wireless charging compatible.
- Make sure wireless charging earbud case is connected to a suitable power source.
- Make sure your device is positioned properly on the charging pad.
- Remove your device's protective case. This could block a wireless charging signal.
- Your device may charge more slowly with the charging pad than with a charging cable. This is normal.

Important Safety Instructions:

- Do not drop, apply excessive force, or puncture the charging case or earbuds.
- Do not attempt to repair, disassemble, or modify any component of this product in any way.
- Keep the earbuds and case away from any extreme temperature or humidity.
- Charge this product only with the charging cable provided.
- To avoid hearing damage, do not listen at high volume levels for long periods.
- Keep case, earbuds, and charging cable away from small children.
- Use of earbuds while operating a vehicle is not recommended. Check and obey all applicable laws and regulations on the use of earphones while operating a vehicle.

FCC Compliance:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2025 Fourty Four Group, LLC, d/b/a Origaudio
HPG Brands
1770 S 5350 W STE 100 Salt Lake City, UT 84104 USA
(801) 727 - 1400
www.hpgbrands.com/origaudio

Origaudio™