AirFly Pro ---> AirPods


AirFly Pro --- Wireless Headphones



AirFly Pro owner's guide





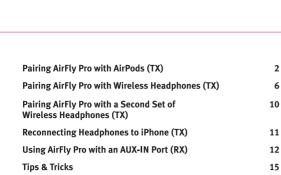


* If AirFly does not flash amber and white press the Reset button on the right side to


reset to factory settings.


128克双铜纸双面4C印刷


SIZE:85X63MM


中间打一颗钉

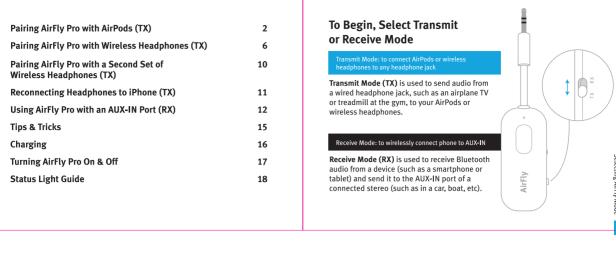


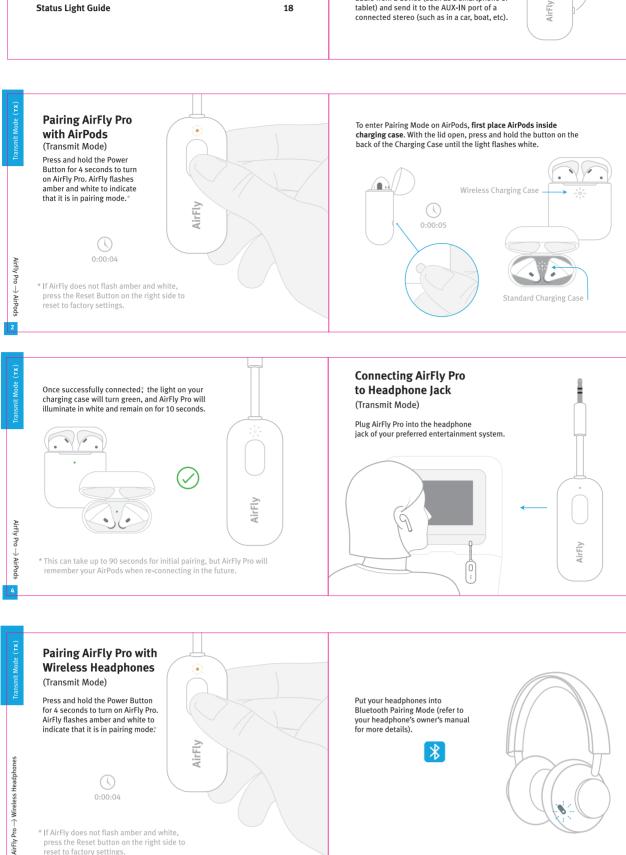


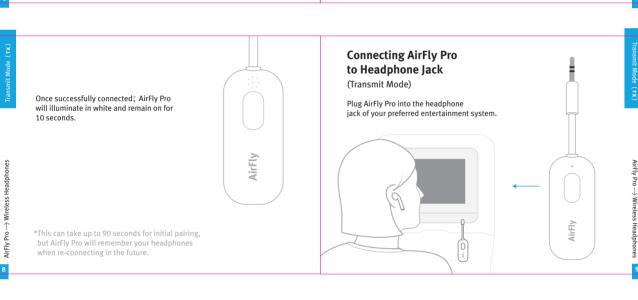

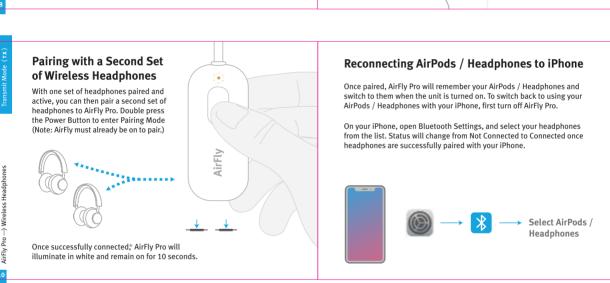

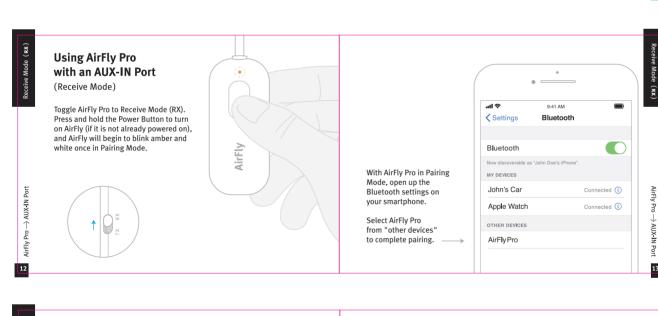

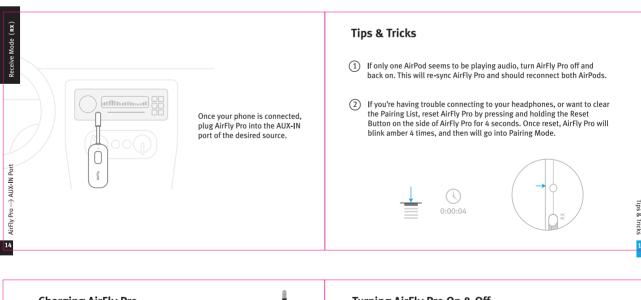

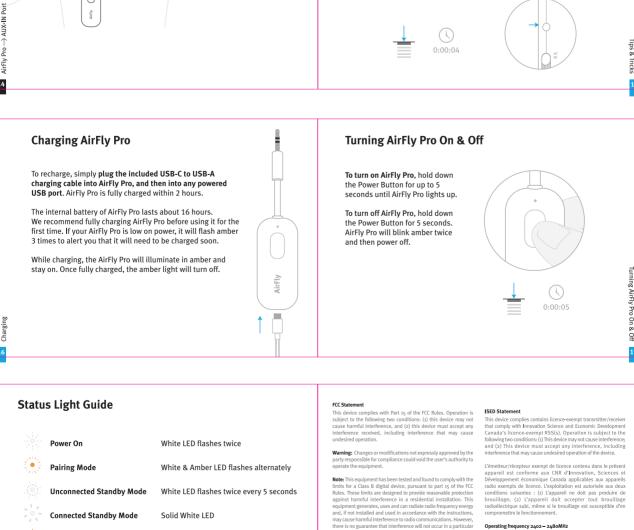

Low Power

Charging


Fully Charged

Status Light Guide

Amber LED flashes 3 times

Solid Amber

Amber LED turns off

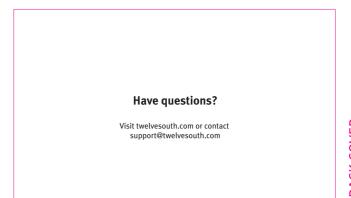

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Transmission power: -1.9dBm e.i.r.p. (for AirFly Pro)