### **SOV41**

### Basic Manual

#### ■ Online Manual (Japanese)

Check "Online Manual" (Japanese) which describes detail explanations on various functions on the product from the following procedure

In the Home screen, slide the screen up ▶「お客さまサポート (Customer support)] ▶ [取扱説明書 (Online Manual)] (Japanese)



https://www.au.com/online-manual/sov41/ (Japanese)

In this manual, the contents on Android 9 are provided.

For the latest edition, refer to "Online Manual" (Japanese) or "取扱説明書(詳細版)(Full Instruction Manual)" (Japanese) available on the au homepage

https://www.au.com/support/service/mobile/guide/manual/

- \*2 The antenna is built into the main unit. Covering around the antenna by your hand may affect the quality of call/ communication.
- \*3 The back cover is not removable. Removing forcibly might cause damage or a malfunction. Also, battery is built into the main unit and not removable by customers.

### FCC ID

#### To view the regulatory compliance mark

 Find and tap [Settings] ▶ [System] ▶ [Certificates] Regulatory compliance mark such as FCC ID is displayed on the screen.

#### **Notification LED**

The Notification LED prompts charging, or informs battery level while charging, missed calls, new mails, etc. by turning on or flashing.

LED Status	Description		
Red	The battery is charging when the remaining battery level is 14% or lower.		
Orange	The battery is charging when the remaining battery level is 15% - 89%.		
Green	The battery is charging when the remaining battery level is 90% or higher.		
Flashing red	The remaining battery level is 14% or lower.		
Flashing white <sup>*1</sup>	Indicates a missed call, new au-mail, new message, etc.		
*1 Flashes in sleen mode			

of the product lights.

#### $\boldsymbol{2}$ Insert the USB Type-C plug of TypeC Common AC Adapter 02 (sold separately) into the USB Type-C connection terminal of the product straight When charging is started with the product powered on, the start sound for charging sounds and the Notification LED

3 When charging is complete, remove the USB Type-C plug of TypeC Common AC Adapter 02 (sold

separately) from the product 4 Remove the power plug of TypeC Common AC Adapter 02 (sold separately) from the outlet

# **Preface**

 Purchase a specified charger (sold separately). Thank you for buying "Xperia" (simply called "the product" or The battery is built into the product. 'main unit" from here on).

Before using the product, read "Basic Manual" (this manual), "Cautions on using the product" and "Setting Guide" for proper handling

### Packaged items

microSD memory card

· AC adapter

au IC card

in au IC card.

the product.

Nano IC Card 04.

Before your start using the product, make sure that you have all the following packaged items with the product.

• 取扱説明書 (Basic Manual)

ご利用にあたっての注意事項

• 設定ガイド (Setting Guide)

(Japanese)

(Japanese)

Desktop holder

USB Type-C™ cable

The following items are not included in the package.

Your phone number etc. is recorded

Attaching/removing au IC card

1 Remove the tray from the main unit

Before attaching/removing au IC card, make sure to turn off

Put your fingertip (nail) into the groove of the microSD

2 Set au IC card into the tray with the IC (metal) part

Surely set au IC card into the tray not to come off.

Pay attention to the location of the notch.

memory card/au IC card slot and draw the cover straight

The product is compatible with au

■ Attaching au IC card

(Cautions on using the product)

au Nano IC Card 04

■ Online Manual (Japanese) Check "Online Manual" (Japanese) which describes detail • USB Type-C™-3.5 ¢ conversion/

❖Information

explanations on various functions on the product from the TV Antenna cable 01 (03SOHSA) followina procedure In the Home screen, slide the screen up ▶[お客さまサポー

They may be different from actual ones

**About Operating Instructions** 

Handles only basic operations for main features.

ト (Customer support)] ▶ [取扱説明書 (Online Manual)] (Japanese)

Illustrations used in this manual are just images for explanations.

■ "Setting Guide"/"Basic Manual" (this manual)



Also, you can check "Online Manual" (Japanese) on the au

#### https://www.au.com/online-manual/sov41/ (Japanese)

■ "取扱説明書 (Full Instruction Manual)

(Japanese) For detailed descriptions on various functions, refer to the "IV 扱説明書(詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage.

https://www.au.com/support/service/mobile/guide/manual/

# 3 Keep the product horizontal and then push the tray in

Pay attention to the direction the tray is being pushed in. Firmly press where circled O, and check that there is no gap between the main unit and the microSD memory card/ au IC card slot cover.

#### Removing au IC card 1 Remove the tray from the main unit

Put your fingertip (nail) into the groove of the microSD memory card/au IC card slot and draw the cover straight

#### 2 Remove the au IC card from the tray

3 Keep the product horizontal and then push the tray in straight

Pay attention to the direction the tray is being pushed in Firmly press where circled O, and check that there is no gap between the main unit and the microSD memory card/ au IC card slot cover. (▶P.9)

Manual

Download URL:

item, etc.)].

provided.

IC card".

 Note the following points, otherwise handling au IC card may cause malfunction or damage Do not touch the IC (metal) part of au IC card

For Those Requiring an English Instruction

Regarding notations used in this document

buttons on the screen, etc. are indicated as [(name of the

• In this manual, screens and operations for the product with

· Screen illustrations shown in this manual may look different

from the actual screens. In some cases, minor details or a

In this manual, "Basic Manual" (this manual), "Cautions on

(Full instruction manual)" (Japanese) are collectively

• In this manual, explanations for the wallpaper "Black" are

• In this manual, operations in portrait view are described as

a standard. In horizontal view, menu items, icons, buttons

• In this manual, "au Nano IC Card 04" is abbreviated as "au

• In this manual, "microSD™ memory card (commercially

available)", "microSDHC™ memory card (commercially

available)" are abbreviated as "microSD memory card".

available)" and "microSDXC™ memory card (commercially

using the product", "Setting Guide" and "取扱説明書(詳細版)

• In this manual, operations of tapping menu items/icons/

https://www.au.com/english/support/manual/

au Nano IC Card 04 attached are described.

part of a screen may be omitted.

referred to as "Instruction Manual".

on the screen, etc. may differ

- · Insert in the correct direction.
- · Do not use force to attach or remove
- The error message appears when au IC card is not set properly or there is a malfunction in au IC card.
- · Do not lose au IC card when it is removed.
- Do not insert au IC card with conversion adapter attached. Doing so may cause a malfunction.

### Attaching/Removing a microSD memory card

Before attaching/removing microSD memory card, make sure to turn off the product.

#### Attaching a microSD memory card

1 Remove the tray from the main unit Put your fingertip (nail) into the groove of the microSD memory card/au IC card slot and draw the cover straight

#### 2 Set a microSD memory card into the tray with the terminal side facing up

Surely set a microSD memory card into the tray not to

• All of the indicated amounts exclude tax unless otherwise

• Company names and product names referred to in this

manual are trademarks or registered trademarks of

omitted in this manual.

TELEPHONE COMPANY

respective companies. The TM and ® marks may be

• "The Company" as appears in the manual refers to the

Sold by: KDDI CORPORATION, OKINAWA CELLULAR

Manufactured by: Sony Mobile Communications Inc.

# 3 Keep the product horizontal and then push the tray in

Pay attention to the direction the tray is being pushed in. Firmly press where circled O, and check that there is no gap between the main unit and the microSD memory card/ au IC card slot cover

Return to the previous screen. Close the menu

Tap to display the Home screen. Long-touch to

Displayed when the product orientation is

different than the screen orientation. Tap to

change between portrait/horizontal views.

or the Notification panel

activate Google Assistant.

• In the Home screen or a screen in which an app is being

used swipe (flick) the key icon display area up for a list of

thumbnails of recently used apps where you can activate/

The display of the product is a touch panel operated by


Tap: Gently touch the screen and then immediately release your finger. Double-tap: Touch the same position twice.

While your finger is gently touching the screen, trace it to the

Operate the screen by quickly moving (flicking) your finger

## **Getting Ready**

### Names and functions of parts

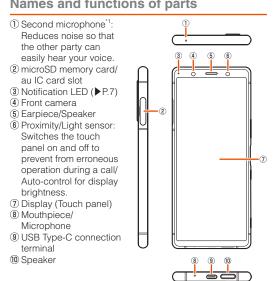

### 10 Volume key/Zoom key 12 Fingerprint sensor

# 13 Power key/Screen lock

- (14) Camera kev
- Built-in antenna<sup>\*</sup> 6 Flash/Photo light
- 17 Laser AF sensor: Detects distance from an object when shooting to focus the camera on automatically. RGBC-IR sensor Detects element of
- shooting environment to adjust white balance automatically when shooting.

lighting source of

- 18 Built-in antenna/ Wi-Fi®antenna\* (19) Camera lens
- 20 mark (a) Wi-Fi®/GPS/
- Bluetooth®antenna\*
- 22 au IC card 23 Wi-Fi®antenna
- (24) Back cover
- \*1 Do not jab with a sharp object such as a needle. Doing so may

When you purchase your product, the internal battery is not fully charged. Charge the battery before use.

- lights according to the battery level. To check the battery level, see the status bar in the top of the screen, or in the Home screen, slide the screen up ▶ [Settings] ▶ [Battery]
- launches indicating the charging status but operations are not available. Thus, do not charge the product in a place
- PC or while using the camera function.
- Charging with the AC Adapter

Charging with connecting TypeC Common AC Adapter 02 (sold separately) is explained.

1 Insert the power plug of TypeC Common AC Adapter 02 (sold separately) into an outlet

# Connecting headphones or earphones

To hear sound from commercially available headphones or earphones, connect the supplied USB Type-C™-3.5 Φ conversion/TV Antenna cable 01.

- 1 Insert the plug on the commercially available headphones or earphones in the headset socket on the USB Type-C™-3.5 ¢ conversion/TV Antenna cable 01
- **2** Insert the USB Type-C plug of USB Type-C<sup>TM</sup>-3.5  $\phi$ conversion/TV Antenna cable 01 to the USB Type-C connection terminal of the product

### Turning the power on/off

■ Turning the power on

1 Press and hold Power key until the product vibrates

The lock screen appears. When "ようこそ (Welcome)" appears after the product is powered on, follow the onscreen instructions to set the

For details on the initial settings, refer to "Setting Guide" supplied with the product.

2 Swipe (flick) the screen up ■ Turning the power off

1 Press and hold Power key (over one sec.)

2 [Power off]

14

#### ❖Information

• To restart the product in safe mode (start with almost default state), press and hold Power key (over one sec.) Long-touch "Power off" ▶ [OK].

1 Press and hold Power key and the upper part of the volume key at the same time for approximately nine seconds, and release your fingers after the product

Changing the language to English

English after the initial settings.

15

You can change the display language from Japanese to

In the Home screen, slide the screen up ▶[設定 (Settings)] ▶

[システム (System)]▶[言語と入力 (Languages & input)]▶

[言語 (Languages)] ▶[言語を追加 (Add a language)] and

select "English" ▶ "United States", and then drag 

of

"English (United States)" up to the top in the language list.

Locking the screen

Forcedly turning the power off

vibrates three times consecutively

# Locking the screen/Unlocking screen lock

Turn off the screen to set sleep mode to prevent the touch

#### 1 While the screen is displayed, press Power key

Unlocking screen lock

The lock screen appears when turning the power on or sleep mode is canceled by pressing Power key. • While Ambient display (which allows you to check date &

time or notifications in sleep mode) is activated, double-tap the screen or press Power key to display the lock screen.

# ❖Information

Google Assistant or Camera.

### Key icons



rotation

❖Information

exit apps, etc.

Using the touch panel

Keep touching an item with your finger.

desired direction to move over.

touching it with your finger.

■ Tap/Double-tap

Long-touch

Swipe (flick)

up/down/left/right.

Slide

1


panel or key from operating mistakenly or lock the screen.

# 1 On the lock screen, swipe (flick) the screen up

• In the lock screen, swipe (flick) " U " or " T to use

# Basic Operation

Operations for key icons at the bottom of the screen are as

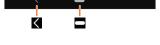

#### Inserting forcedly could result in removal failure or may cause damage the card.

Pinch

Drag

to move.

1 Remove the tray from the main unit Put your fingertip (nail) into the groove of the microSD memory card/au IC card slot and draw the cover straight

■ Removing a microSD memory card

• Do not touch the terminal of the microSD memory card.

• Insert a microSD memory card in the appropriate direction.

### 2 Remove the microSD memory card from the tray

### 3 Keep the product horizontal and then push the tray in straight

Pay attention to the direction the tray is being pushed in. Firmly press where circled O, and check that there is no gap between the main unit and the microSD memory card/ au IC card slot cover. (▶P.11)

# • When charging starts, the Notification LED of the product


• If you start charging with the product turned off, a screen

- where the use is prohibited. The charging time may take longer when charging with a

### Using Side sense

of the screen

Side sense is a function which supports operations of the product by one-hand. You can operate it with the side edge

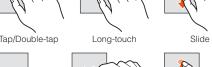

Touch the screen with two fingers and widen (pinch-out) or

Keep touching an item or icon, trace it to the desired direction

narrow (pinch-in) the fingers' distance.



#### • Slide the side edge of the screen down to go back (return to the previous screen)

• Slide the side edge of the screen up to display the multiwindow menu.

Double-tap the side edge of the screen to display the Side

sense menu which allows you to activate app or turn on/off

# Displaying the menu

Swine (Flick)

18

To display the menu; tap the menu icon (  $\blacksquare$  or  $\blacksquare$  ), or long touch the input field or item.

Pinch

• Depending on application/function, color or shape of menu icon, or menu display may differ.

# Drag

19

### Home screen

#### the Home screen anytime. Widgets ② Shortcuts (Apps)

Home screen consists of multiple pages. Tap " to return to

12:34

- Long-touch it to display the shortcut menu. You can perform the specified operation <sup>1</sup> or check the app information. When is displayed, long-touch and drag it where to add an operation shortcut to
- the Home screen. (3) Dock
- Shortcuts (apps) or folder can displayed even when the page (3) G 😸 🧿 🙆 🛇 of the Home screen is switched.
- ⑤ Folders (Google, 基本機能 (Basic functions)) Several shortcuts (apps) are stored.
- Search for apps, contacts, etc., or search with words/

on the shortcut (app) or folder.

### **Using the Apps screen**

In the Apps screen, apps which are installed to the product are displayed. Tap the icon to activate the app.

You may incur communication charges depending on the

### ■ Starting an app

1 In the Home screen, slide the screen up

2 Tap an app icon to use Some apps are stored in a folder.

Support)

Phone

3 Call ▶ [♣]

the product

key while calling.

2 [ of call history

procedure from the product.

automatically when dialing.

Making a call

■ Direct input calling

1 From the Home screen, [♠] ▶[⊕]

code even when you stay in the same city.

1 From the Home screen, [♠] ► Tap "♥" tab

■ Calling overseas from au mobile phones (au

Example: To call to "212-123-XXXX" in the United States from

You can make international calls without any special

1 Dialpad screen ▶Enter the international access

Touch and hold "0" to enter "+" which adds "010"

2 Enter the country code of the United States

To make a call to a land-line phone, enter from the city

To adjust the in-coming volume (volume of the other party's

voice), press the upper part or lower part of the volume

2 Enter a phone number ▶[⊘]

■ Calling from call history

International Call Service)

	Main apps		
<u></u>	Phone	(D)	Play Store
1	Contacts	•	Camera
	au-mail		Album
0	+メッセージ(SMS)	<b>?</b>	Maps
	(+Message(SMS))	G	Google
9	Chrome	M	Gmail
0	Settings	<b>(</b>	取扱説明書 (Online
<u></u>	Calendar		Manual) (Japanese)
<b>(%)</b>	故障紛失サポート (Repair and Delivery		

or information of the product for the first time, a confirmation screen for requesting access permission appears. If such confirmation screen appears, confirm the content and tap "DFNY"/"ALLOW"

When you activate an app/function that access the functions

Setting app permission

- If you do not permit, app/function may not be activated or use of function may be restricted.
- For some apps/functions, an explanation screen for the permission may appear. Several request screens may

appear or the screen content may differ. Confirm each

content and follow the onscreen instructions

• In this manual, description of the confirmation screen may be omitted.

### Knowing the status of the product

#### Status bar

You can check the status of the product with the icons displayed on the status bar at the top of the screen. On the left of the status bar, the notification icons appear to inform new mails, operations in progress, etc., and on the right, the status icons appear to indicate signal status, battery level,



# 3 Enter the city code "212"

If the area code starts with "0", omit the "0". However, there are exceptions such as Italy.

4 Enter the phone number of the other party "123XXXX"

### Receiving a call

### ■ When the screen is OFF or on the lock screen

1 Incoming call screen ▶ Swipe (flick) "⊘" up To reject the incoming call, swipe (flick) " own To answer with Answering Machine, swipe (flick) "00"

#### 2 Call ▶ [ 🌄 ]

■ When the screen is ON (except on the lock screen)

#### 1 In the displayed notification, [ANSWER] To reject an incoming call, tap "DECLINE

To answer with Answering Machine, tap the top part of the notification ▶ Swipe (flick) " ou".

## 2 Call ▶ [🏖]

#### Making a call from Contacts

- 1 In the Home screen, slide the screen up ▶ [Contacts]
- 2 Tap a contact to call

#### 3 Tap [ / ]/phone number

# Appendix

### **Updating Software**

Examples of notification icons

New PC mail message

New Gmail message

New au-mail message

New +Message/new SMS

Wi-Fi® open network available

Battery level (100%, Charging)

Silent mode (vibrate) is set

Airplane mode is activated

appears on the screen for both networks

Wi-Fi® is connected

Silent mode (no vibrate) is set

Incoming call/dialing call/calling

USB device is connected/Moisture is detected on

the USB Type-C connection terminal

Signal level (Level 4<sup>\*1</sup>, Out of service area)

GSM/UMTS/LTE network roaming is ON

appears in the right of the icon during communication

The company determines which network is less busy

depending on the condition of the line to connect.

Two types of network, "LTE" and "WiMAX 2+" can be used. "4G"

4G (LTE/WiMAX 2+) data communication status\*2

Missed call

■ Main status icons

You can update the product to the most recent software for optimal performance and to get the latest enhancements.

You are charged for the data communication when accessing the Internet from the product via data communication. A large amount of data communication is required especially for upgrading the software (OS upgrading). Using Wi-Fi® connection is recommended.

- You are recommended to back up your data before updating software
- For details, visit https://www.sonymobile.co.jp/support/ (Japanese) or refer to the Online Manual or "取扱説明書(詳 細版) (Full instruction manual)" (Japanese) available on au homepage.
- **■** Downloading and updating software The update software can be downloaded from the product directly via Internet
- Note that when Wi-Fi® communication becomes unstable, data communication takes the place automatically, which may incur communication charges.
- 1 In the Home screen, slide the screen up ▶ [Settings] ▶ [System] ▶ [Advanced] ▶ [Software update]

### 2 [ : 1 ▶ [Refresh]

After that, follow the onscreen instructions

Accessories can be purchased from the au Online Shop.

Main unit		
Display		Approx. 6.5 inches Organic EL (HDR-capable), Approx. 16.77 million colors
		1,644 x 3,840 dots
Weight		Approx. 178 g
Dimension (W x H x T)		Approx. 68 mm x 158 mm x 8.2 mm (9.0 mm where thickest)
Internal memory		ROM: Approx. 64 GB RAM: Approx. 6 GB
Camera pixels		Camera: Effective pixels Approx. 12.2 million pixels / 12.2 million pixels / 12.2 million pixels Front camera: Effective pixels Approx. 8 million pixels
Continuous call time	In Japan	Approx. 1,930 min.
	Overseas (GSM)	Approx. 620 min.
Continuous stand-by time	In Japan	Approx. 470 hours
	Overseas (GSM)	Approx. 490 hours

# check the contents of notifications or start corresponding Slide the status bar down with two fingers or slide the

If any notification icons are displayed on the status bar, slide

down the status bar to open the Notification panel. You can

■ Notification panel

Notification panel down to display the quick setting panel. You can set on/off of the functions.



**Troubleshooting** 

Delivery Support)" app.

homepage.

32

38

manual/ (Japanese)

- To delete a notification, swipe (flick) the notification left or right. However, some notifications may not be deleted.
- To close the Notification panel/quick setting panel, tap " " or slide the Notification panel/quick setting panel up.

Before you assume that the product is malfunctioning.

■ クイック診断 (Quick diagnosis)

■ トラブル診断 (Diagnosis for trouble)

ブル診断を試す (Go to Diagnosis for trouble)]

https://www.au.com/trouble-check/ (Japanese)

Or you can visit the following au homepage

perform "クイック診断 (Quick diagnosis)" or "トラブル診断

(Diagnosis for trouble)" in "故障紛失サポート (Repair and

In the Home screen, slide the screen up ▶[お客さまサポー

ト (Customer support)] ▶ [故障紛失サポート (Repair and

Delivery Support)]▶[クイック診断してみる (Go to Quick

In the Home screen, slide the screen up ▶ 「お客さまサポー

Delivery Support)]▶[便利な機能 (Useful functions)]▶[トラ

ト (Customer support)] ▶ [故障紛失サポート (Repair and

Also refer to "故障とお考えになる前に" (troubleshooting) ir

https://www.au.com/online-manual/sov41/ (Japanese)

https://www.au.com/support/service/mobile/guide/

Instruction Manual)" (Japanese) available on the au

the "Online Manual" (Japanese) or "取扱説明書(詳細版)(Full

**Setting Airplane mode** 

music, etc. are not muted.

Setting silent mode

Setting silent mode (vibrate)

The volume adjusting bar appears.

The volume adjusting bar appears.

notification volume, Alarm volume, etc.

2 [♠]▶[••]

❖Information

Setting the silent mode (no vibrate)

1 Press the upper or lower part of the volume key

1 Press the upper or lower part of the volume key

he icon on the volume adjusting bar changes to 🕕

The icon on the volume adjusting bar changes to

• Even in silent mode, sounds for shutter, shooting start/end

sound when shooting videos, alarm, playback of video, or

Adjusting sound volume with "Ring and notification volume"

up/down to adjust volume of media sound. Also, tap " to

of "Sound" setting in silent mode cancels silent mode.

• Press Volume key and then drag the volume adjusting bar

display "Sound" setting where you can change Ring and

When the airplane mode is set, all wireless functions (phone. packet communication, Wi-Fi® function, Bluetooth® function) are turned off.

1 In the Home screen, slide the screen up ▶ [Settings] ▶ [Network & internet]

After-sales service When asking for repair

For repair, contact Repair and Delivery Support Center.

**During the** Repairs will be done based on the terms of services of the free-of-charge repair warranty period

Outside the | We shall repair the product for a charge as requested by the customer if repair renders it period usable.

The warranty period is one year from the date you purchased the product

#### ❖Information

- Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
- Recycled parts that meet the Company's quality standards are sometimes used for repair.
- Your old au terminal collected by replacement mobile phone delivery service is serviced for reuse and recycled as a replacement terminal. Also, parts replaced through au after-sales service are collected and recycled by KDDI. They cannot returned to customers.
- The product which is processed, remodeled, analyzed (including by modifying or analyzing the software (including by rooting etc.), reverse engineering, decompiling), or repaired by an unauthorized repair office is not covered by the warranty and repair may be refused.

#### \*1 Varies by obstruction between communication devices or radio wave reception status. \*2 It is a specification according to purpose of use of Bluetooth®

- device and is defined by Bluetooth® standard. \*3 Some contacts data may not be displayed correctly on the
- other party's device.
- \*4 Supported to some car navigation systems. For use, refer to the au homepage.

#### ❖Information

• The continuous call time, continuous stand-by time, continuous Full Seg watching time, continuous 1Seg watching time and continuous tethering time may drop to less than half depending on the battery charging status, usage environment such as temperature, reception condition at the location where the product is used, and the function settings

■ USB Type-C<sup>TM</sup>-3.5 ¢ conversion/TV Antenna cable 01

Size	Length Approx. 117 mm
Weight	Approx. 5 g

# SONY®

❖Information

sliding with Side sense.

• Tap "□" or "<

• To exit the Side sense menu, operate as follows.

When you cannot operate the Side sense function correctly

[Display] ▶ [Advanced] ▶ [Side sense], and then change the

in the Home screen, slide the screen up ▶[Settings]▶

Side sense operation settings with "Sensor sensitivity".

Tap the outside of the Side sense menu

• Double-tap the side edge of the screen

"Configure touch position", or "Gestures".

2 Tap " of "Airplane mode" to turn to

Alternatively, tap "Airplane mode" in the quick setting panel

Bluetooth® on. When using aboard an airplane, in a hospital,

You can check the phone number of the product in "About

Alternatively, in the Home screen, slide the screen up

[Contacts] ▶[≡] ▶[My info] to check your phone number.

Use the software keyboard (keyboard on the screen) to enter

The software keyboard appears when you tap the entry field

With "Gboard", which is default when the language is set to English, you can use QWERTY keyboard to enter characters,

Numeric keypad to enter numbers and symbols, and Symbol

0077-7-111

0077-7-113

Free Car 0120-925-919

for registering a contact, composing a mail, etc.

For inquiries, call: Customer Service Center

Using the software keyboard

Even when airplane mode is on, you can set Wi-Fi® or

etc., follow the instructions of the airline or institution.

Checking own phone number

appears in the status bar.

( ▶P.26) to turn to on/off.

❖Information

phone" field.

characters

**Entering characters** 

keypad for more symbols.

For general information (toll free

157 without area code

For loss or theft (toll free)

Business hours: 24 hours live support

se above numbers are not available (to

Repair and Delivery Support Center

Business hours 9:00-20:00 (7 days a week)

For theft, loss, or malfunction (toll free) au mobile

**£** 0120-977-033 (except Okinawa) **£** 0120-977-699 (Okinawa)

Business hours 9:00-20:00 (7 days a week

# • In the Side sense menu, tap [ ] ▶ [TRY SIDE SENSE TUTORIAL] where you can practice double-tapping and

be located. They are always Wallpapers

6 Quick search box phrases entered in the "Google" app.

When an app has notification, a dot or number may appear

# SDFGHJK ZXCVBNM

- Keyboard menu
- 2 Display the search bar
- 3 Switch between all lower case and sentence case/ double-tap for all upper case 1 In the Home screen, slide the screen up ▶ [Settings] ▶
  - Toggle entry modes
  - Enter a comma
  - 6 Input emoticon, etc 7) Voice input
  - (8) Delete character 9) Enter a line feed
  - 10 Enter a period

# 11) Enter a space

- Tap "\underset" at the bottom left of the screen to hide the software
- To enter a character variant, touch and hold a key to show a list of available options, and then select from the list.
- To enter a full stop, double-tap the space key after you enter a word. • To use the glide typing, slide your finger from a character to

# character on the keyboard to trace the word you want to write. and then lift up your finger when finishing entering the word.

# • The battery built-into the main unit is not covered by

defects of battery material or the production. • The accessories excluding the main unit is not covered by free-of-charge repair warranty.

### Performance parts for repair

The Company retains performance parts for repair of the Xperia main unit and its peripherals for four years after discontinuation of production. "Performance parts for repair" refers to parts required for maintaining the functions of the product.

### Provisions for free-of-charge repair

- 1. Please notify us of the production number (IMEI number) for repair request. The production number (IMEI number) can be checked on the product main unit, sticker on the outer packaging box etc.
- . During the warranty period, we will repair the product free of charge for the malfunction under the condition that it is used correctly in line with the directions given in the instruction manual.
- . Even if the warranty period has not expired, a fee will be charged for repair under the following circumstances. (or, repair may not be possible).
- ① The product has not been used correctly in line with the directions given in the instruction manual. 2 The malfunction or damage is due to unauthorized
- ③ The product has been repaired other than at our specified repair offices.

repair or modification of the product.

4) The malfunction or damage is due to negligence in use or handling, or due to an accident. There are signs of the product having been dropped, wet, exposed to humidity, etc.

- ⑤ The malfunction or damage is due to natural disasters (earthquakes, storm or flood damage, etc.), fire, salt free-of-charge repair warranty excluding events arising from damage, abnormal voltage, etc. 4. Repair may not be possible depending on the degree of
  - damage. 5. The Company shall have no liability for any damage or loss
  - resulting from the malfunction of the product. 6. The Company shall not bear any responsibility for accidents resulting from use of the product having been connected to unspecified devices.
  - 7. Do not accept requests for service calls to the owner's home, place of business, etc.
  - . This warranty is valid only in Japan. \* This warranty guarantees repair free of charge during the period and under the conditions specified on this warranty card. Thus this warranty does not limit the legal rights of the owner with respect to the issuer of this warranty card (the guarantor) or any other business person or enterprise.

# ■ Repair and Delivery Support

An after-sales service membership program on a monthly basis called "Repair and Delivery Support" is available for using your au terminal for a long time without worries. This service expands coverage for many troubles including malfunction, theft and loss. For monthly charge and details of the service, refer to au homepage.

### https://www.au.com/mobile/service/kosho-funshitsu/ (Japanese)

until you purchase an au terminal next time.

 You can apply for the membership only at the time of purchasing your au terminal. • Once you cancel the membership, you cannot reapply for it

- Note that when changing the model or purchasing an extra terminal, this service only covers the most recently purchased au terminal
- When an au mobile phone is handed over to you or someone else, the "Repair and Delivery Support" membership is also handed over to the successor of the When you get a new au terminal by changing the model or
- purchasing an extra terminal, the "Repair and Delivery Support" membership for the old au terminal is automatically canceled. Service contents are subject to change without notice.

### au IC card

The au IC card is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When a malfunction is suspected, or in case of theft or loss, contact an au shop or Toyota store.

# Peripheral devices

- Sony Mobile Desktop Holder 02 (02SOPUA) (sold
- separately)\* TypeC Common AC Adapter 01 (0601PQA) (sold separately)
- TypeC Common AC Adapter 02 (0602PQA) (sold separately) Common AC Adapter 05 (0501PWA) (sold separately)<sup>2</sup> Common DC Adapter 03 (0301PEA) (sold separately)
- Micro-B Type-C Adapter (0601PHA) (sold separately) \*1 Use the Attachment 52B
- \*2 For use, Micro-B Type-C Adapter (sold separately) is needed.

https://onlineshop.au.com/ (Japanese)

# Main specifications

		Approx. 16.77 million colors
		1,644 x 3,840 dots
Weight		Approx. 178 g
Dimension (W x H x T)		Approx. 68 mm x 158 mm x 8.2 mm (9.0 mm where thickest)
Internal memory		ROM: Approx. 64 GB RAM: Approx. 6 GB
Camera pixels		Camera: Effective pixels Approx. 12.2 million pixels / 12.2 million pixels / 12.2 million pixels Front camera: Effective pixels Approx. 8 million pixels
Continuous call time	In Japan	Approx. 1,930 min.
	Overseas (GSM)	Approx. 620 min.
Continuous stand-by	In Japan	Approx. 470 hours
	Overseas	Approx. 490 hours

Adapter 01 (sold separately): Approx. 170 min. Using TypeC Common AC Adapter 02 (sold separately): Approx. 130 min. Continuous Full Seg Approx. 8 hours 20 min watching time Continuous 1Seg Approx. 9 hours 0 min. vatching time

Using TypeC Common AC

Continuous tethering Approx. 670 min. Wi-Fi® tethering number Bluetooth® Communication Compliant with Bluetooth® function standard Ver.5.0 type Output Compliant with Bluetooth®

standard Power Class 1 Communication | Within 10 m with good visibility coverage HSP HEP PRAP\*3 A2DP ant-X Supported AVRCP SPP OPP HID HOGE

profile\* MAP, DUN\*4, GATT, PAN-NAP, PANU 2.4 GHz band (2,400 MHz -

2,483.5 MHz) frequency

39